


KitchenAid®

Mixer

MODELS:

5KSM195PSABM6 (Black Matte)


COLOR VARIATION PARTS

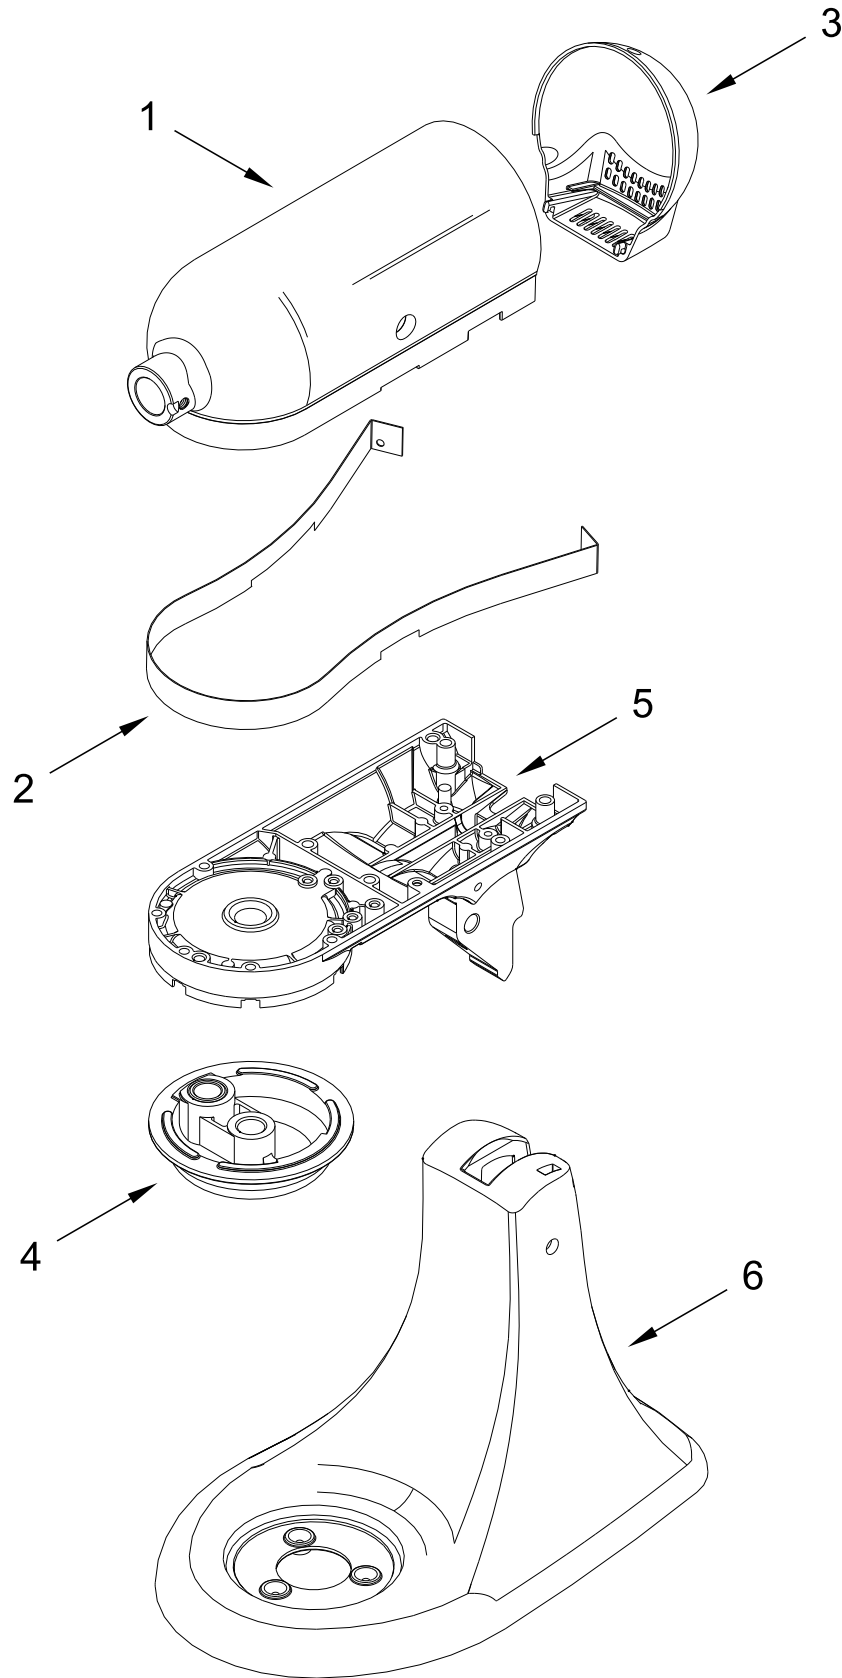

COLOR VARIATION PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11601739	Motor Housing (Black Matte)	3	W10885707	End Cover (Black Matte)	5	W10885699	Lower Gearcase (Black Matte)
2	W11433197	Trim Band (Dark Platinum)	4	W10885706	Planetary (Black Matte)	6	W11185575	Pedestal with Feet and Headlock (Black Matte)


BASE AND PEDESTAL UNIT PARTS

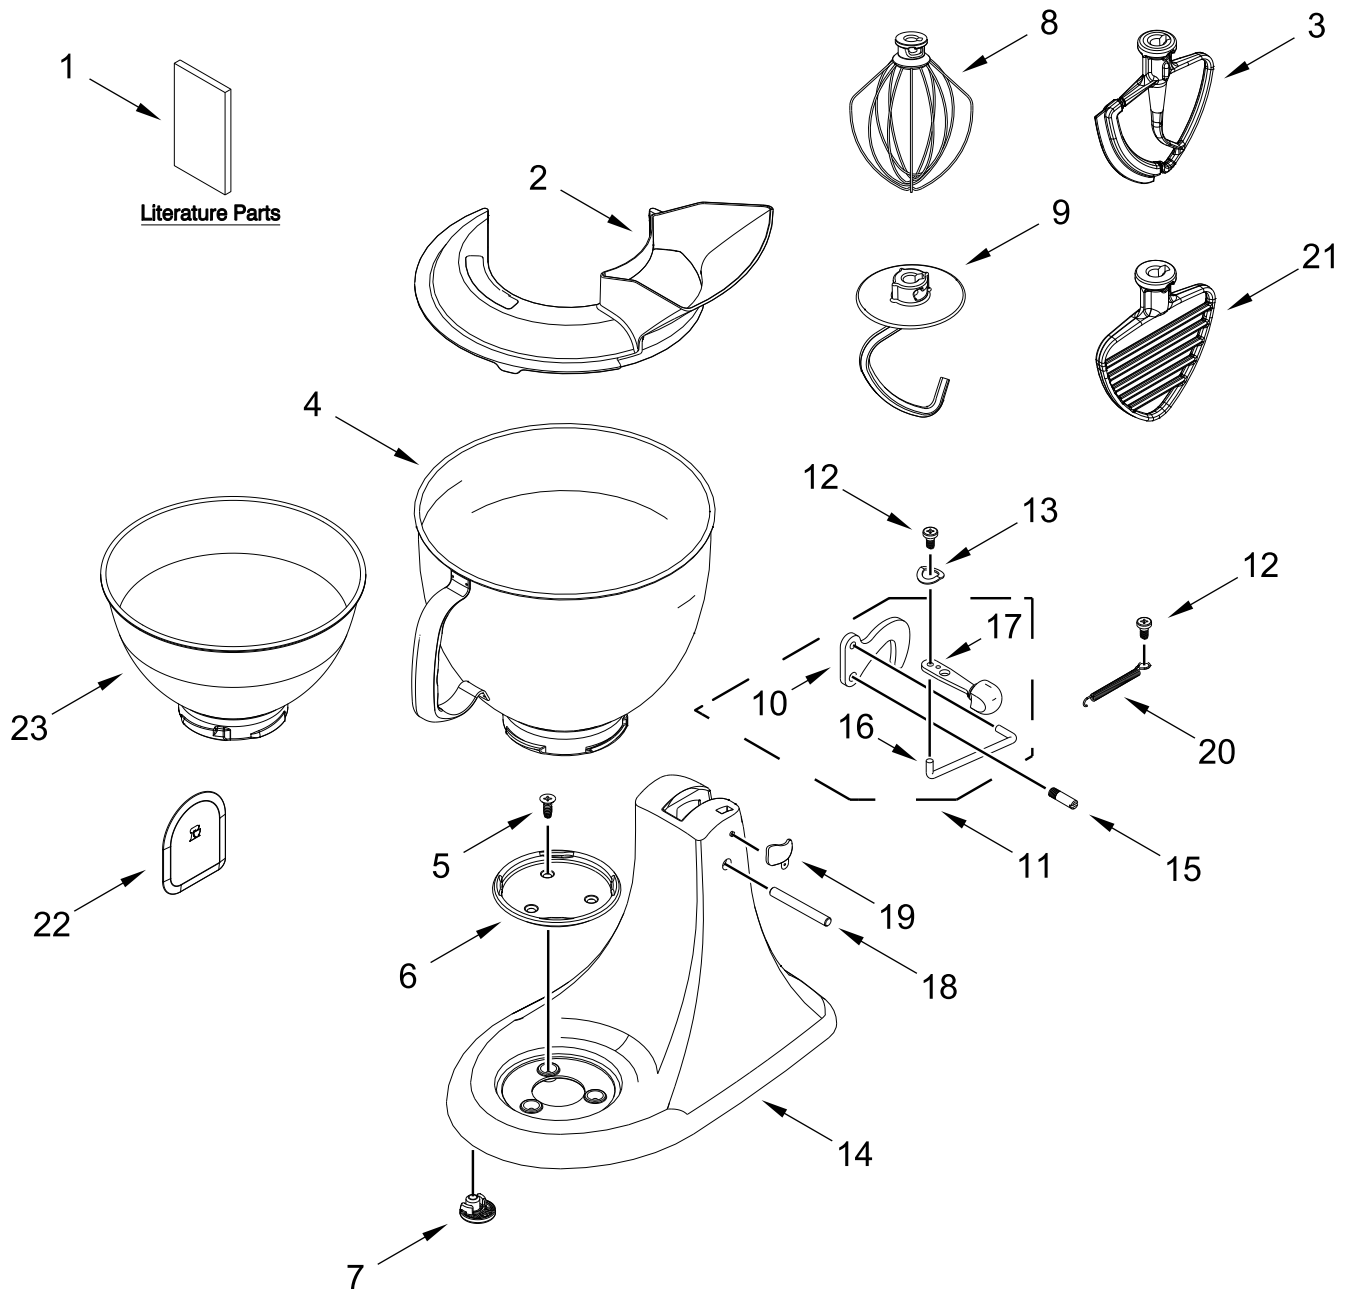

BASE AND PEDESTAL UNIT PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	10	9709055	Latch	18	16910	Pin, Hinge
	W11556021	Use & Care Guide	11	W10471368	Latch, Link Assembly (Chrome)	19	3184264	Headlock, Snap (Black)
2	W11385618	Shield, Pouring				20	W10509949	Spring, Lock Lever
3	W11555365	Beater, Wiping (Silent Silver)	12	110679	Screw	21	W11555366	Beater, Pastry (Silent Silver)
4	W11203341	Bowl, 5 Qt.	13	116241	Washer, Spring	22	W11550306	Scraper, Pot (Nylon)
5	3400020	Screw	14		Pedestal (Refer to Color Variation Parts Page)	23	W10713675	Bowl (3 Qt)
6	W10191926	Cap, Bowl Screw	15	W10572158	Screw			
7	W11626982	Foot	16	24450	Link, Latch			
8	9704329	Whip, Wire	17	W10471367	Lever, Latch (Chrome)			
9	W11555367	Hook, Dough (Silent Silver)						


CASE, GEARING AND PLANETARY UNIT PARTS

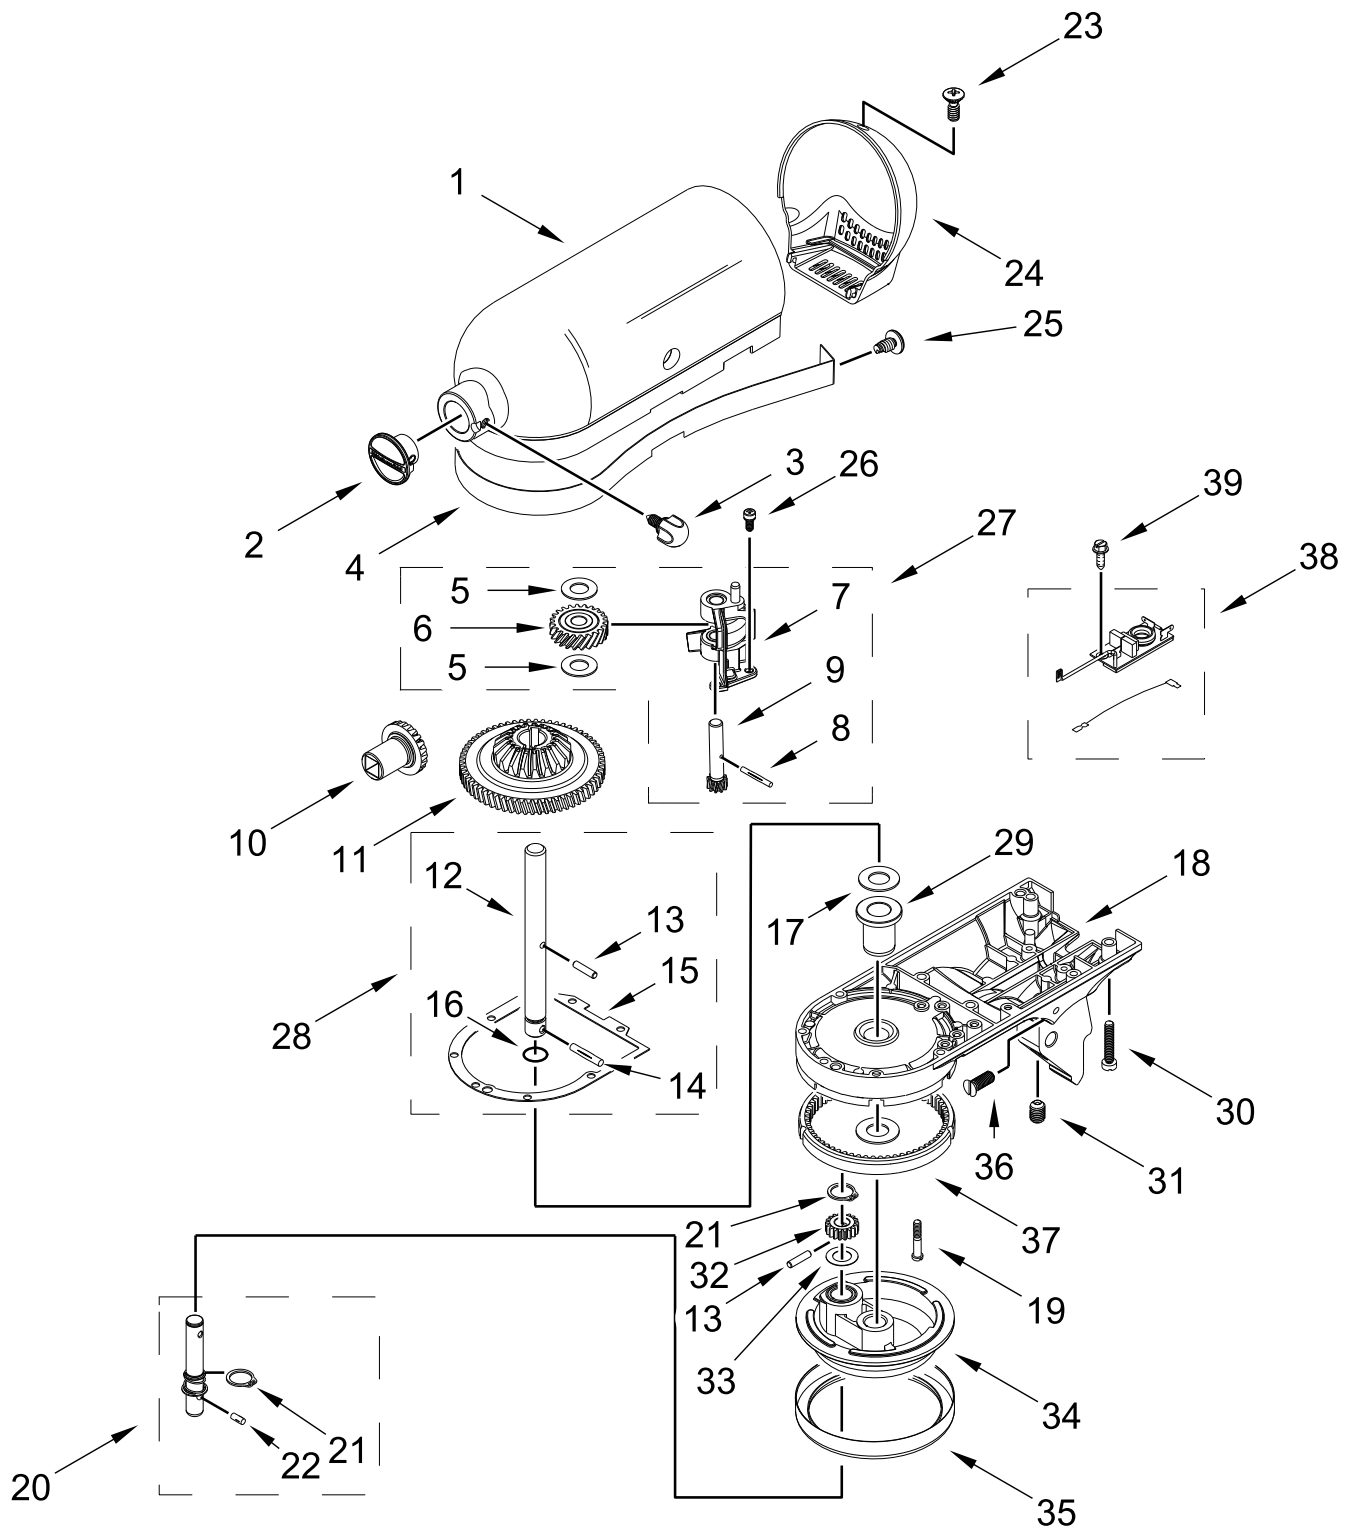

CASE, GEARING AND PLANETARY UNIT PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Gearcase Motor Housing (Refer to Color Variation Parts Page)	13	240018-1	Pin, Agitator Shaft	28	4160474	Shaft, Center Agitator Assembly
			14	W11745418	Pin, Grooved	29	16897	Bearing, Lower Center
			15	240684	Gasket, Transmission	30	9708652	Screw
2	W10753041	Cap, Attachment Hub	16	67500-55	O-Ring	31	W11134949	Screw
3	W10417014	Thumb Screw (Chrome)	17	W10323378	Washer	32	W10903540	Gear, Pinion
			18		Lower Gear Case (Refer to Color Variation Parts Page)	33	9706090	Washer
4		Band, Trim (Refer to Color Variation Parts Page)				34		Planetary (Refer to Color Variation Parts Page)
			19	9708651	Screw			
5	W10323373	Washer, Fiber	20	243368	Shaft, Agitator			
6	W11604364	Gear, Worm	21	9703438	Ring, Retaining	35	240285-2	Ring, Planetary Drip (Polished)
7	240308	Bracket, Worm Gear and Bearing	22	W11533778	Pin, Groove	36	89411	Screw
			23	241877	Screw	37	W11044504	Gear, Internal
8	9705444	Pin, Grooved	24		Cover, End (Refer to Color Variation Parts Page)	38	9705132	Filter, RFI (Includes Lead Filter)
9	240210-2	Gear, Pinion and Shaft						
10	W11175140	Gear, Attachment Hub	25	3400617	Screw	39	7101P115-60	Screw
11	W11175138	Gear, Center Bevel Pinion	26	3400022	Screw			
			27	240309-2	Worm Gear Bracket and Gear Assembly			
12	240026	Shaft, Vertical Center						

MOTOR AND CONTROL UNIT PARTS

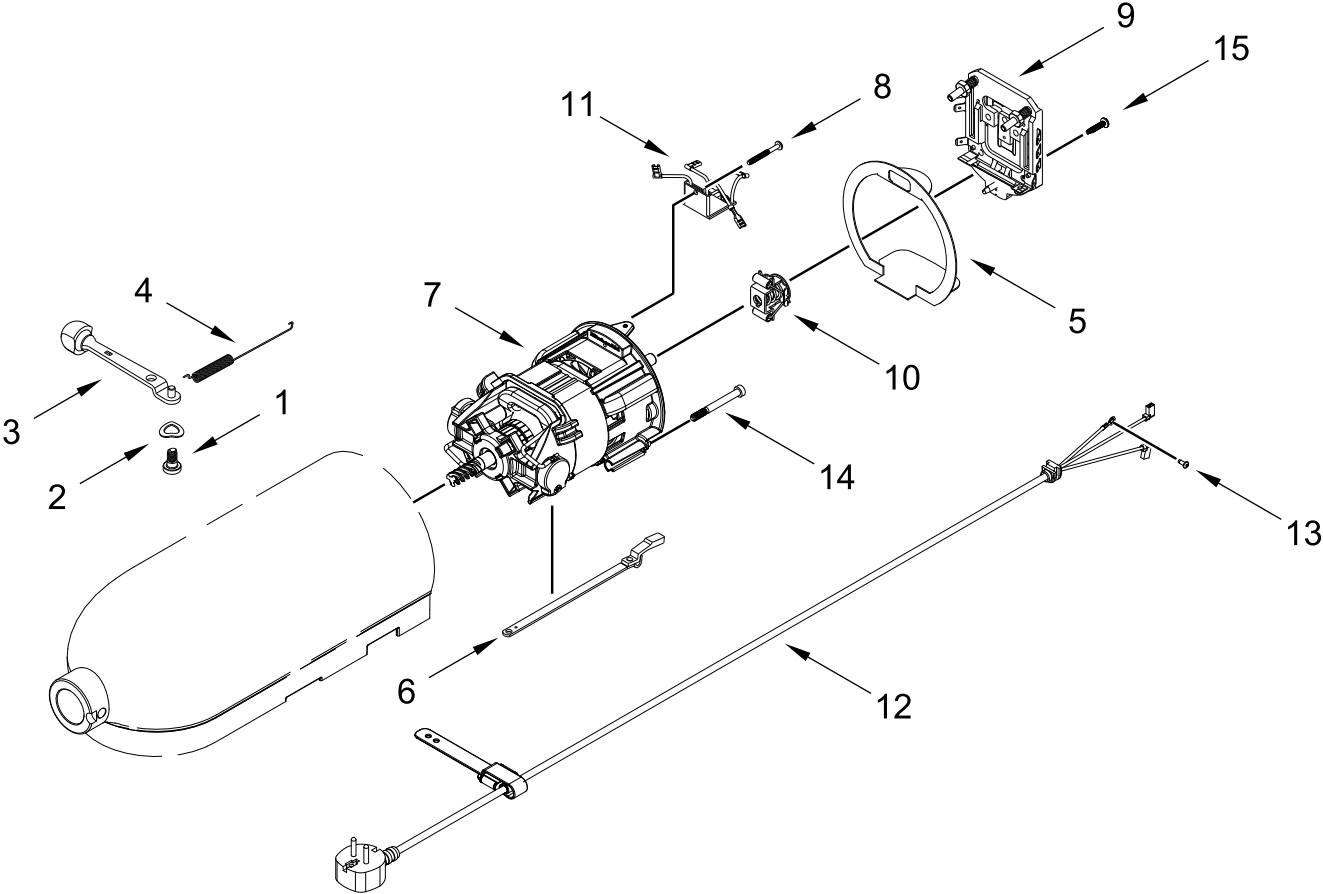

MOTOR AND CONTROL UNIT PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11611890	Screw	7	W11610691	Motor Assembly	12	W11667282	Cord, Power (Black)
2	116241	Washer, Spring	8	W10068260	Screw	13	W10351843	Screw
3	W10471364	Lever, Speed Control Assembly (Chrome)	9	W10119326	Control Plate Assembly	14	W11573199	Screw, Motor Mounting
4	3183680	Spring, Control Plate	10	W10330804	Governor Assembly	15	3179559	Screw
5	240775-1	Seal, End	11	W10911442	Phase Control, 230 Volt			
6	W11435668	Link, Speed and Cam Assembly						