

KitchenAid®

GAS RANGE


MODELS:

KFDS936SDC00 (Cardamom)

BURNER BOX AND ORIFICE HOLDER ASSEMBLY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Box, Burner (Not Serviced)	10	W11729474	Orifice Holder Assembly	18	8286921	Screw, Burner Rail (M4)
2	W11730116	Valve Manifold Assembly			(Center Front)	19	3196172	Screw
		(Left Front, Left Rear, Center Rear)	11	W11729472	Orifice Holder Assembly	20	W10449140	Regulator, Pressure
	W11730117	Valve Manifold Assembly			(Center Rear)	21	W11106963	Tube, Pressure Regulator
		(Center Front, Right Front, Right Rear)	12	W11775871	Orifice Holder Assembly			FOLLOWING PARTS NOT ILLUSTRATED
3	W11749907	Switch, Harness			(Right Front)	W11200303		Harness, Main (36 in)
4	W11121194	Bracket, Manifold	13	W11729475	Orifice Holder Assembly	W11200332		Harness, Cooktop
5	W11121317	Module, Spark			(Right Rear)	W11766035		Harness, Communication
6	W11730165	Tube, Manifold Supply	14		Orifice (Not Serviced, Must Order Orifice Holder Assembly)	W10780278		Harness, Door Lock
		(Left)				313438		Clip, Harness
	W11730166	Tube, Manifold Supply	15	W11759723	Igniter	W11212216		Cord, Power
		(Right)			(Left Front, Right Front)	W10253333		Bracket, Anti-Tip
7	4453116	Adapter, Male		W11759741	Igniter	7101P485-60		Screw, Anti-Tip Kit
8	W11775870	Orifice Holder Assembly			(Center Front, Center Rear)	W11779130		LP Surface Conversion Kit
		(Left Front)		W11759742	Igniter	W11779797		LP Oven Conversion Kit
9	W11729473	Orifice Holder Assembly			(Left Rear, Right Rear)			
		(Left Rear)	16	W10827923	Electrode, Spring			
			17	W11719156	Screw			


COOKTOP, BURNER AND GRATE PARTS

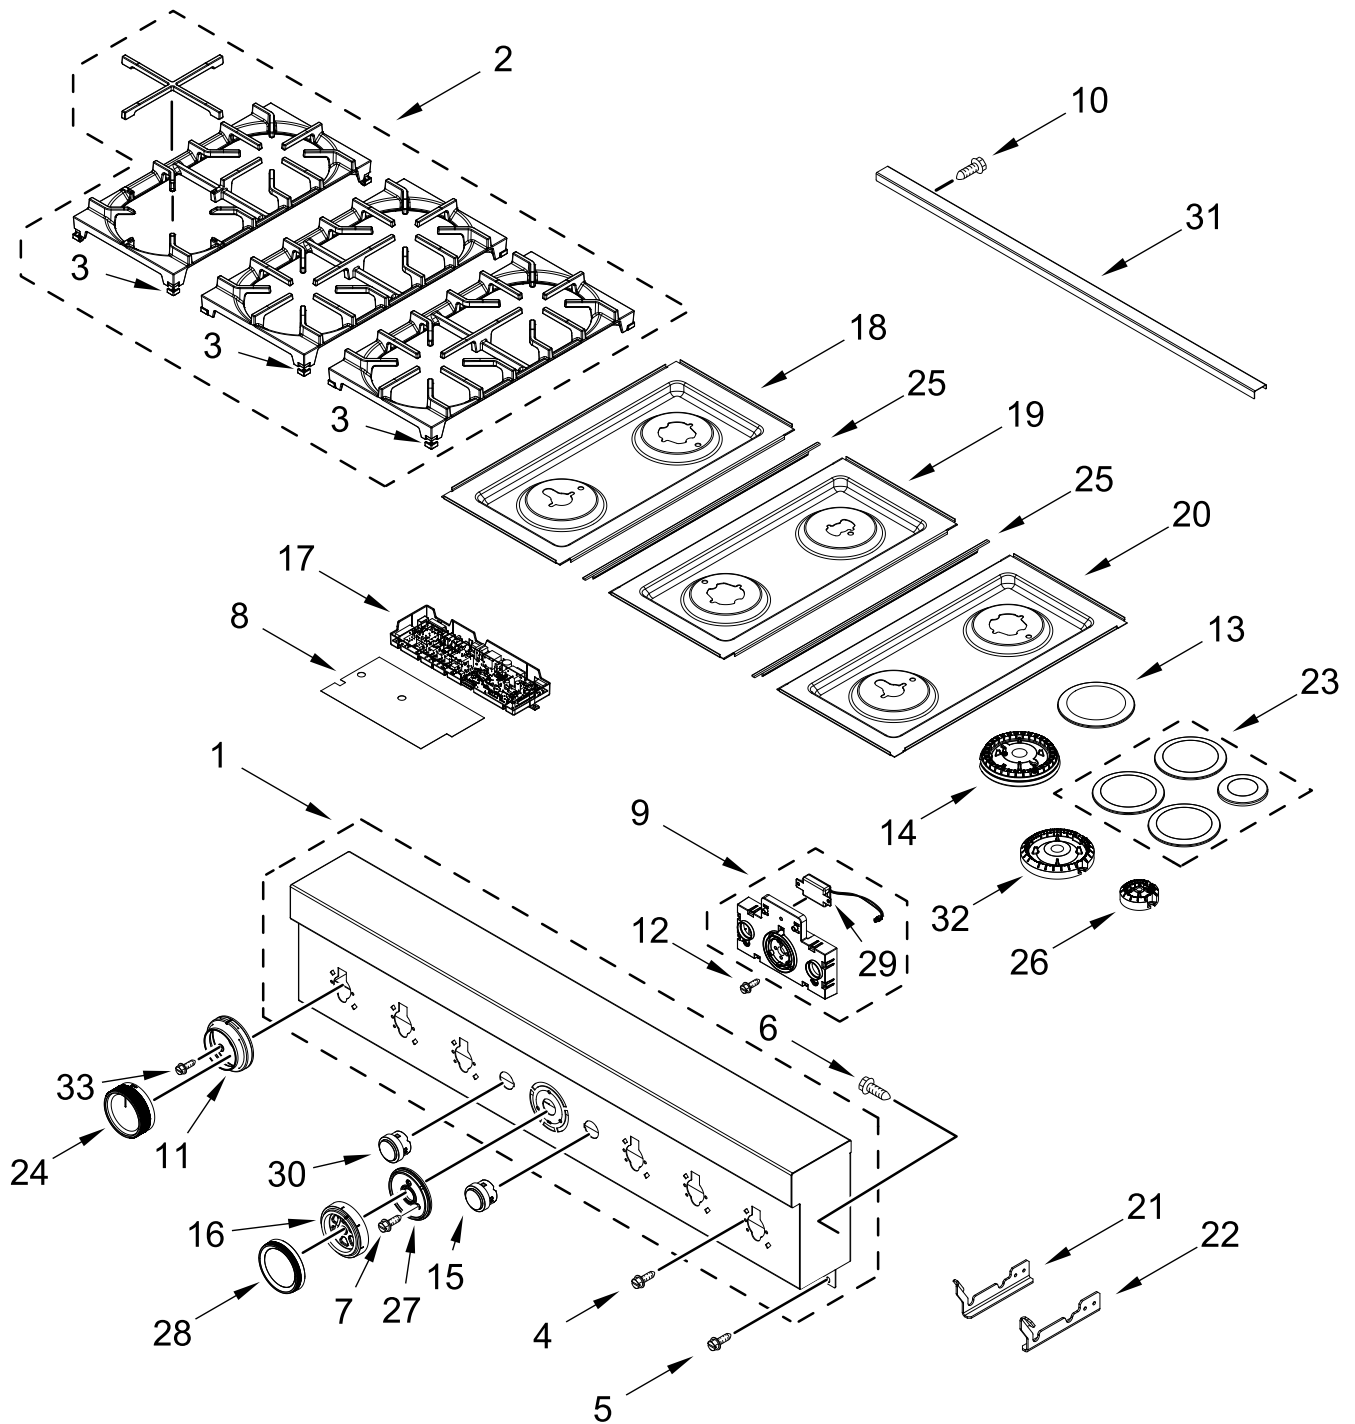

COOKTOP, BURNER AND GRATE PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11774892	Console Panel (Stainless)	17	W11767302	Manager, Powermax Appliance	26	W11352197	Flame Spreader (Center Rear)
2	W11789234	Grate Burner Kit	18	W11758655	Panel, Left Cooktop (Black)	27	W11738551	Bezel Assembly, Oven (Stainless)
3	W11042504	Bumper, Grate	19	W11758657	Panel, Center Cooktop (Black)	28	W11740403	Knob, Oven Temperature (Stainless)
4	W10919387	Screw	20	W11758658	Panel, Right Cooktop (Black)	29	W10568405	Speaker Assembly
5	3196537	Screw	21	W10130760	Bracket, Moving Console (Left)	30	W11090651	Button Assembly, Oven Light
6	3400099	Screw	22	W10130759	Bracket, Moving Console (Right)	31	W11156416	Trim, Island
7	W11755190	Screw	23	W11748806	Cap, Burner (Black, Set of 4)	32	W11352193	Flame Spreader (Left Rear, Center Front, Right Rear)
8	W11281269	Barrier, Appliance Manager			(Left Rear, Center Front, Center Rear, Right Rear)	33	4449154	Screw
9	W11777685	User Interface	24	W11732024	Knob, Dual (Stainless)			
10	7101P338-60	Screw			(Left Front, Right Front)			
11	W11801796	Bezel Assembly, Gas Burner (Stainless)			(Left Front, Right Front)			
12	W10162096	Screw						
13	W11346163	Cap, Stack Burner (Black)						
		(Left Front, Right Front)						
14	W11348511	Flame Spreader, Stack						
		(Left Front, Right Front)						
15	W11090650	Button Assembly, Oven Start						
16	W11738550	Knob, Oven Mode (Stainless)	25	W10271524	Trim, T-Strip (Black)			


CHASSIS PARTS

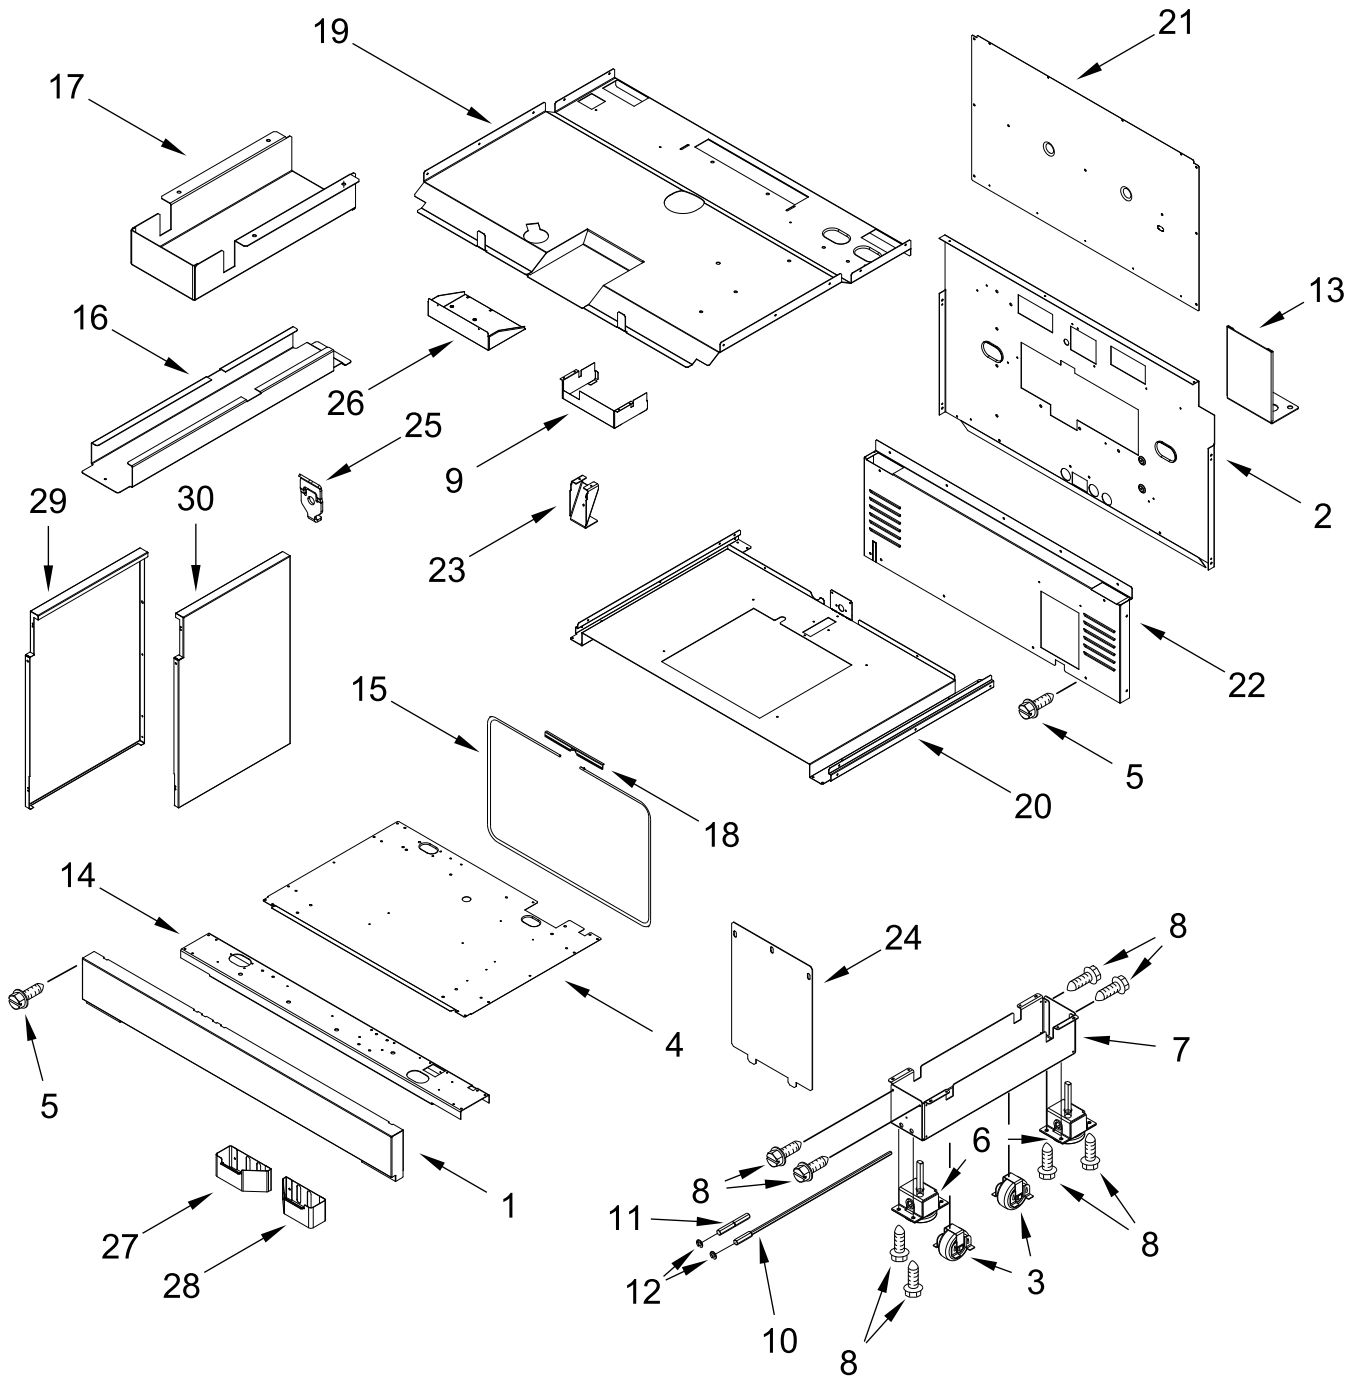

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11739034	Kickplate (Cardamom)	13	W11758326	Bracket, Rear Chassis	24	W10115843	Cover, Ignition
2	W11758515	Back, Chassis	14	W11087493	Support, Channel	25	W11036559	Spring Clip, Range
3	W10138054	Roller Assembly	15	W11115330	Gasket, Oven (36 in)	26	W11106341	Drawer, Appliance Manager
4	W11095572	Duct, Bottom (36 in)	16	W11050145	Duct-Chassis, Rear	27	W11199181	Cover, Foot (Left)
5	7101P426-60	Screw	17	W11368831	Channel, Wire	28	W11199178	Cover, Foot (Right)
6	9760860	Leveler	18	W11362015	Retainer, Gasket (9 In)	29	W11106881	Panel, Left Cabinet Side
7	W10908710	Base, Leveling Leg	19	W11324985	Top, Chassis	30	W11106880	Panel, Right Cabinet Side
8	4449743	Screw	20	W11040801	Chassis, Bottom			
9	W11369237	Cabinet, Appliance Manager	21	W11103333	Panel, Back Top			
10	W10115869	Shaft, Long	22	W11034133	Panel, Back Bottom			
11	W10115793	Shaft, Short	23	W11096823	Bracket, Pressure Regulator			
12	489504	E-Ring						


OVEN PARTS

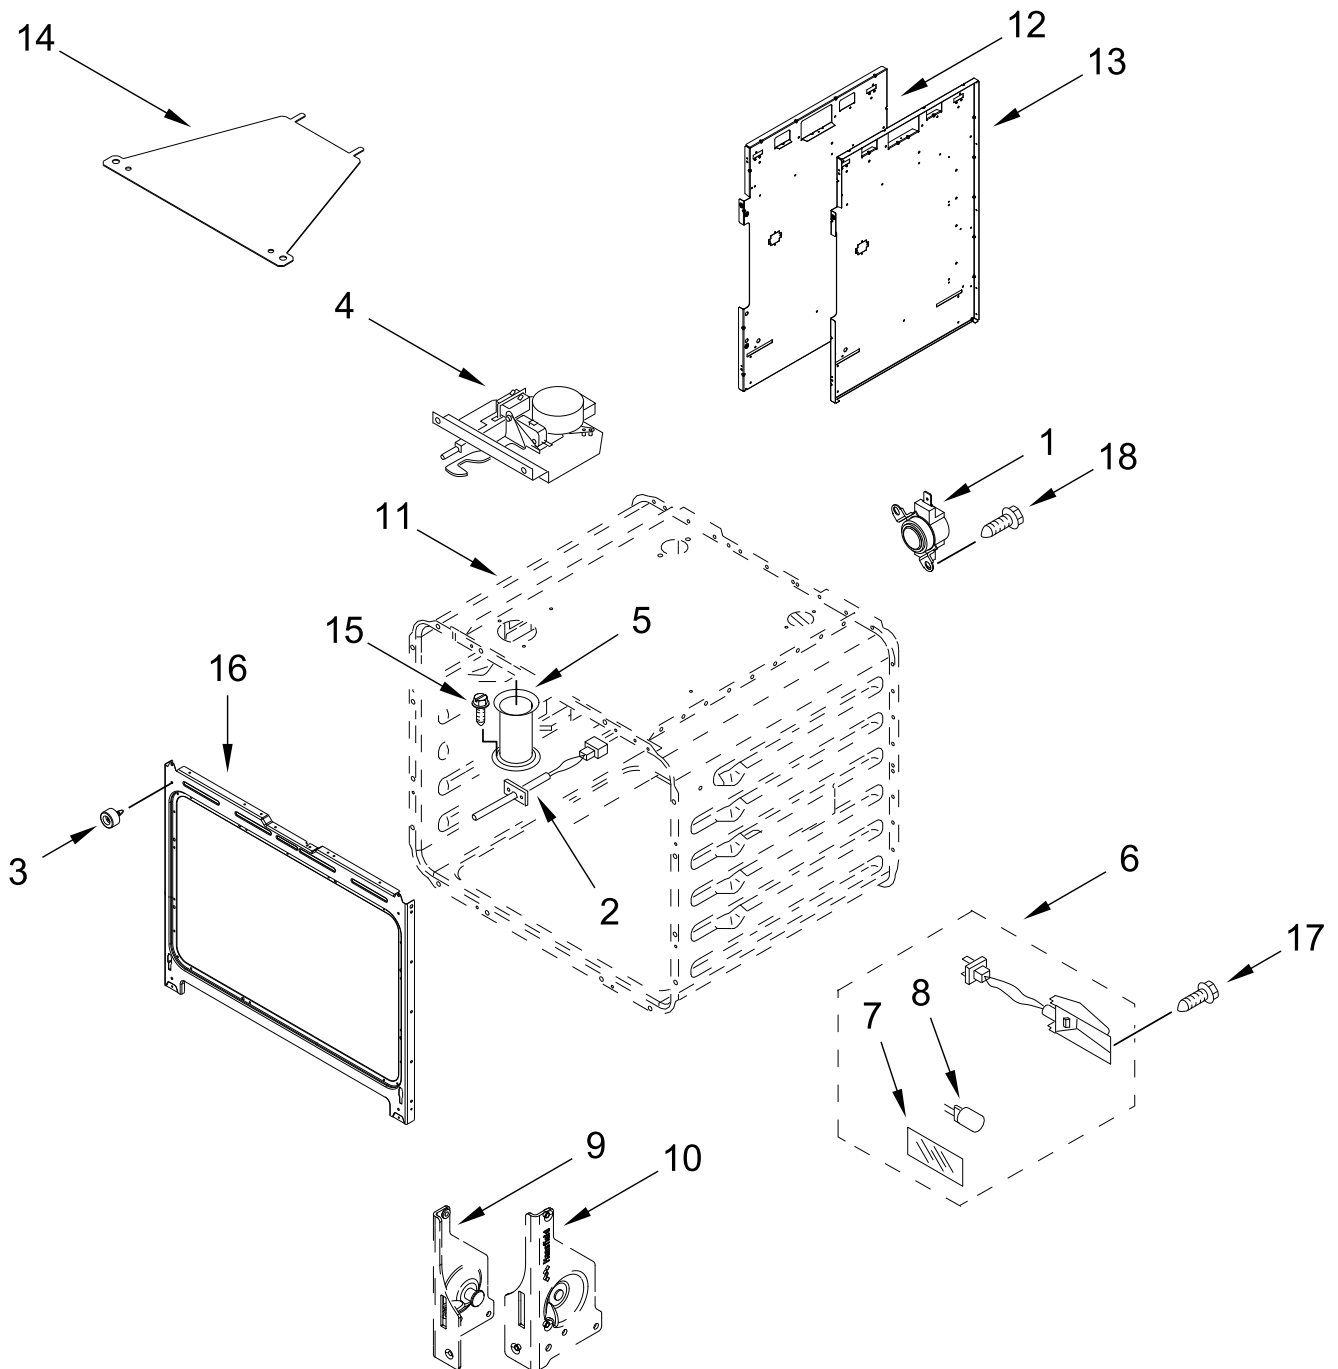

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4449751	Thermostat (TOD)	10		Receiver, Hinge (Not Serviced)	17	4449748	Screw
2	W10622170	Probe, Sensor				18	7101P426-60	Screw
3	W10105790	Bumper (Includes Screw)	11		Liner, Oven (Not Serviced)			FOLLOWING PARTS NOT ILLUSTRATED
4	W10830016	Latch, Motorized	12	W11683297	Retainer, Left Side Chassis		W10282811	Insulation, Wrap
5	W11290663	Tube, Vent					W10282813	Insulation, Back, 36 In
6	W11223932	Oven Light Assembly	13	W11683296	Retainer, Right Side Chassis		3400968	Nut
7	W10169756	Lens, Light						
8	W10169757	Bulb, Light	14	W10160858	Cover, Latch			
9		Receiver, Hinge (Not Serviced)	15	3196176	Screw			
			16	W11192749	Frame, Front			


VENTING PARTS

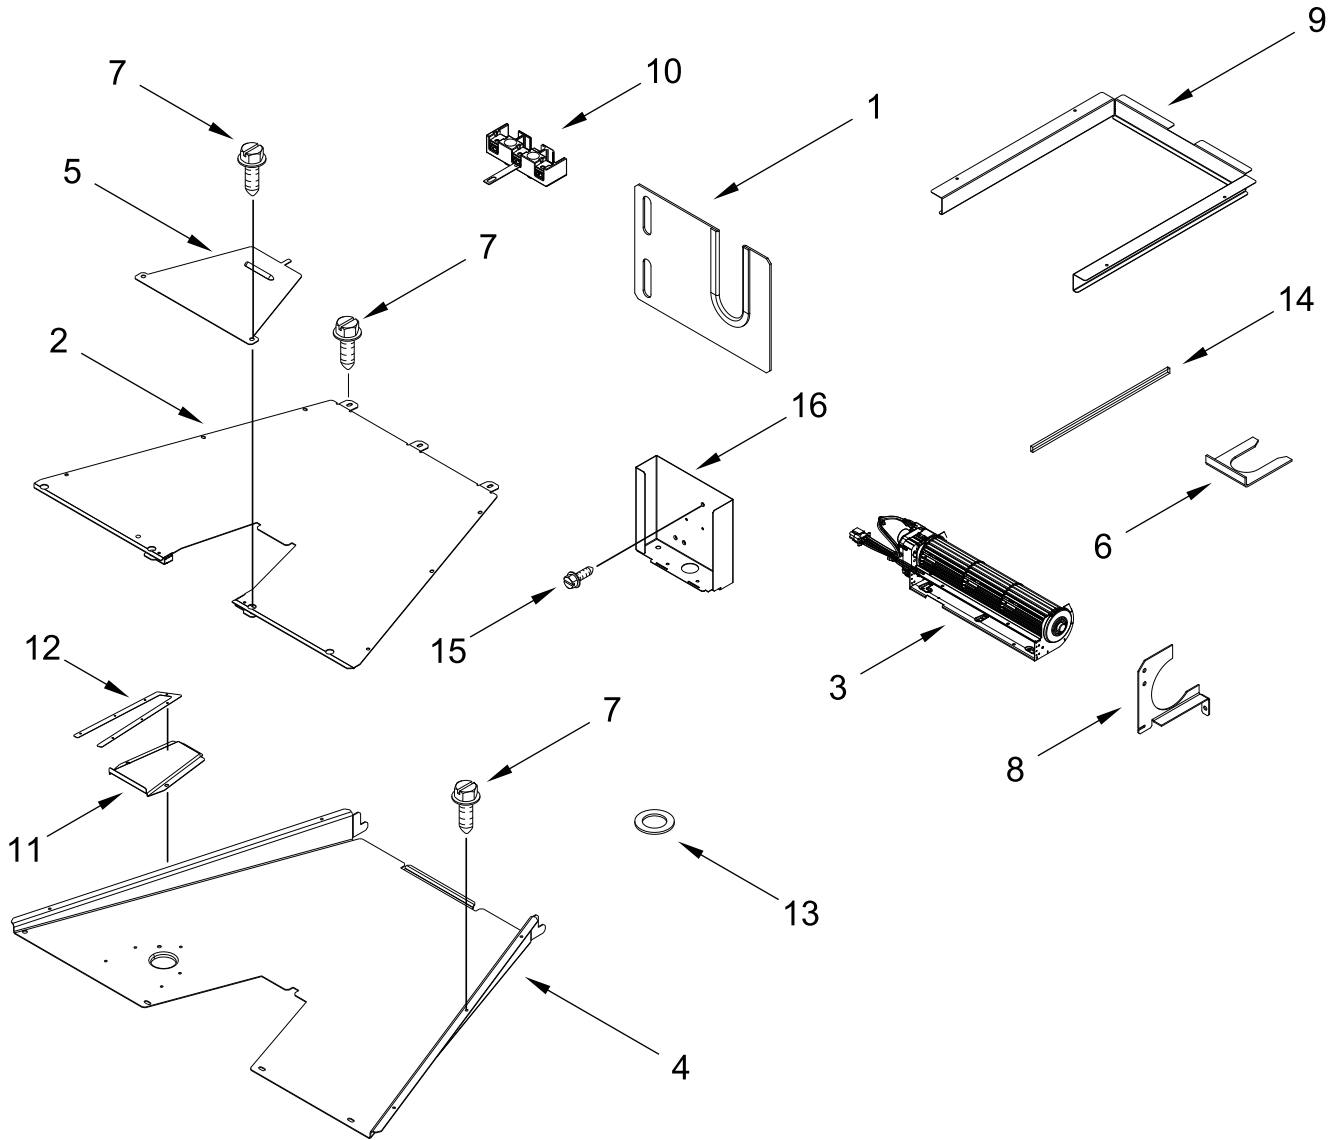

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11106956	Cover, Channel	7	7101P426-60	Screw	12	W10270397	Seal, Vent Slope (30 In)
2	W11105223	Vent, Cooling Top (30 In)	8	W11047754	Bracket, Blower Mount	13	W10270396	Seal, Chimney
3	W11200129	Blower	9	W10145363	Duct, Primary Air (30 in)	14	W10919715	Gasket
4	W11105222	Vent, Cooling Bottom (30 In)	10	9761958	Block, Terminal	15	3400015	Screw, Grounding
5	W11109518	Plate, Cooling Latch	11	W10818234	Slope, Exhaust Vent (30 In)	16	W11353392	Box, Terminal
6	9759877	Retainer, Strain Relief						


OVEN DOOR PARTS

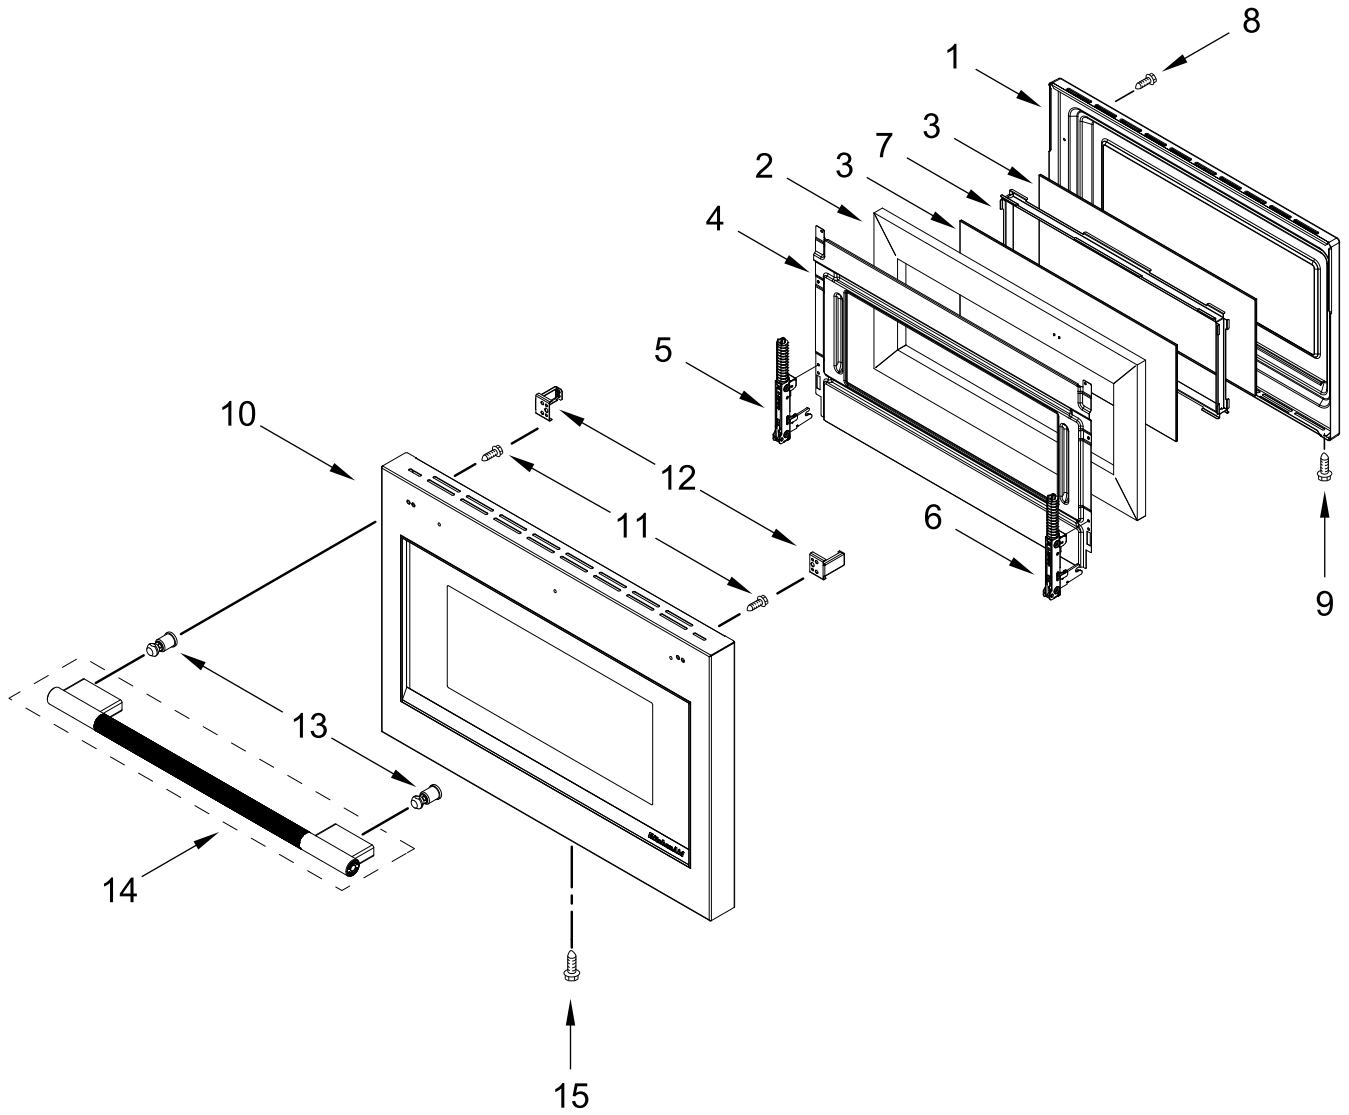

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036772	Liner, Door	7	W11194814	Frame, Glass	13	W11687274	Stud
2	W10884823	Insulation, Door	8	W10898280	Screw	14	W11732559	Handle Assembly (Stainless)
3	W11036791	Glass, Inner	9	W10607120	Screw	15	W10162096	Screw
4	W11194820	Retainer, Glass	10	W11751902	Outer Door Assembly (Cardamom)			
5	W11807687	Hinge, Door (Dual)	11	3196184	Screw			
6	W11807689	Hinge, Door (Dampened)	12	W11197830	Bracket, Handle			

INTERNAL OVEN PARTS

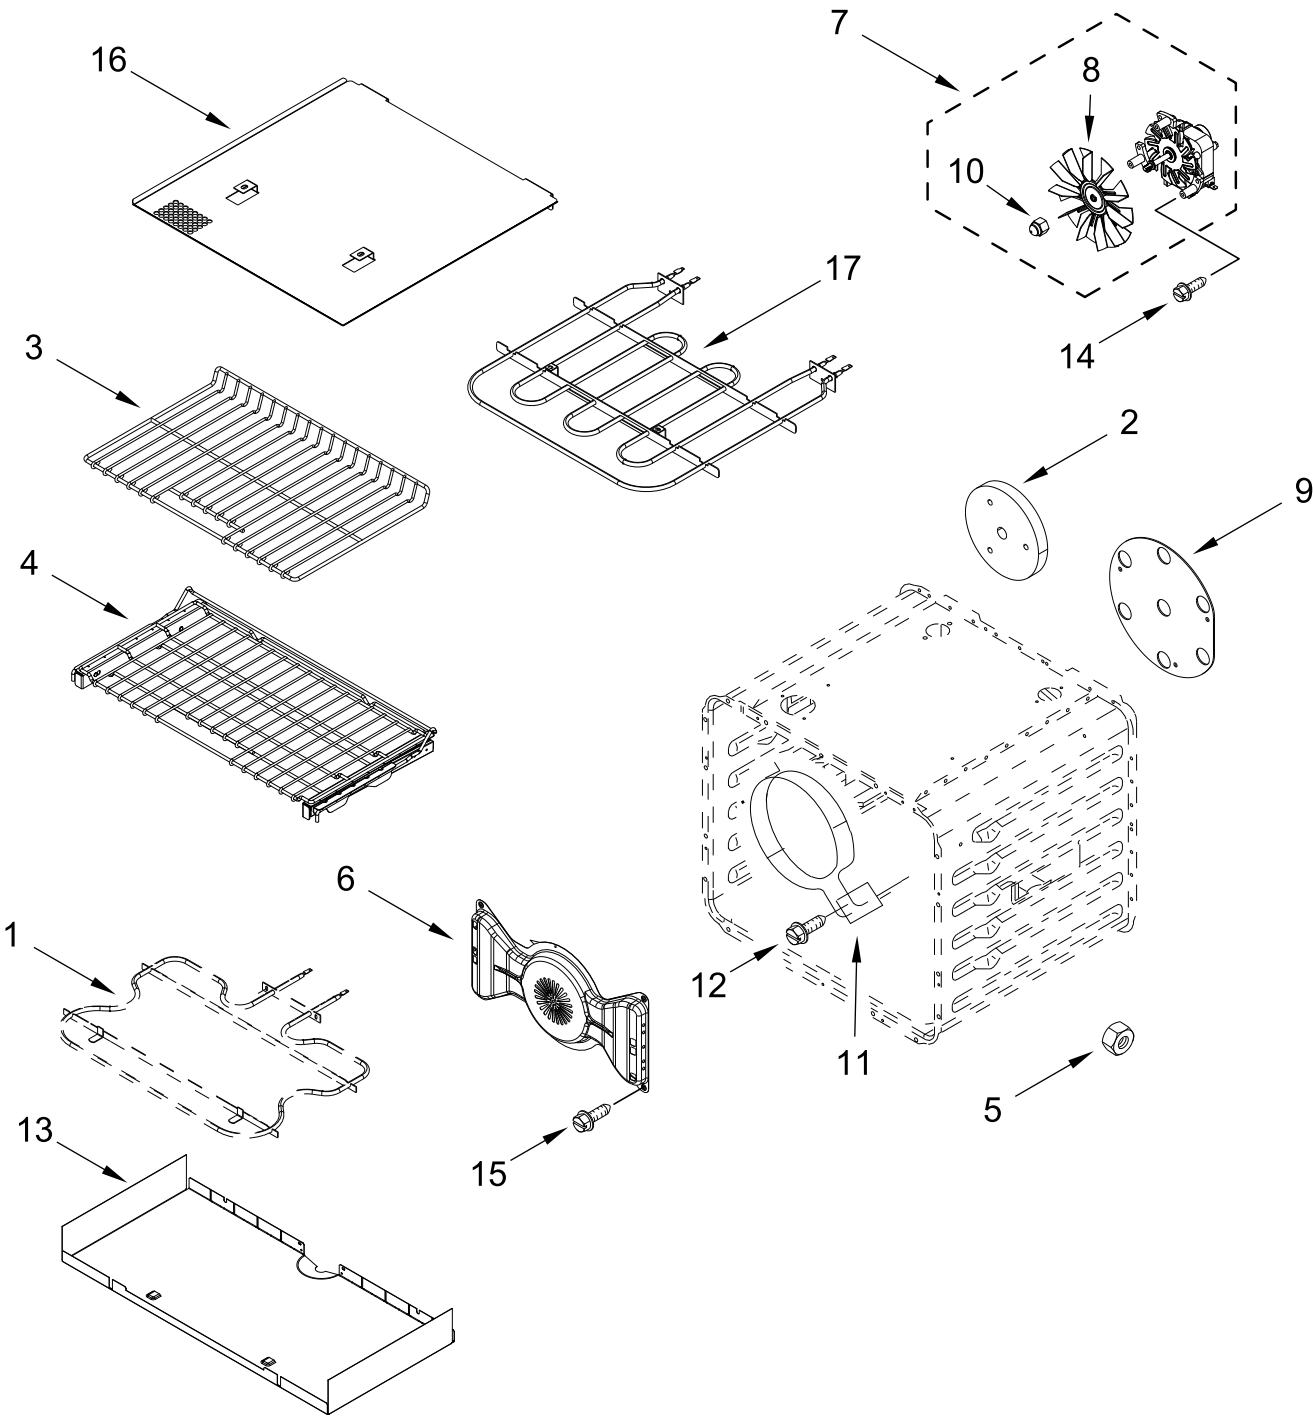

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Element, Hidden Bake (Not Serviced)	7	W10722667	Fan, Convection	13	W11106922	Tray, Hidden Bake
2	W10282821	Insulation, Convection Cover	8	W10631503	Blade, Fan	14	W10720084	Screw
3	W10822069	Rack, Oven	9	W10261523	Plate, Fan	15	W10739592	Screw
4	W11496903	Rack, Sliding Oven	10	W10631504	Nut, Acorn (Left Hand Thread)	16	W10160856	Shield, Element Broil
5	9755546	Nut, Hidden	11	9762242	Element, Convection Steam	17	W10115994	Element, Broil
6	W11212180	Baffle, Convection	12	4449154	Screw			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORIES
	30-48KITRC	Gas Range Connector Kit
	W10285448	Backsplash, 36 In (Includes Shelf)
	4396923	Broiler Pan and Grid
	4396096RB	Griddle