


KitchenAid[®]

REFRIGERATOR

MODELS:

KURT524SSB00 (Stainless)


CABINET PARTS

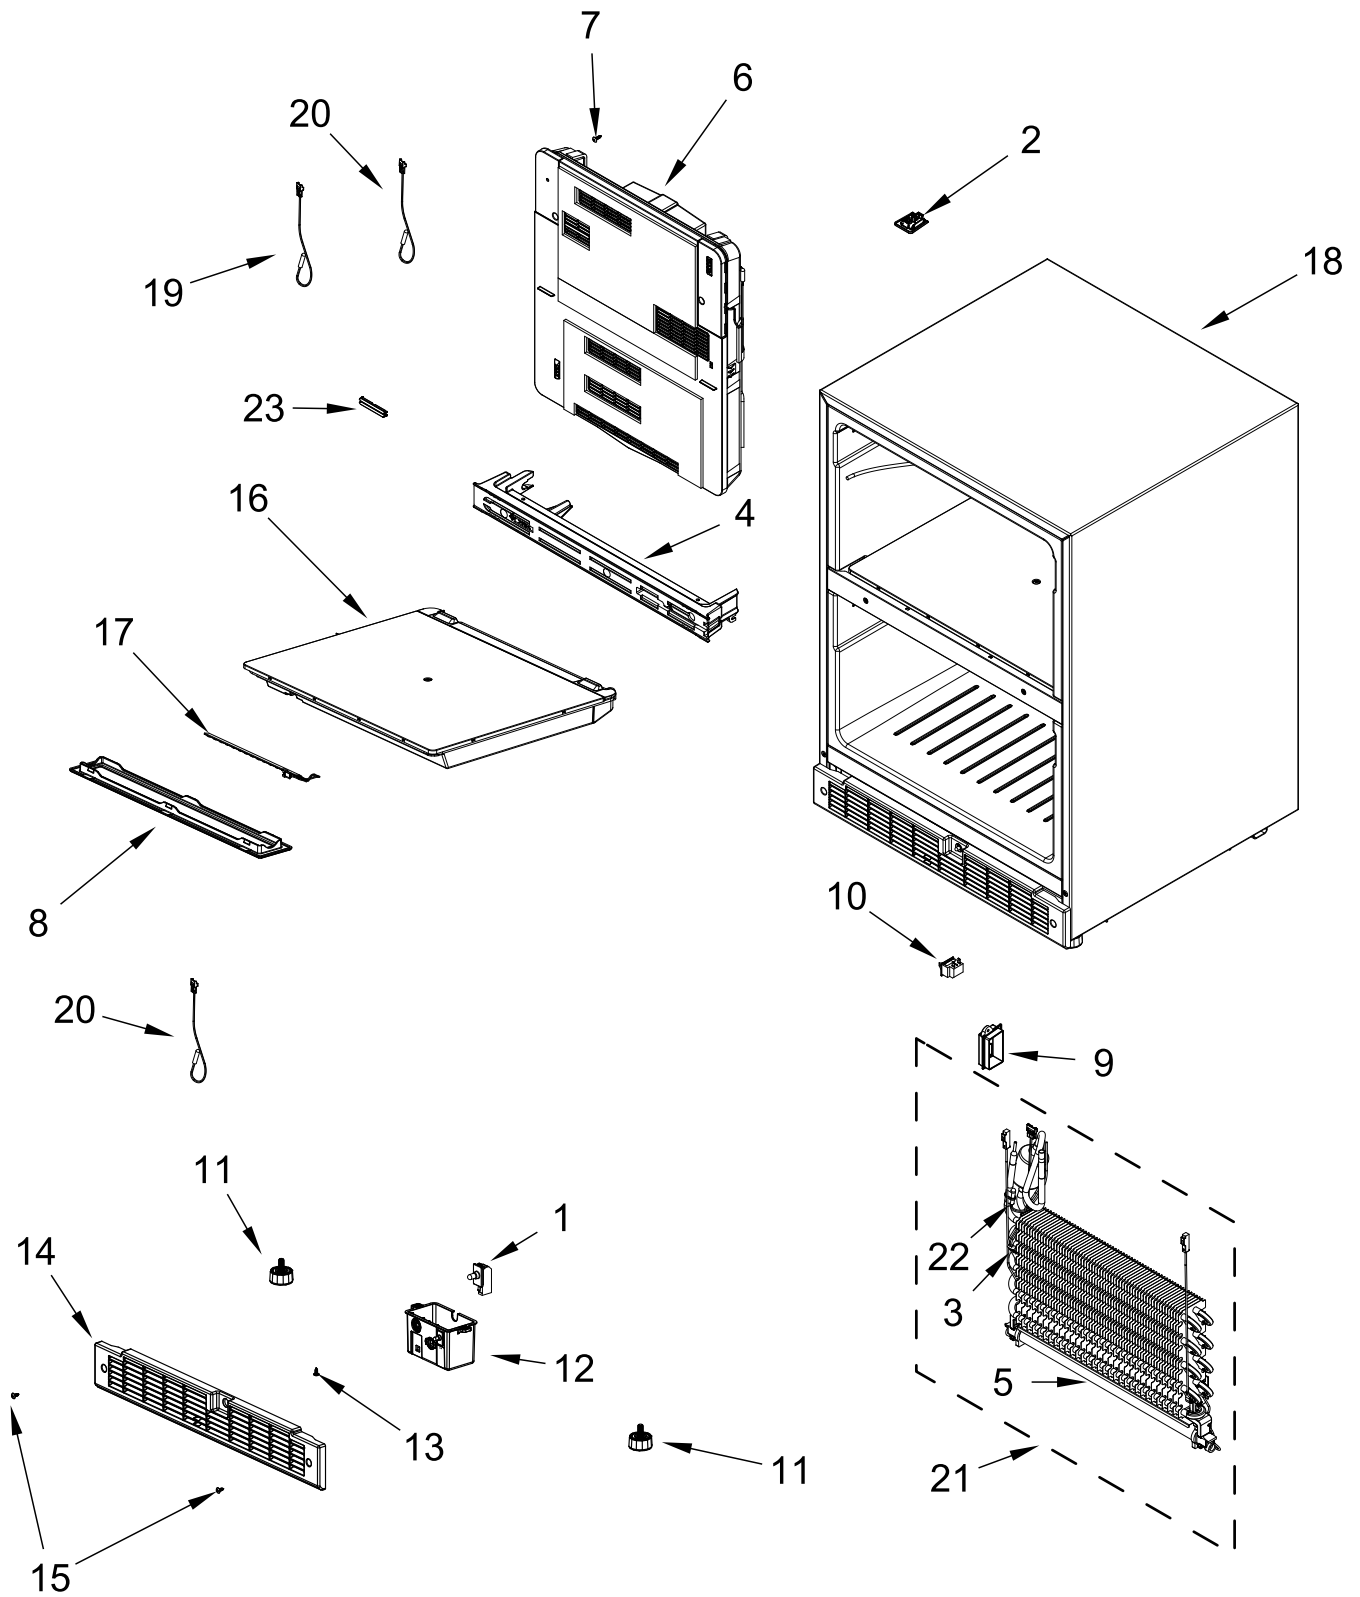

CABINET PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11265587	Switch, Door	10	W11568786	Switch, Door	20	W11824108	Sensor, Temperature (Lower)
2	W11568787	Connector, Cover	11	W11313121	Leg, Leveling	21	W11798699	Evaporator and Heater Assembly
3	W11359415	Fuse, Temperature	12	W11568794	Assembly, Switch Box	22	W11263884	Sensor, Defrost
4	W11568792	Assembly, Trim	13	W11371097	Screw	23	W11568776	Cover Piece, Evaporator
5	W11580231	Defrost Holder and Heater	14	W11239541	Grille			
6	W11568769	Cover Assembly, Evaporator	15	W11371095	Screw			
7	W11375760	Screw	16	W11568948	Assembly, Separator			
8	W11312450	Cover, LED	17	W11568950	LED			
9	W11568783	Switch, Case	18		Cabinet (Not a Servicable Part)			
			19	W11728555	Sensor Pcc (Upper)			


UPPER DRAWER PARTS

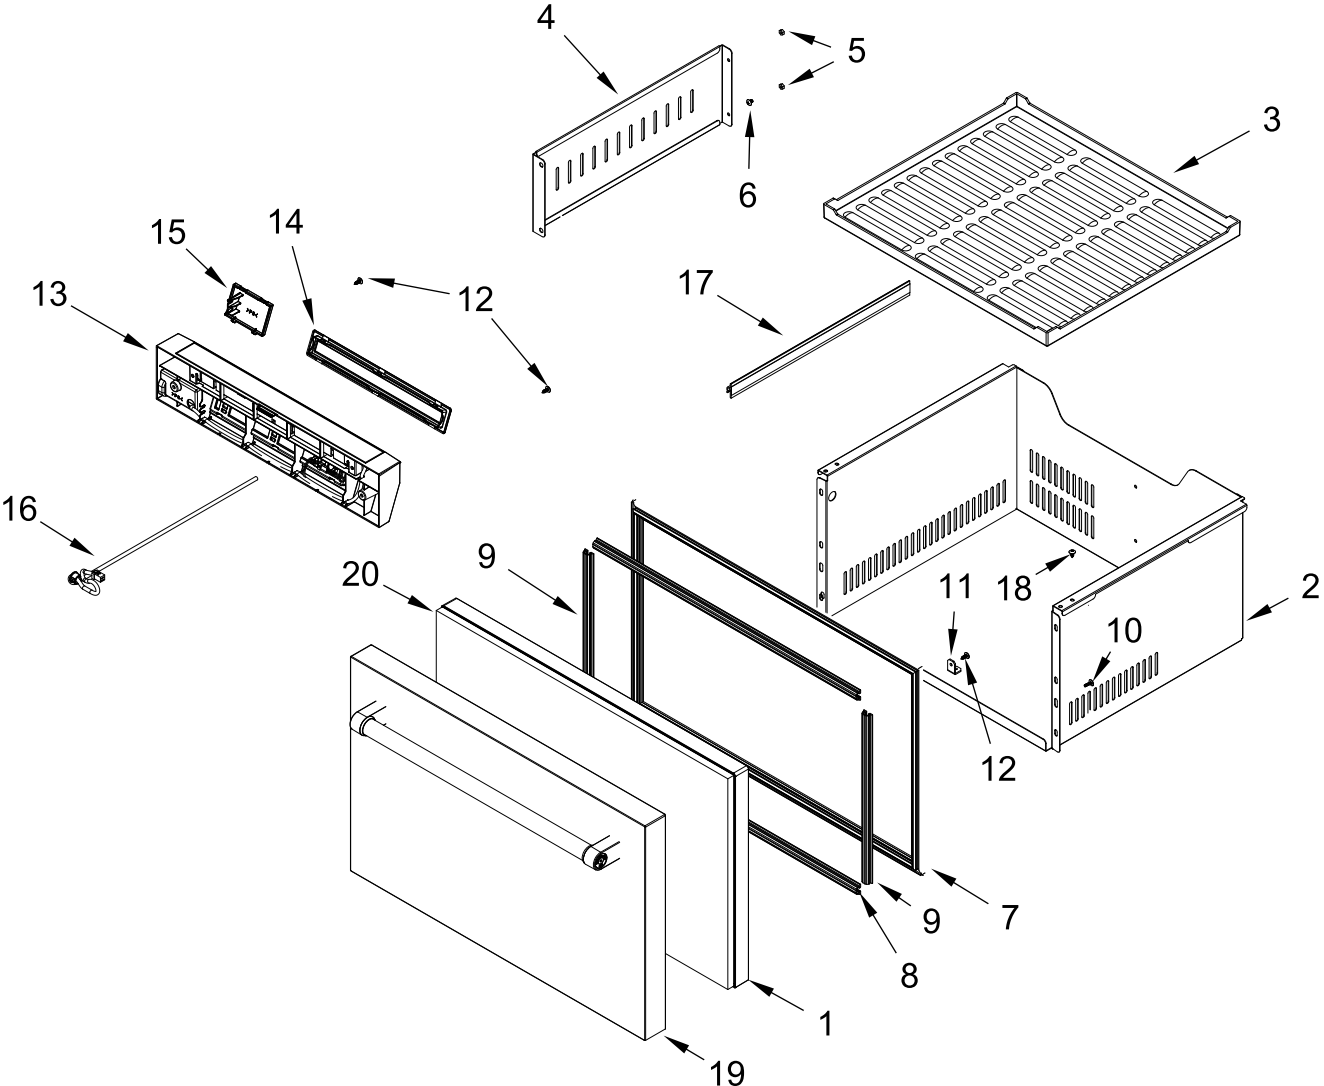

UPPER DRAWER PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11770542	Top Foamed Door Assembly	8	W11770530	Sash, Gasket (Top/Bottom)	15	W11568841	Lamp Cover
2	W11774804	Drawer Box Assembly, Upper	9	W11568838	Door Gasket, Short	16	W11576360	Harness
3	W11568835	Mat, Upper Drawer	10	W10204809	Screw	17	W11568842	Support, Lead Wire
4	W11568836	Drawer Partition	11	W11568839	Plate, Door Handle	18	W11422709	Screw
5	W10204920	Nut	12	W11371095	Screw	19	W11824639	Stainless Wrap
6	W11824646	Screw	13	W11824833	Control Panel Assembly	20	W11568934	Insulation, Door
7	W11568837	Gasket, Door	14	W11312450	Cover, LED			FOLLOWING PARTS NOT ILLUSTRATED
						W11824923		Top Door Assembly


LOWER DRAWER PARTS

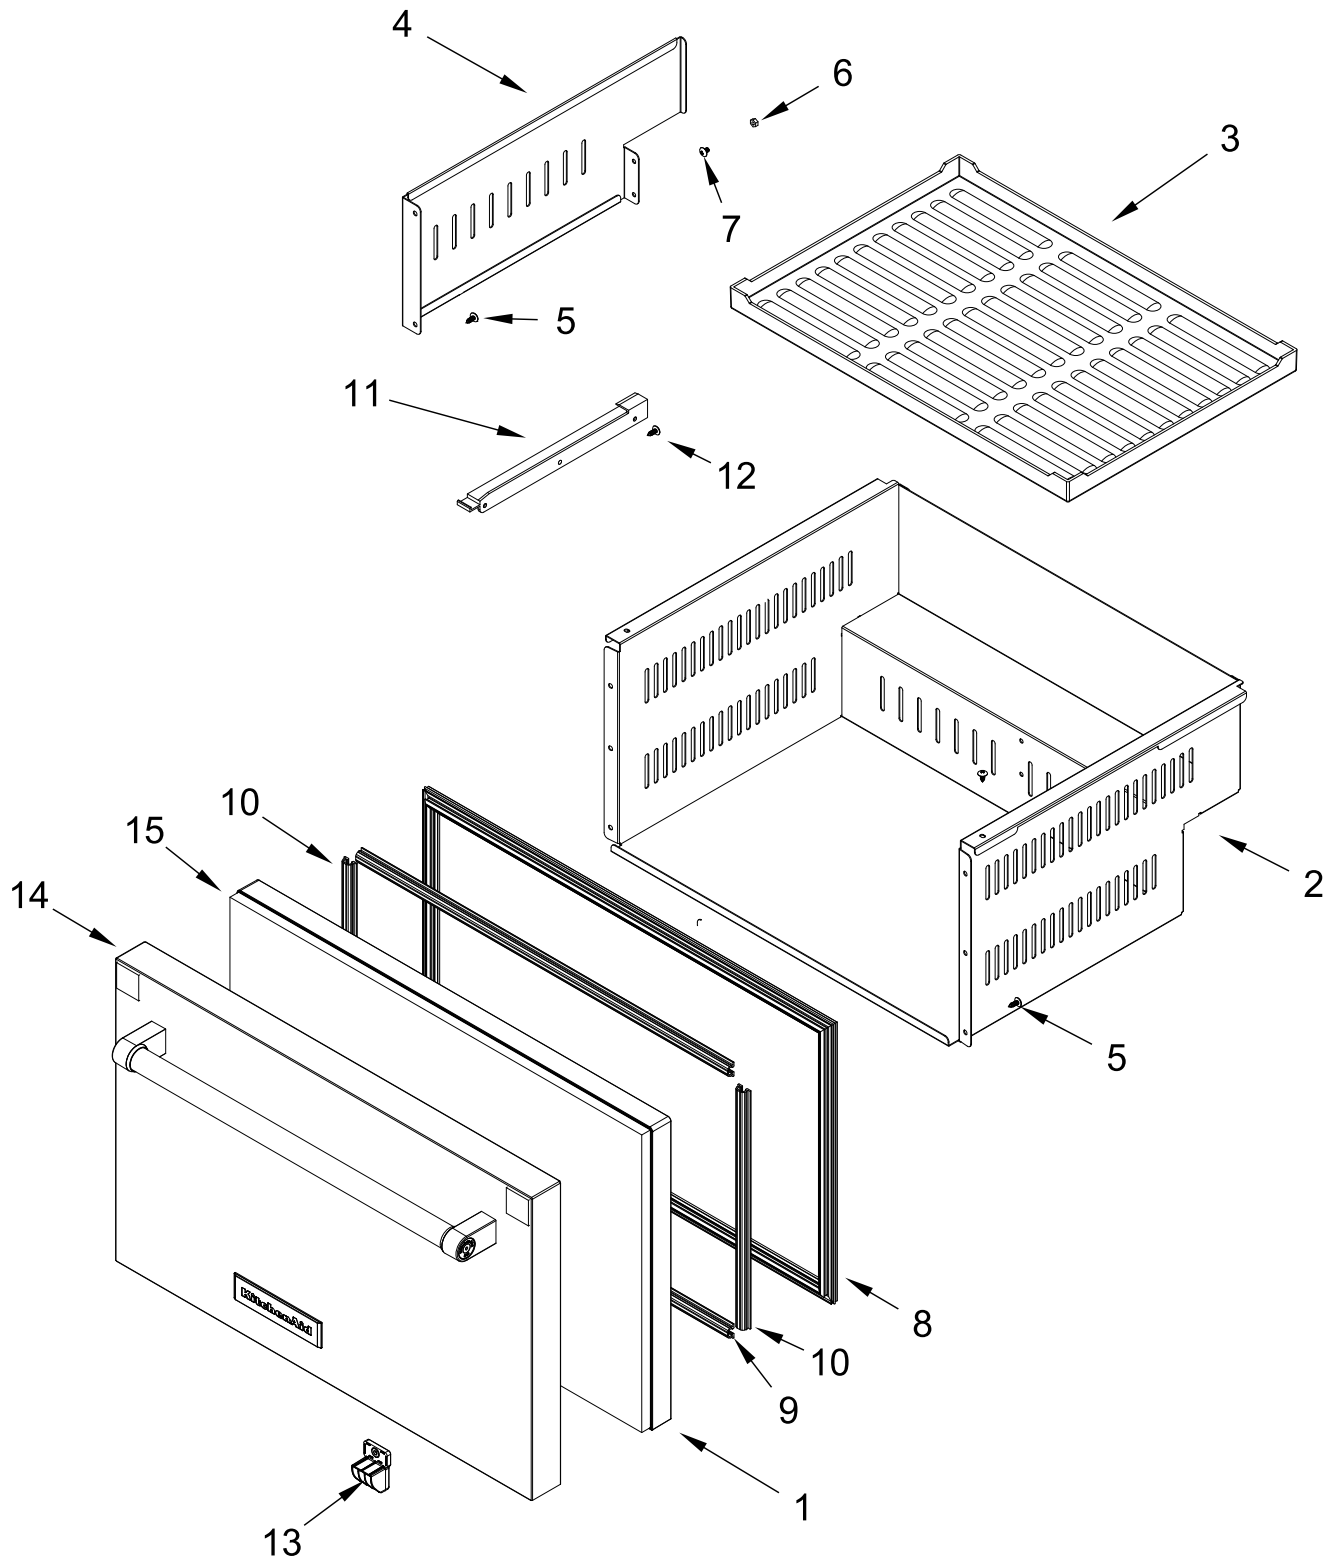

LOWER DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11770543	Door Assembly, Lower	7	W11824646	Screw	13	W11824637	Push Plate
2	W11568938	Drawer Box Assembly, Bottom	8	W11568947	Gasket	14	W11824639	Stainless Wrap
3	W11568945	Mat, Lower Drawer	9	W11770530	Sash, Gasket (Top/Bottom)	15	W11568934	Insulation, Door
4	W11568946	Bottom Drawer Partition	10	W11568838	Door Gasket, Short			FOLLOWING PARTS NOT ILLUSTRATED
5	W10204809	Screw	11	W11568762	Rail, Side (Left Hand)	W11824934		Bottom Door Assembly
6	W10204920	Nut		W11568764	Rail, Side (Right Hand)			
			12	W11826333	Screw			

UNIT PARTS

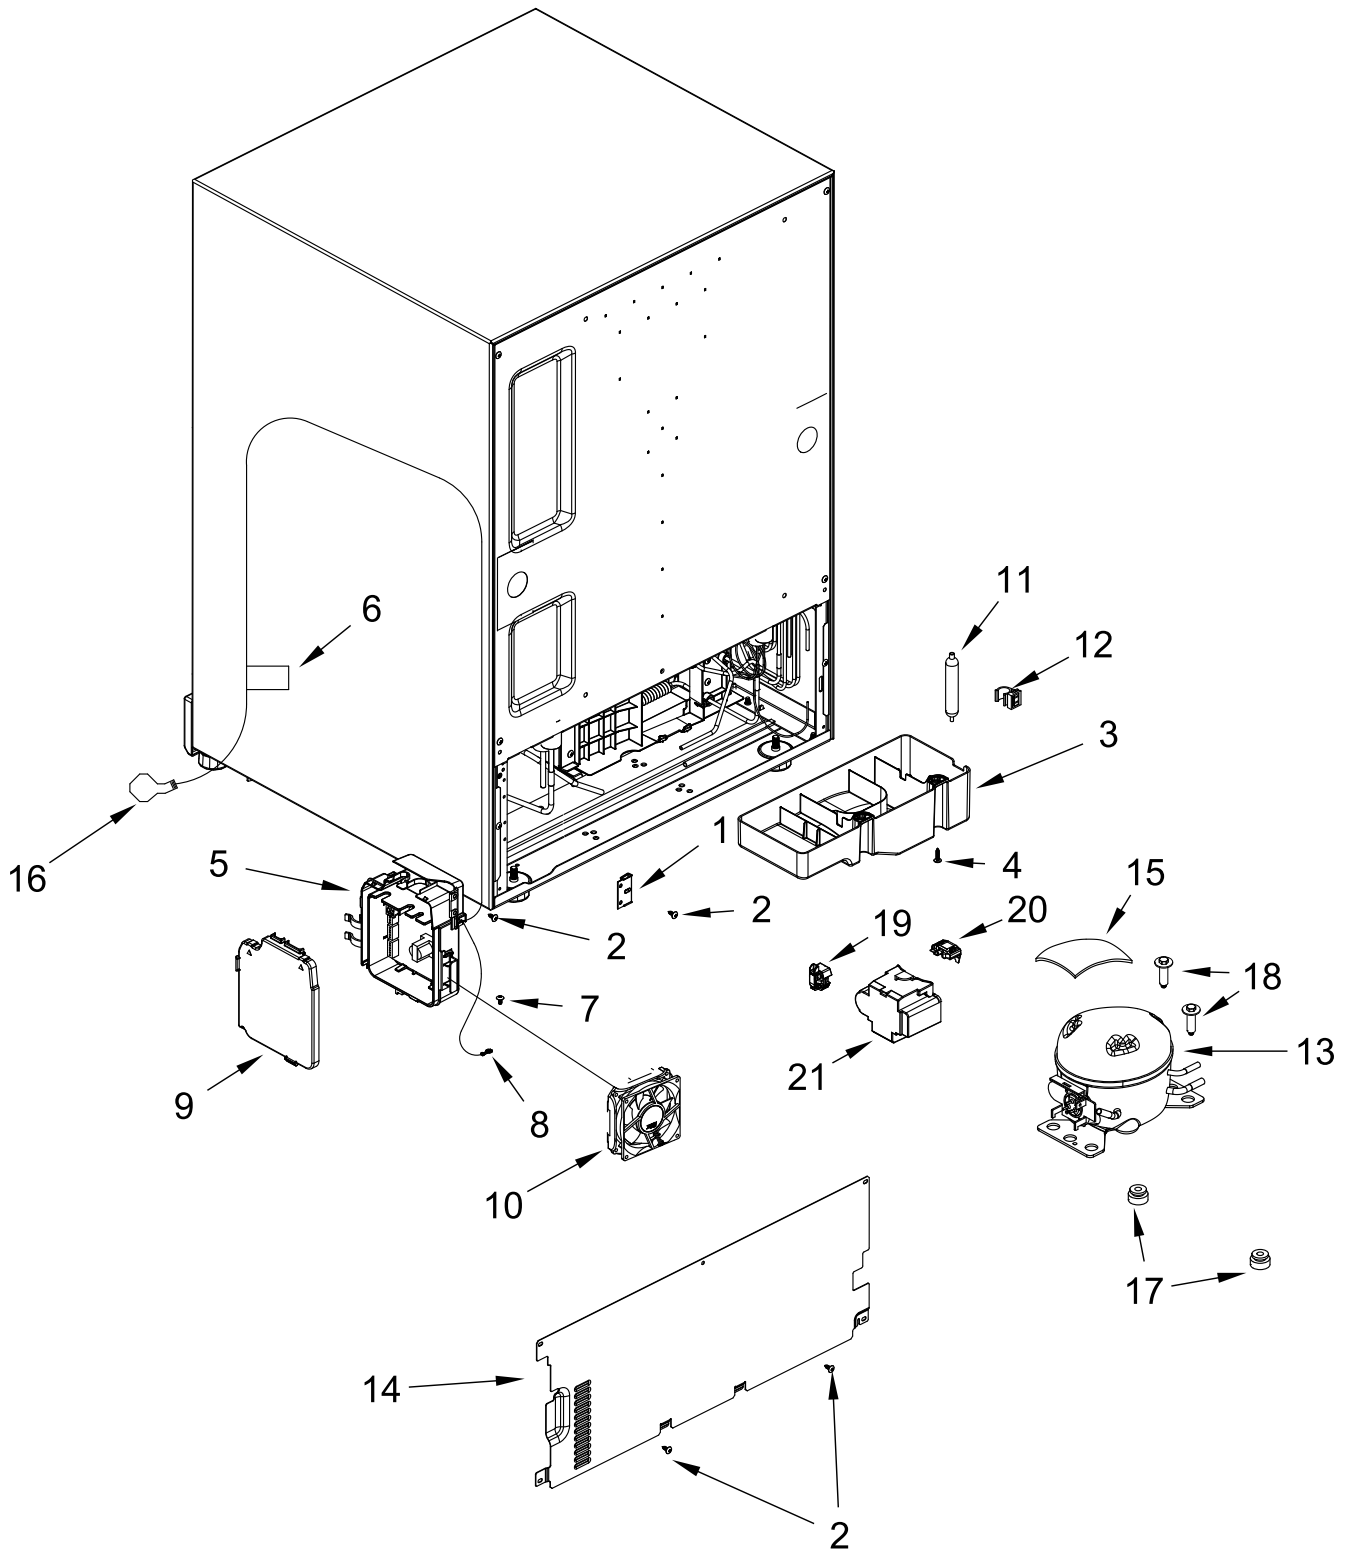

UNIT PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11576947	Clamp, Cord	10	W11360536	Assembly, Fan Motor	17	4344779	Grommet, Compressor
2	W11371097	Screw	11	W10805035	Drier (Service Drier Without Dye)	18	4344780	Bolt, Compressor
3	W11360241	Water Pan, Evaporator	12	W11265569	Clamp	19	W11422771	PTC Thermistor
4	W11375763	Screw	13	W11531824	Compressor	20	W11568812	Protector, Motor
5	W11825850	Main PCB	14	W11568821	Panel, Cover	21	W11568820	Cover
6	W11618463	Assembly, Power Cord	15	W11360595	Sound Pad, Compressor			REFRIGERANT CHARGE
7	4344826	Screw	16	W11740249	Cord, Power			52 grams (R600a)
8	W11265570	Washer						
9	W11313206	Cover, PCB						