




ELECTRIC COOKTOP

MODELS:

JICT730SB01 (Black)


COOKTOP PARTS

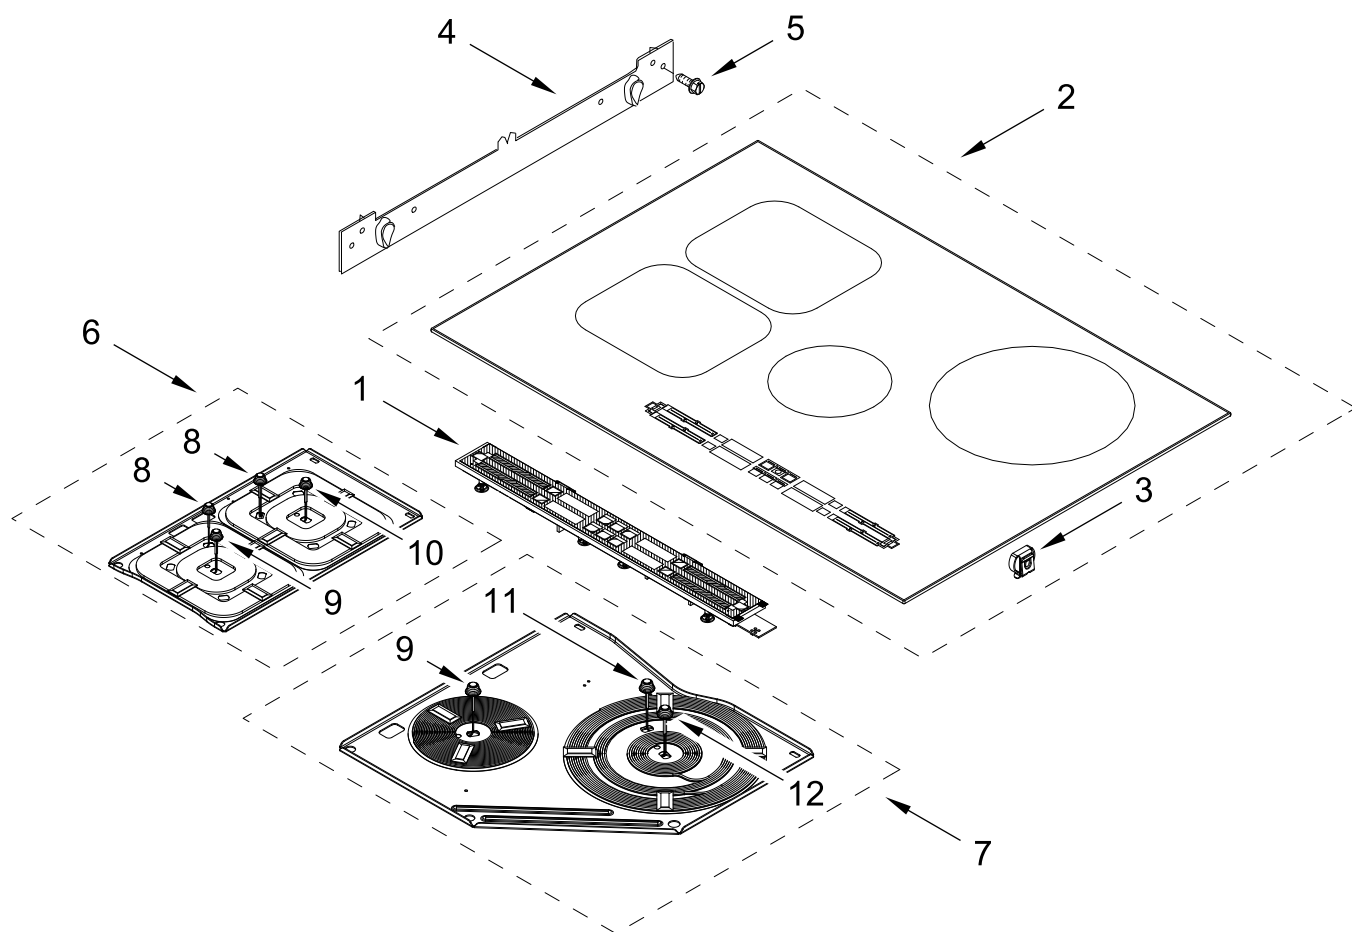

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11787316	User Interface Assembly (HMI)	6	W11669267	Induction Element Assembly	12	W11739260	Sensor Assembly
2	W11680212	Glass Cooktop Assembly (Black)	7	W11669274	Induction Element Assembly			FOLLOWING PARTS NOT ILLUSTRATED
3	W11279477	Cooktop Spring	8	W11739255	Sensor Assembly		W11702396	Cord, Power
4	W11279478	Cooktop Support Bracket	9	W11739256	Sensor Assembly			
5	7101P415-60	Screw	10	W11739258	Sensor Assembly			
			11	W11739259	Sensor Assembly			

INTERIOR PARTS

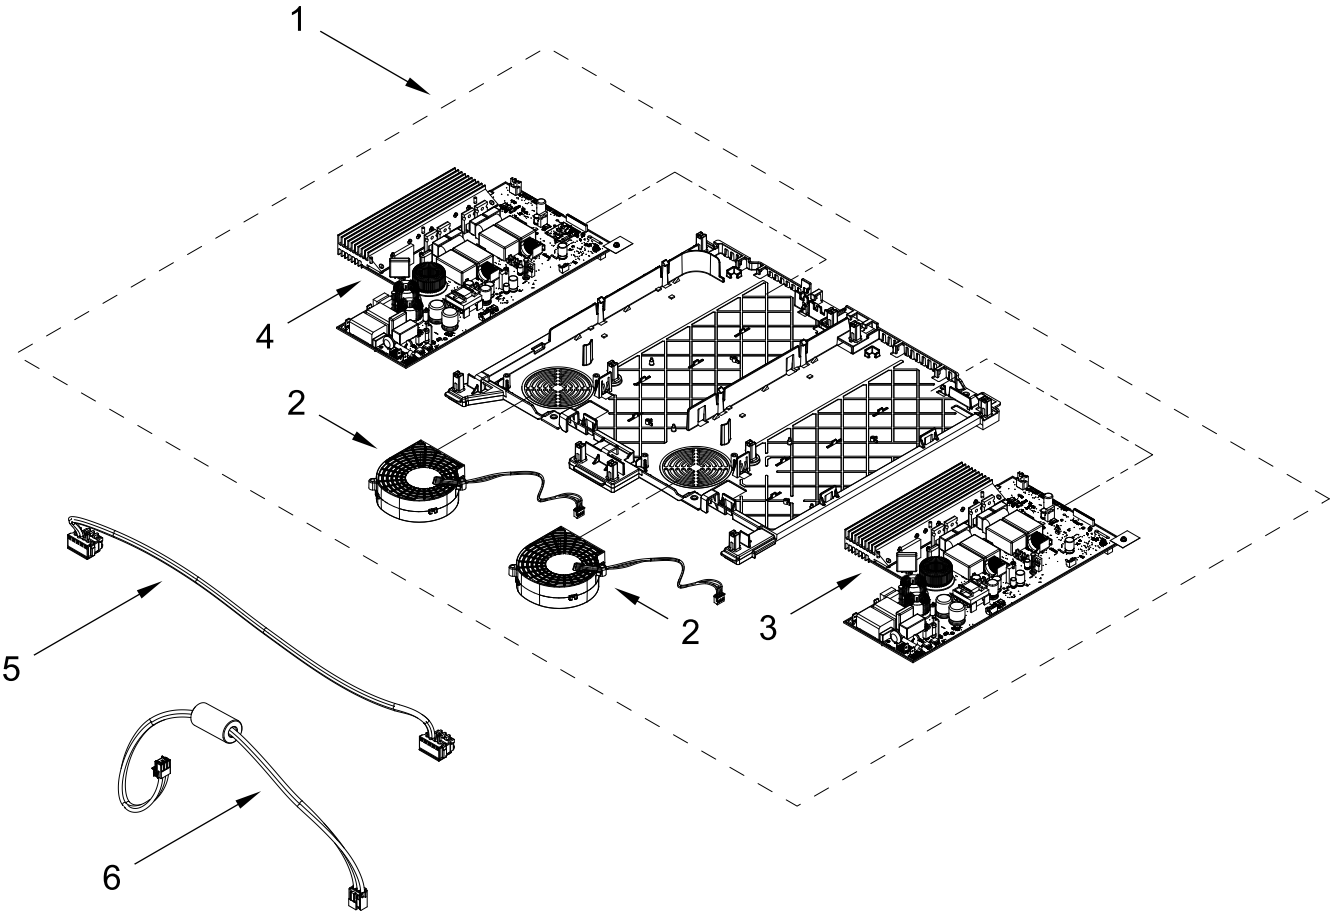

INTERIOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11807812	Control Module Assembly	4		Power Board IPC2 (Not Serviced)	5	W11643438	Communication Harness (IPC to IPC)
2	W11683445	Blower Assembly				6	W11643441	Communication Harness (HMI to IPC)
3		Power Board IPC1 (Not Serviced)						

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORIES
	8286642	Tape, Foam
	72032	Paint, Touch-up (Black, 1/2 oz)