




ELECTRIC RANGE

MODELS:

WFES4530SZ1 (Stainless)


COOKTOP PARTS

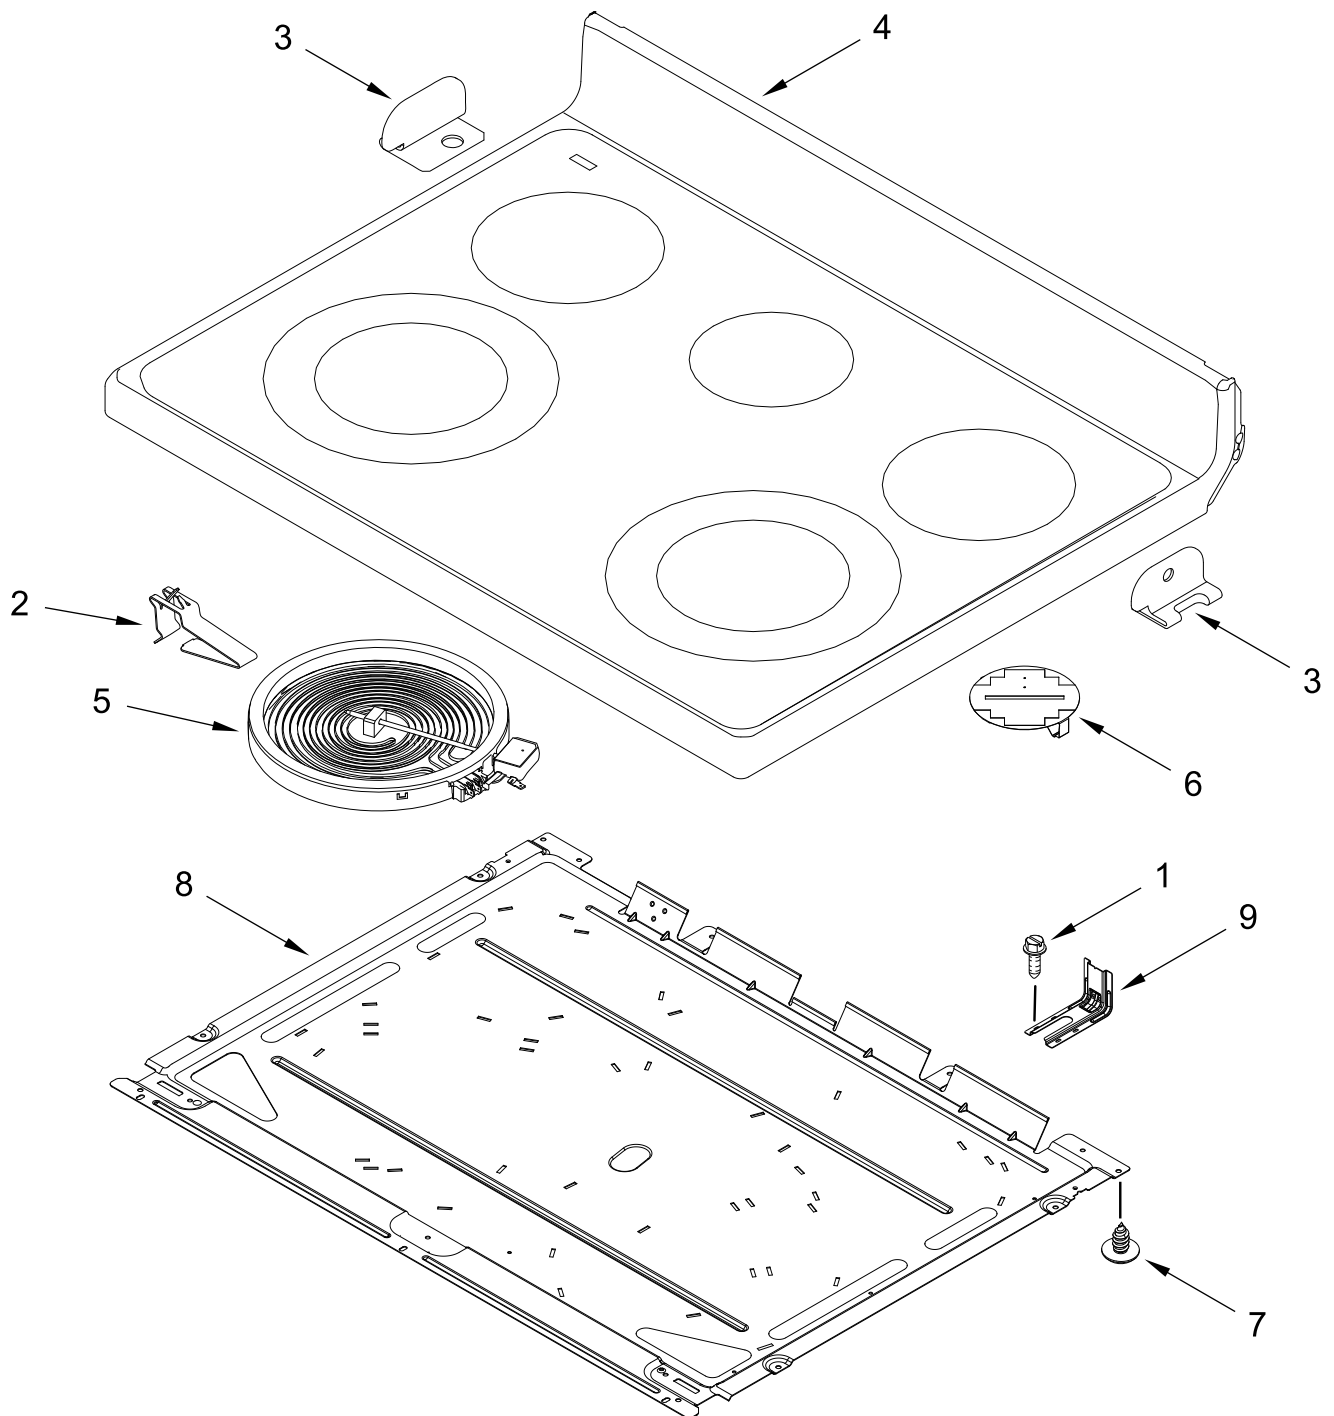

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	7101P485-60	Screw, Anti-Tip	6	W11668631	Element, Warm Zone	9	W11812917	Bracket, Anti-Tip
2	W11600012	Spring, Element			(Center)			FOLLOWING PARTS NOT ILLUSTRATED
3	W11823798	Bracket, Cooktop (Left)	7	3196169	Screw			
	W11823808	Bracket, Cooktop (Right)	8	W11640572	Pan, Radiant Element		W11825474	Main, Harness
4	W11629477	Cooktop (Black)					W11134603	Harness, Cooktop (Left)
5	W11282542	Element, (Dual 3000W)					W11134845	Harness, Cooktop (Right)
		(Left Front, Right Front)					3196896	Clip, Wire
							W11172528	Harness, Hidden Bake
	W10248261	Element (1200W) (Left Rear and Right Rear)					W11598759	Harness, Warm Zone


CONTROL PANEL PARTS

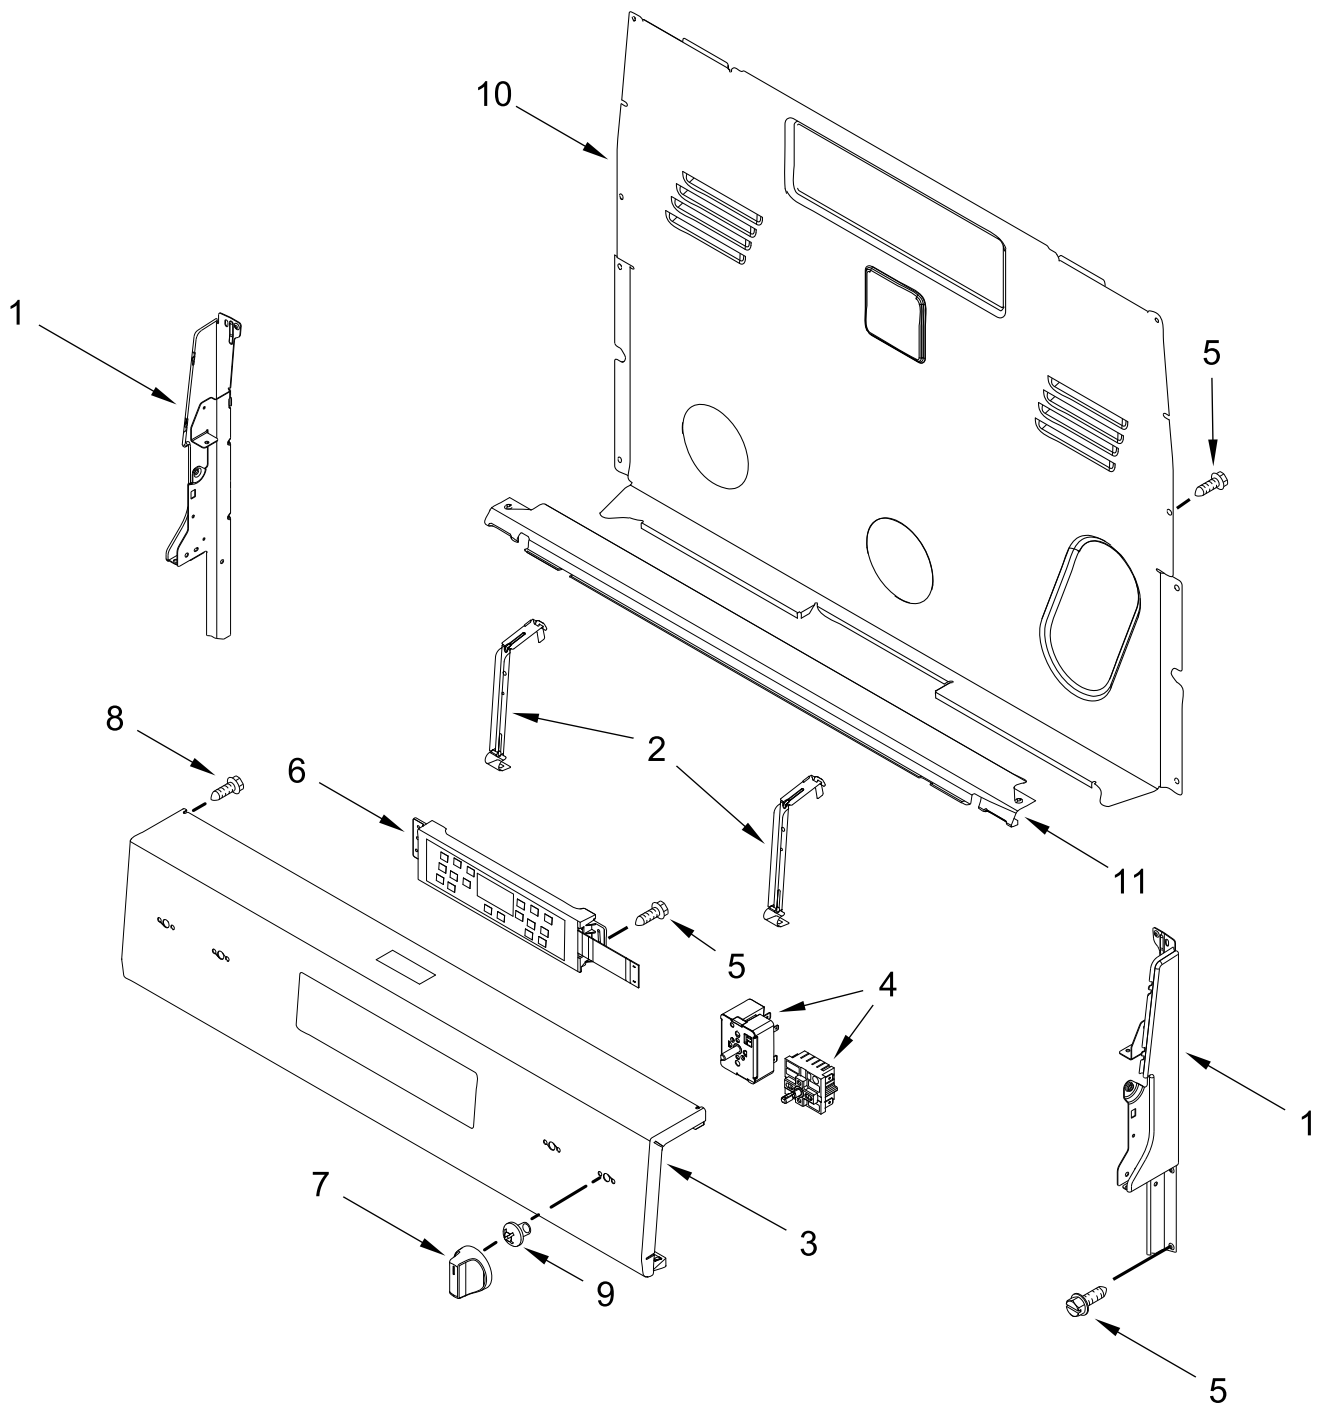

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11213290	Console Endcap (Black,Left)	4	W11769052	Switch, Infinite (Left Front, Right Front)	6	W11776485	User, Interface
	W11213292	Console Endcap (Black, Right)		W10578768	Switch, Infinite (Left Rear and Right Rear)	7	W11331197	Knob (Stainless)
2	W11290750	Bracket, Control				8	W10362924	Screw
3	W11375821	Console (Stainless)	5	3196178	Screw	9	3400882	Screw
						10	8272473	Cover, Upper Rear
						11	W11779942	Bracket, Console Mounting


CHASSIS PARTS

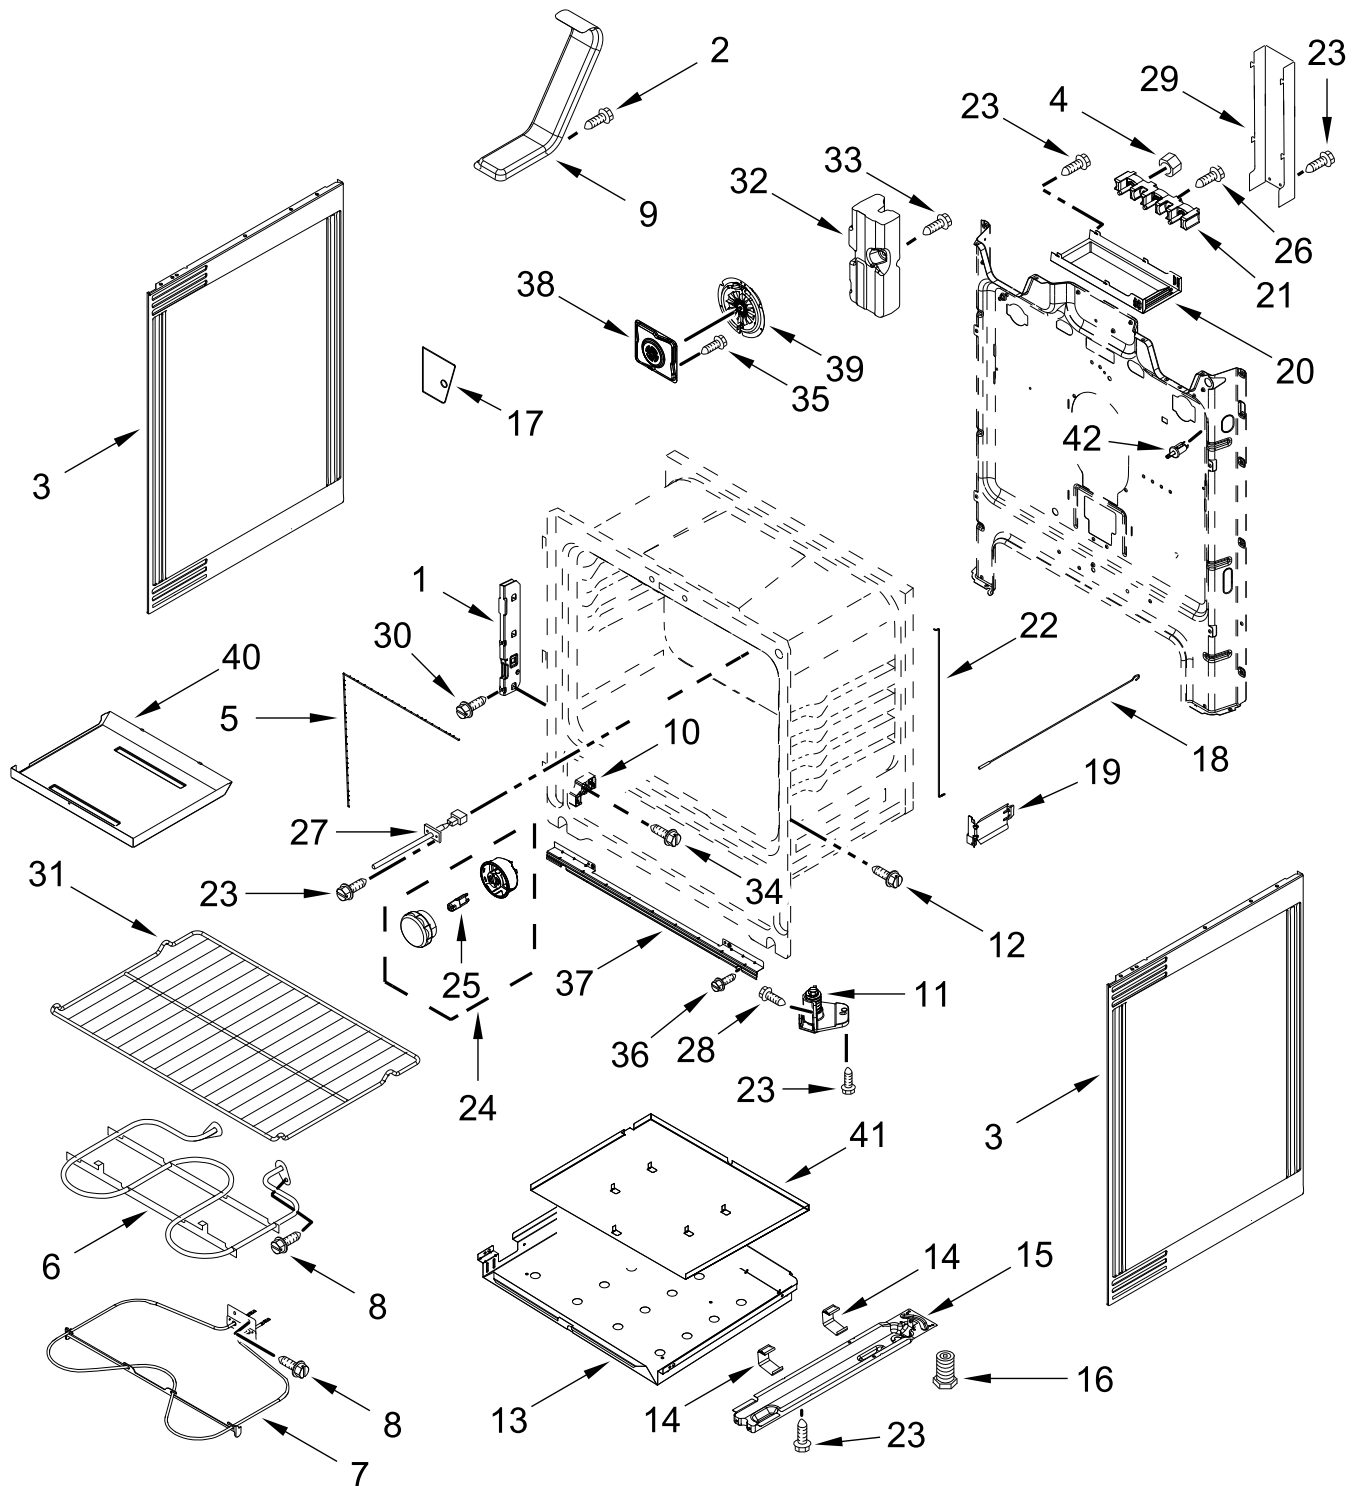

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	17	W10646923	Card, Insulator	34	3400080	Screw
2	3196154	Screw	18	9757239	Rod, Door Switch	35	W10516115	Screw
3	W11445467	Panel, Side (Black)	19	W10404688	Clip, Oven Support	36	3196560	Screw
4	3400029	Nut	20	3186034	Bracket, Service	37	W11464547	Bracket, Front Frame
5	W11491751	Seal, Door	21	W11750818	Block, Terminal (without Ground Strap)	38	W11373155	Cover, Conv Fan
6	W10308476	Element, Broil	22	W10078380	Rod, Latch	39	W11353930	Fan, Convection
7	9755770	Element, Bake	23	3196178	Screw	40	W10183712	Tray, Hidden Bake
8	3196174	Screw	24	W11634772	Light Assembly	41	W10134125	Shield, Heat
9	W10134285	Tube, Vent	25	W10571723	Bulb, Halogen (40 Watts)	42	W11511828	Switch, Door
10	W10674705	Glide, Drawer Front						FOLLOWING PARTS NOT ILLUSTRATED
11	W10341186	Front Foot Assembly	26	3400016	Screw	W10774939		Insulation, Wrap
12	W10067840	Screw	27	W10586204	Sensor	W11407378		Insulation, Back
13	W10134121	Tray, Insulation	28	3196169	Screw	W10333344		Insulation, Flue
14	W10137382	Clip, Panel	29	W10326122	Cover, Terminal Block	3196520		Clip, Wire
15	W10390008	Base Rail Assembly (Left)	30	W10031780	Screw			
	W10390007	Base Rail Assembly (Right)	31	W11173792	Rack, Oven			
			32	W10910404	Counterweight			
16	W10058460	Foot, Leveling (Rear)	33	W11034869	Screw			


DOOR PARTS

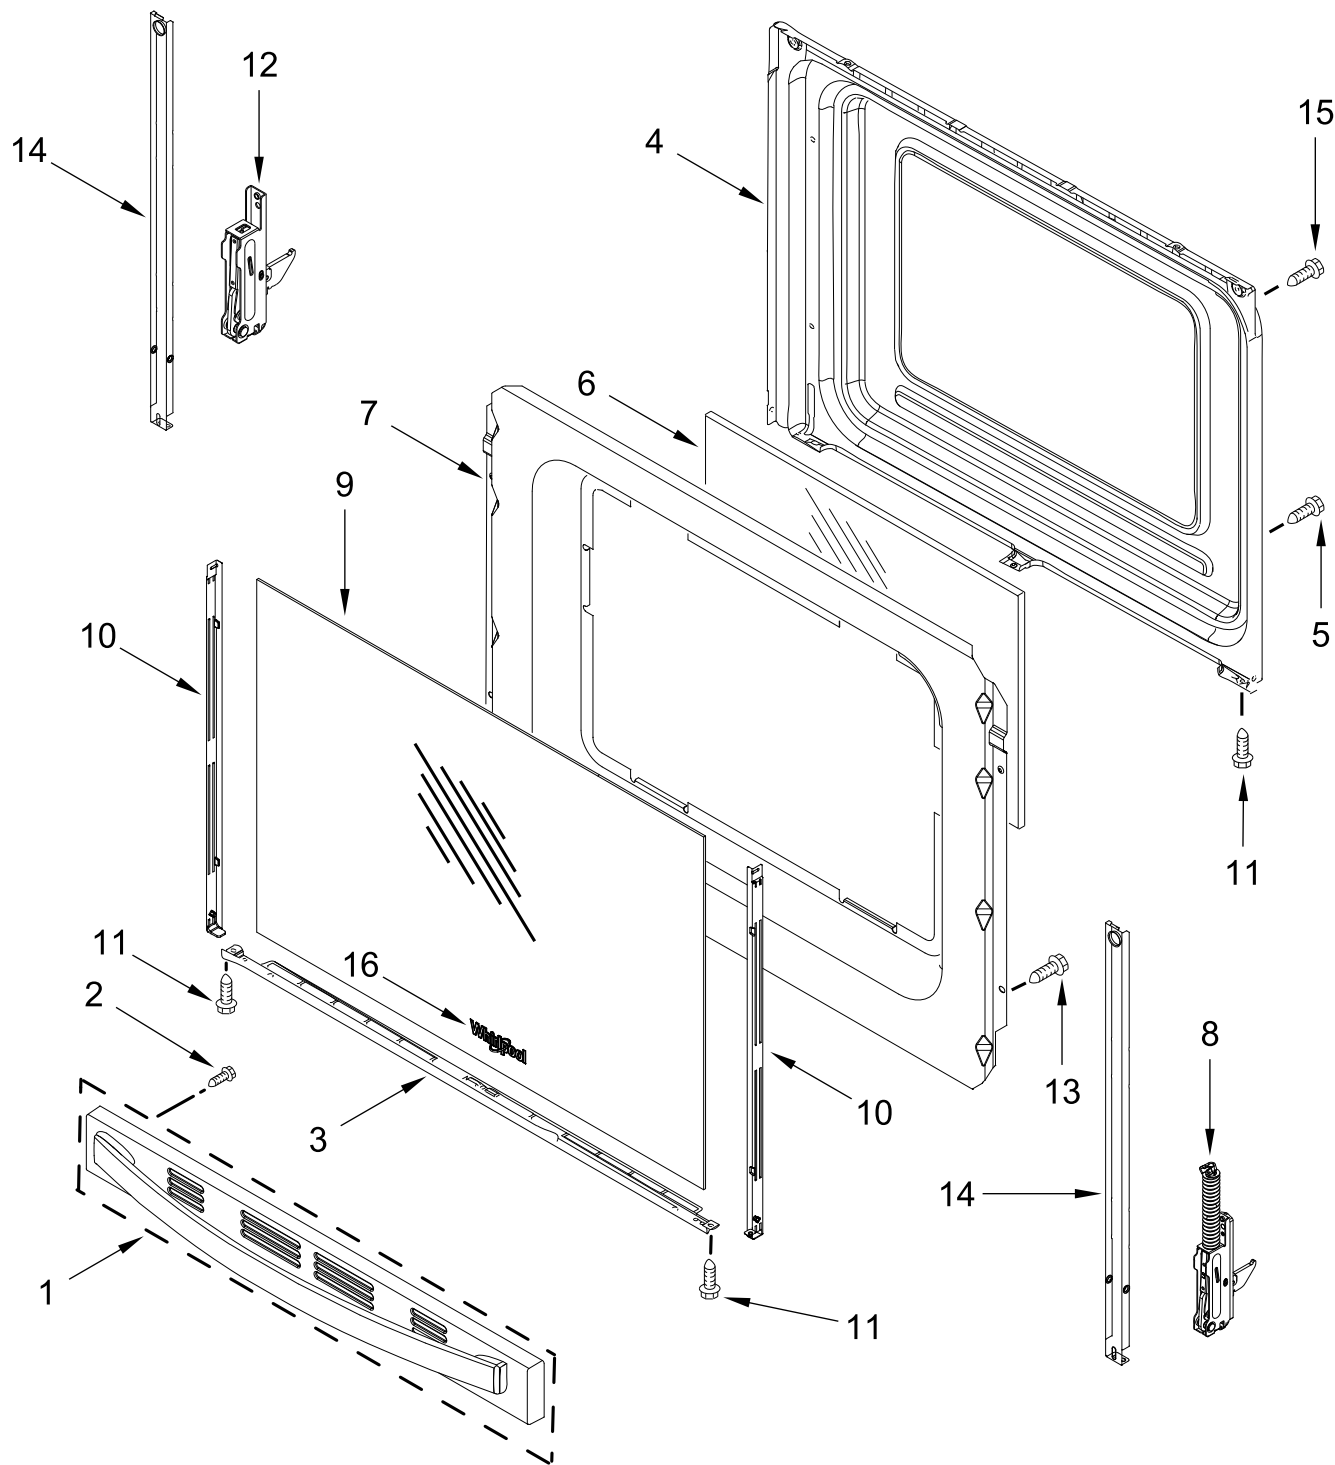

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11353054	Handle and Vent Assembly (Stainless)	8	W10299225	Hinge, Active	13	W10031780	Screw
2	W10465158	Screw	9	W11729636	Glass, Outer Door (Black)	14	W11379944	Strap, Door
3	W11444043	Trim, Bottom Door (Black)	10	W11787888	Trim, Door Side (Black, Left)	15	W10200660	Screw
4	9761344	Liner, Door		W11788027	Trim, Door Side (Black, Right)	16	W10884775	Badge
5	W10031790	Screw						
6	W11814829	Glass, Inner	11	W10327235	Screw			
7	9761501	Retainer, Insulation	12	W10299227	Hinge, Door (Passive)			

DRAWER PARTS

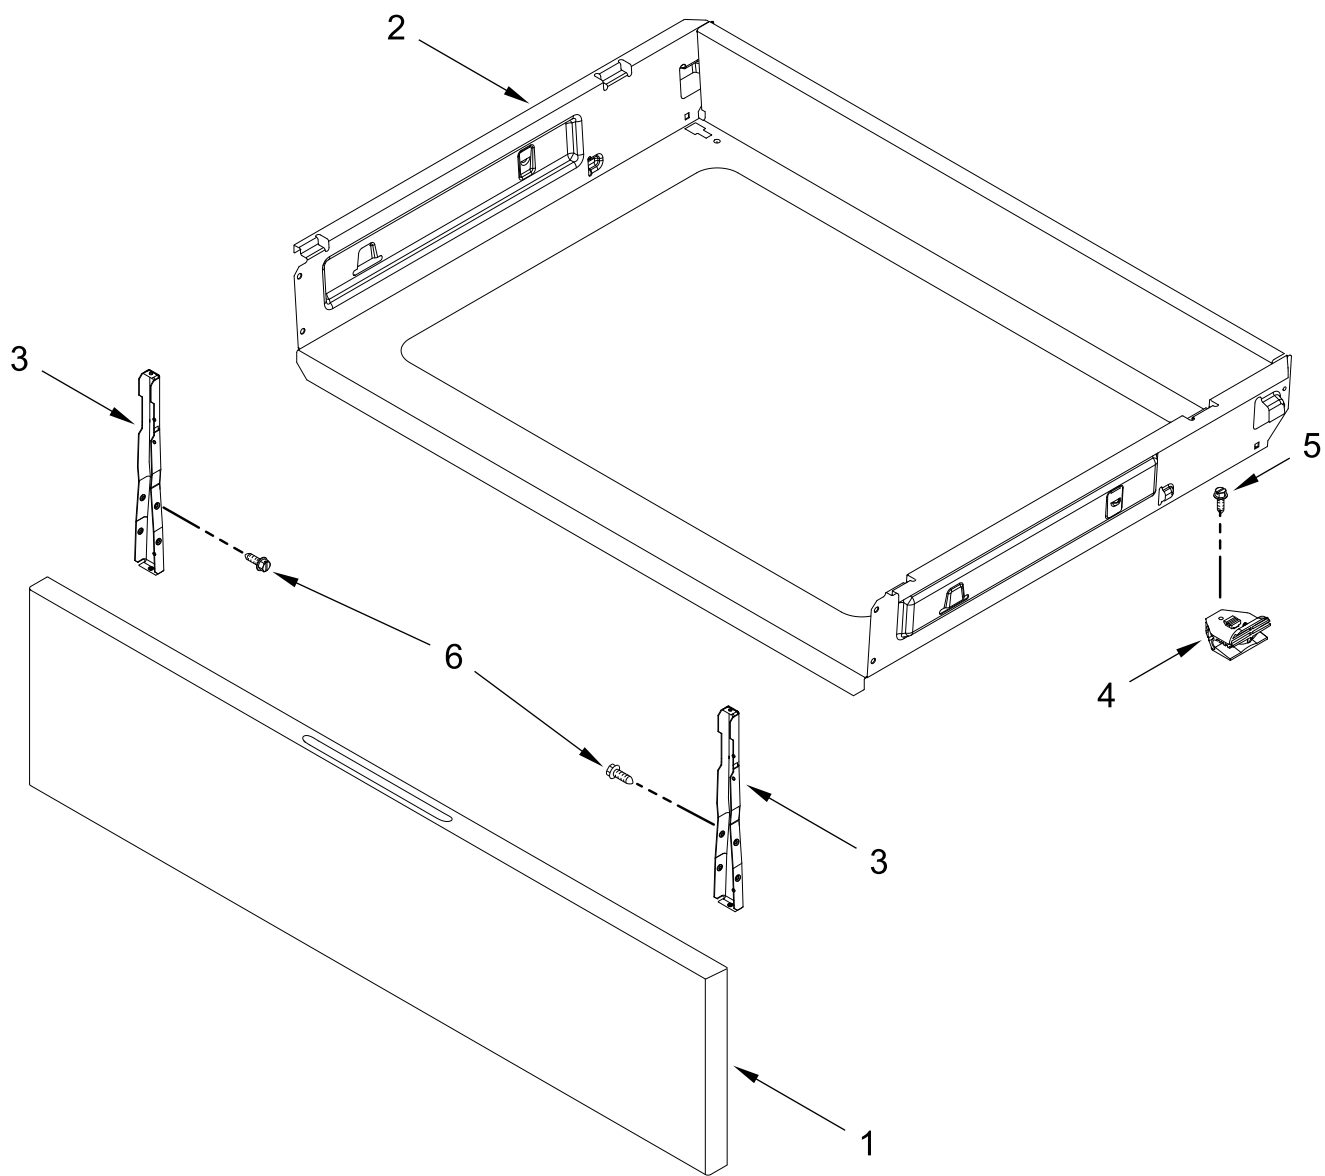

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10330070	Panel, Front (Stainless)	3	W10462910	Bracket, Mounting Drawer	5	3196165	Screw
2	W10688022	Drawer, Storage	4	W10674708	Glide, Drawer Rear	6	3196169	Screw

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		REFINISHING MATERIAL
	242756	Oven Liner Touch Up Paint
		PAINT, TOUCH-UP (1/2oz.)
	72032	Paint, Touch-up (Black, 1/2 oz)
	72017	Paint, Touch-up (White, 1/2 oz)
	511873	Paint, Touch-up (White Porcelain, 1/2 oz)
		PAINT, PRESSURIZED SPRAY (12 oz.)
	285006	Paint, Spray (Black, 12 oz)
	350939	Paint, Spray (Black Enamel, 12 oz.)
	350930	Paint, Spray (White, 12 oz)
	206922	Paint, Spray (White Primer, 12 oz)
		ACCESSORY PARTS
	3184478	Cleaner, Glass
	4396923	Broiler Pan and Grid
	W11661815	Basket, Airfry