




REFRIGERATOR

MODELS:

JFFCCE72SL02 (Stainless)


CABINET PARTS

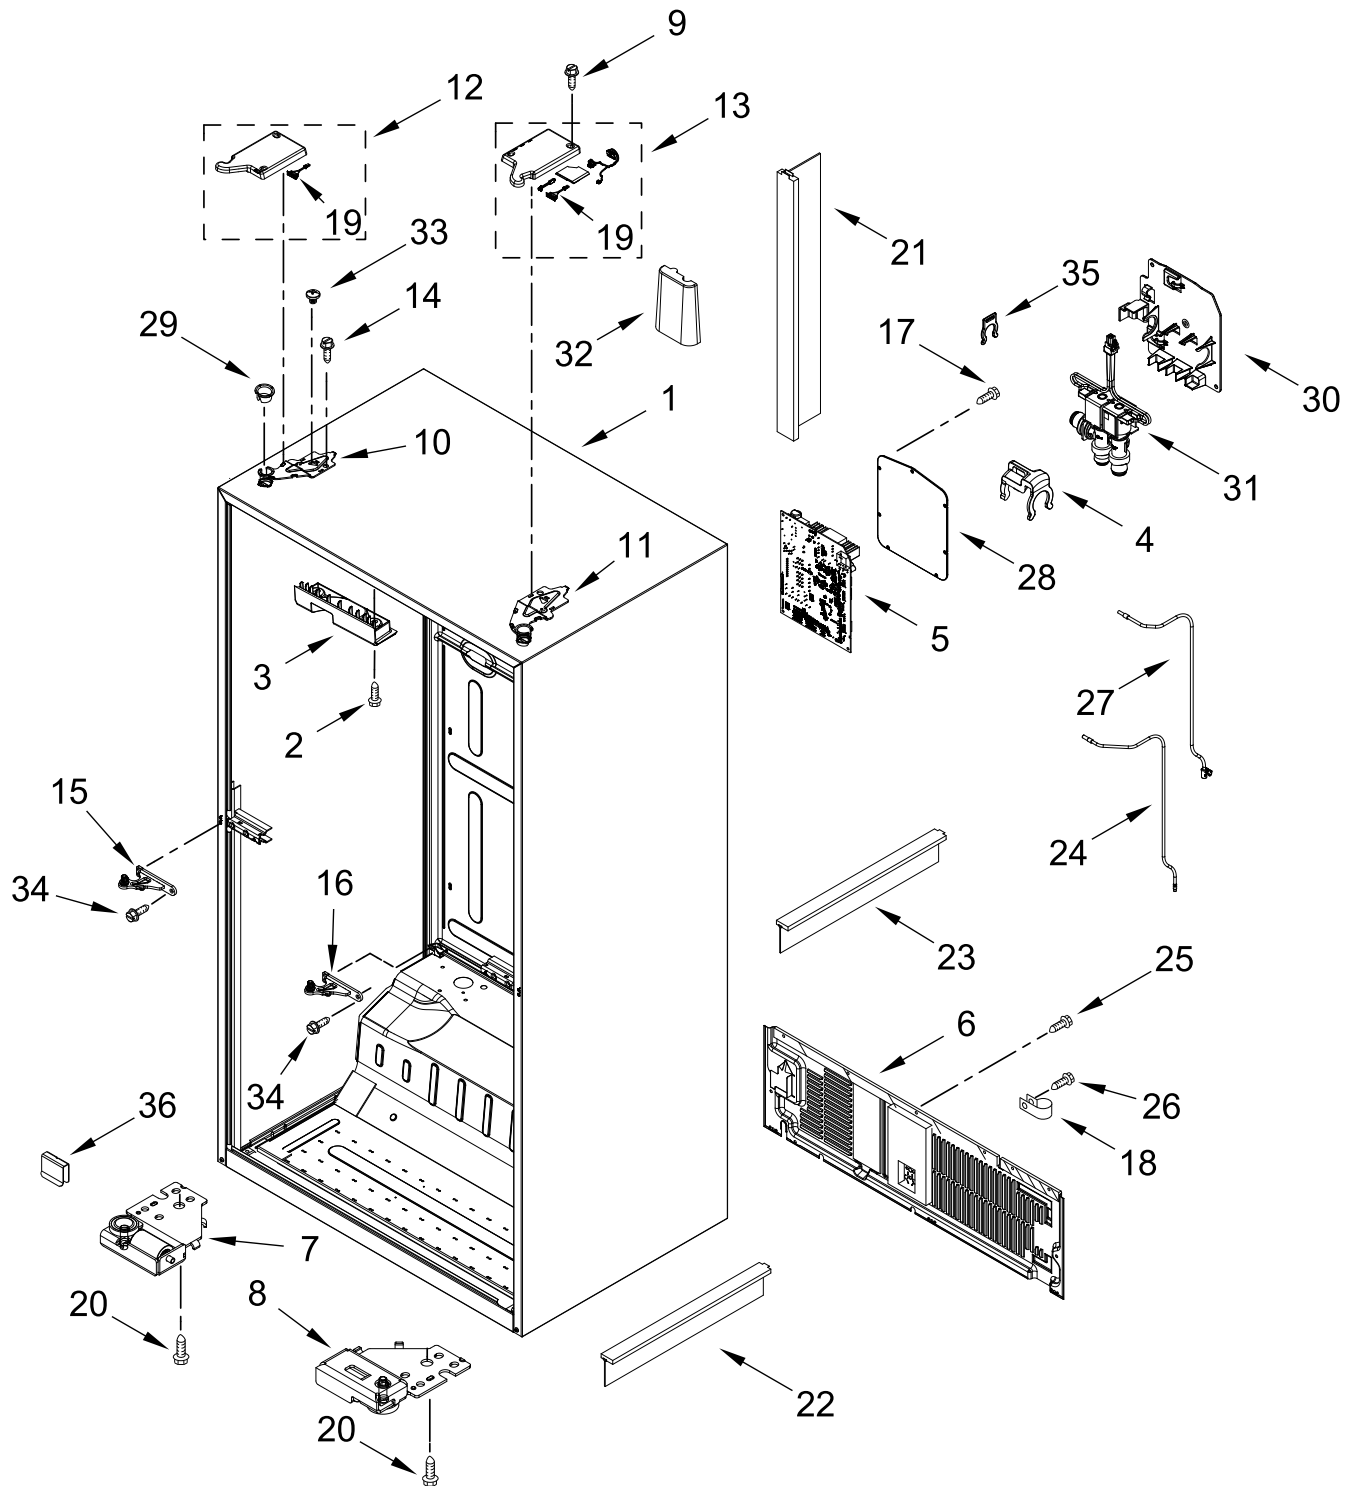

CABINET PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Cabinet (Not a Servicable Part)	13	W11799805	Hinge Cover Assembly (RH, Includes Switch, Sensor and Wifi Control)	25	W10141645	Screw
2	12990302	Screw				26	12990511	Screw
3	W11808293	Pivot Block (Grey)	14	W11438184	Screw	27	W11768988	Cabinet Water Fill Tube
4	W11252188	Double Lock Ring	15	W11553576	Center Hinge Assembly (Left Hand)	28	W11701312	Lid HV Assembly
5	W11837354	Callisto Control Board				29	W10705239	Door Wire Retainer
6	W11797551	Unit Cover Assembly	16	W11554904	Center Hinge Assembly (Right Hand)	30	W11541794	Triple Valve Bracket
7	W11561088	Roller Bracket Assembly (Left Hand)	17	694091	Screw	31	W11454781	Dual Water Valve
8	W11561087	Roller Bracket Assembly (Right Hand)	18	M0108107	Clamp, Tube	32	W11618006	Inlet Tube
9	12990501	Screw	19	W11548358	Reed Switch	33	12992601	Screw (Door Wire Ground)
10	W11342589	Top Hinge Assembly (Left Hand)	20	W10142287	Screw	34	W11729359	Screw
11	W11354191	Top Hinge Assembly (Right Hand)	21	W11681218	Air Separator Assembly	35	W11175631	Locking Ring (5/16)
12	W11799814	Hinge Cover Assembly (LH, Includes Reed Switch and Foil)	22	W11676389	Air Bottom Separator	36	W11087168	Clip, Roller
			23	W11681219	Air Separator Assembly (Cabinet)			
			24	W11768972	Water Dispenser Tube (Cabinet)			


REFRIGERATOR LINER PARTS

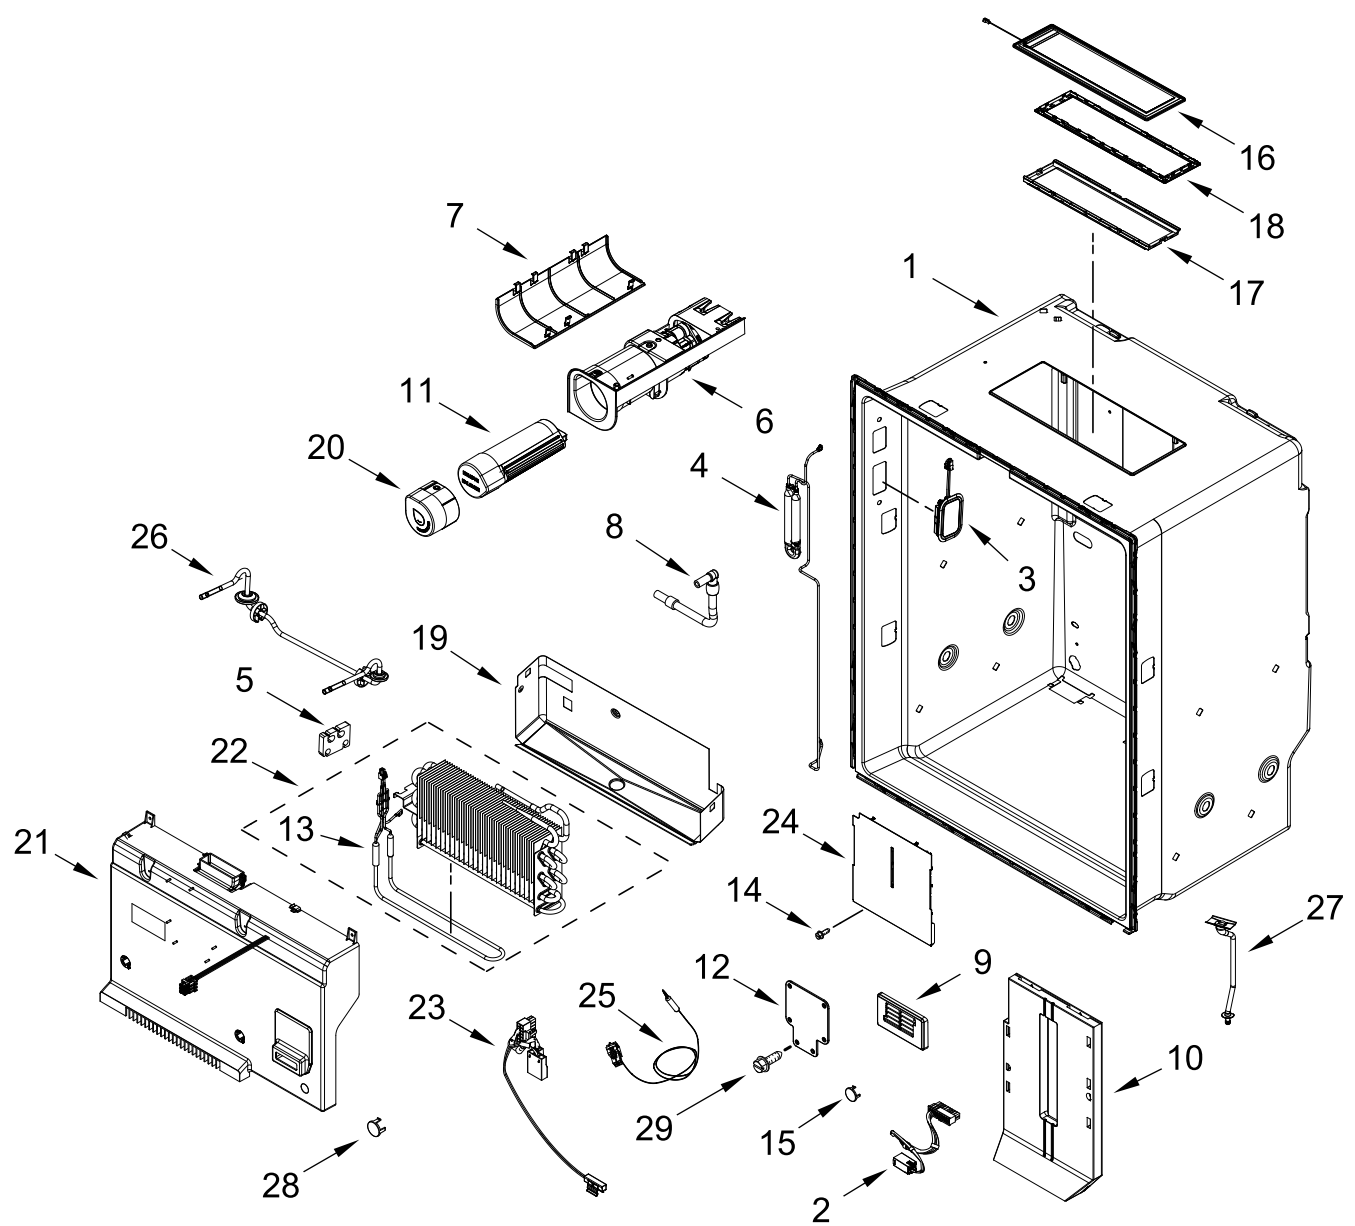

REFRIGERATOR LINER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Liner (Not A Serviceable Part)	11	W11536439	Water Filter	22	W11646274	RC Evaporator Assembly
2	W11717382	Pantry Jumper Assembly	12	W11724694	Port Lid Assembly	23	W11559745	RC Evaporator Wire Assembly (Includes Thermistor)
3	W11598838	LED Light Module (Grey)	13	W11560605	RC Defrost Heater	24	W11725812	False Wall (Grey)
4	W11768673	Water Reservoir	14	8281136	Screw	25	W11669736	Thermistor, Refrigerator Temperature
5	W11680604	Heater Bracket Gasket (RC Evaporator)	15	W11608476	Screw Cover (Grey)	26	W11682877	Suction Tube Assembly
6	W11803105	Water Filter Housing (Grey)	16	W11549348	Sky Light LED Panel	27	W11625314	RC Evaporator Drain Tube
7	W11611640	Water Filter Housing Cover (Grey)	17	W11612596	Sky Light Lens (White Fog)	28	W11594922	Screw Cover (Grey)
8	W11768632	Filter Outlet Tube	18	W11639426	Sky Light Trim (Grey)	29	12991701	Screw (Stainless)
9	W11608374	Air Return Duct Grille	19	W11541797	RC Evaporator Heat Shield			
10	W11547384	Air Tower Assembly	20	W11669933	Water Filter Housing Plug (Grey)			
			21	W11607827	RC Evaporator Cover (Grey)			


FREEZER LINER PARTS

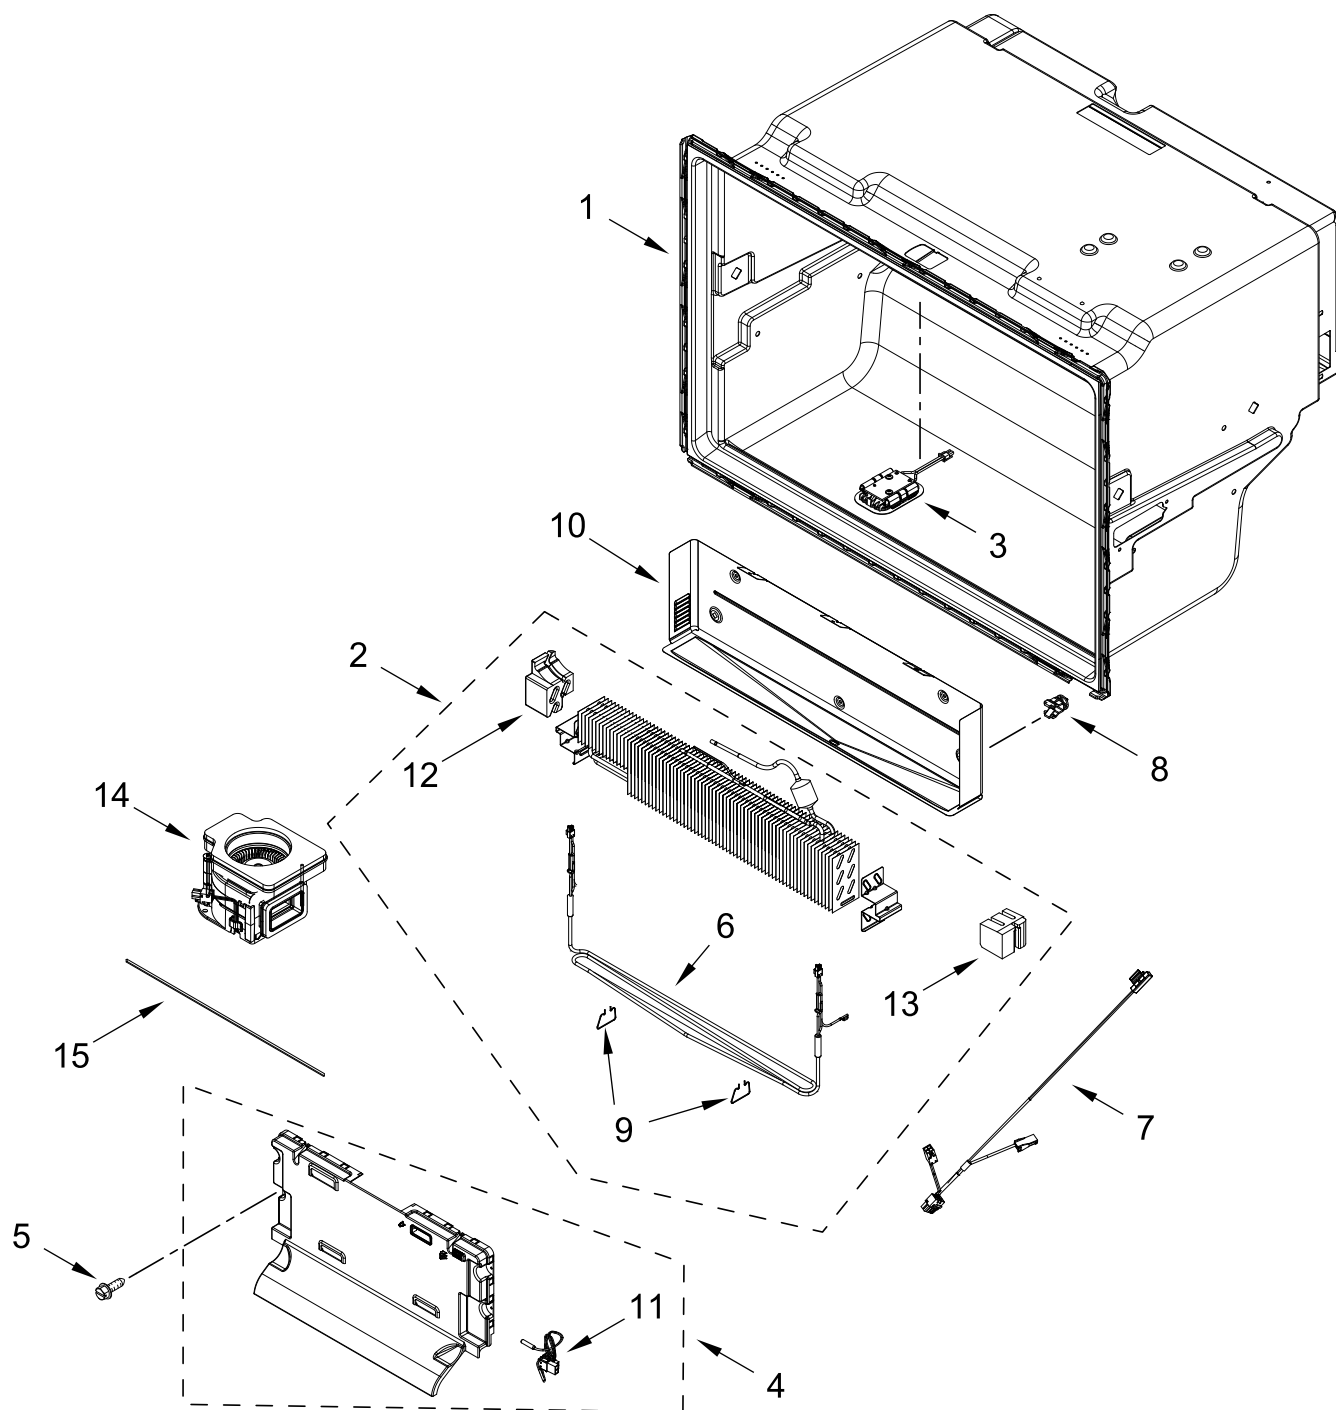

FREEZER LINER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Liner (Not A Serviceable Part)	5	12990501	Screw	11	W11627842	Thermistor, Freezer Temperature
2	W11646273	FC Evaporator Assembly	6	W11560604	Defrost Heater	12	W11563438	Air Dam (Left Hand)
3	W11228040	LED Light Module	7	W11559733	Evaporator Wire Assembly	13	W11563437	Air Dam (Right Hand)
4	W11609205	Evaporator Cover (Includes Fan Motor and Jumper Wire With Thermistor)	8	W11604774	Evaporator Clip	14	W11620573	Icebox Fan Assembly
			9	W11365795	Defrost Heater Clip	15	W10240370	Gasket, Evaporator Cover
			10	W11684743	FC Evaporator Heat Shield			


REFRIGERATOR DOOR PARTS

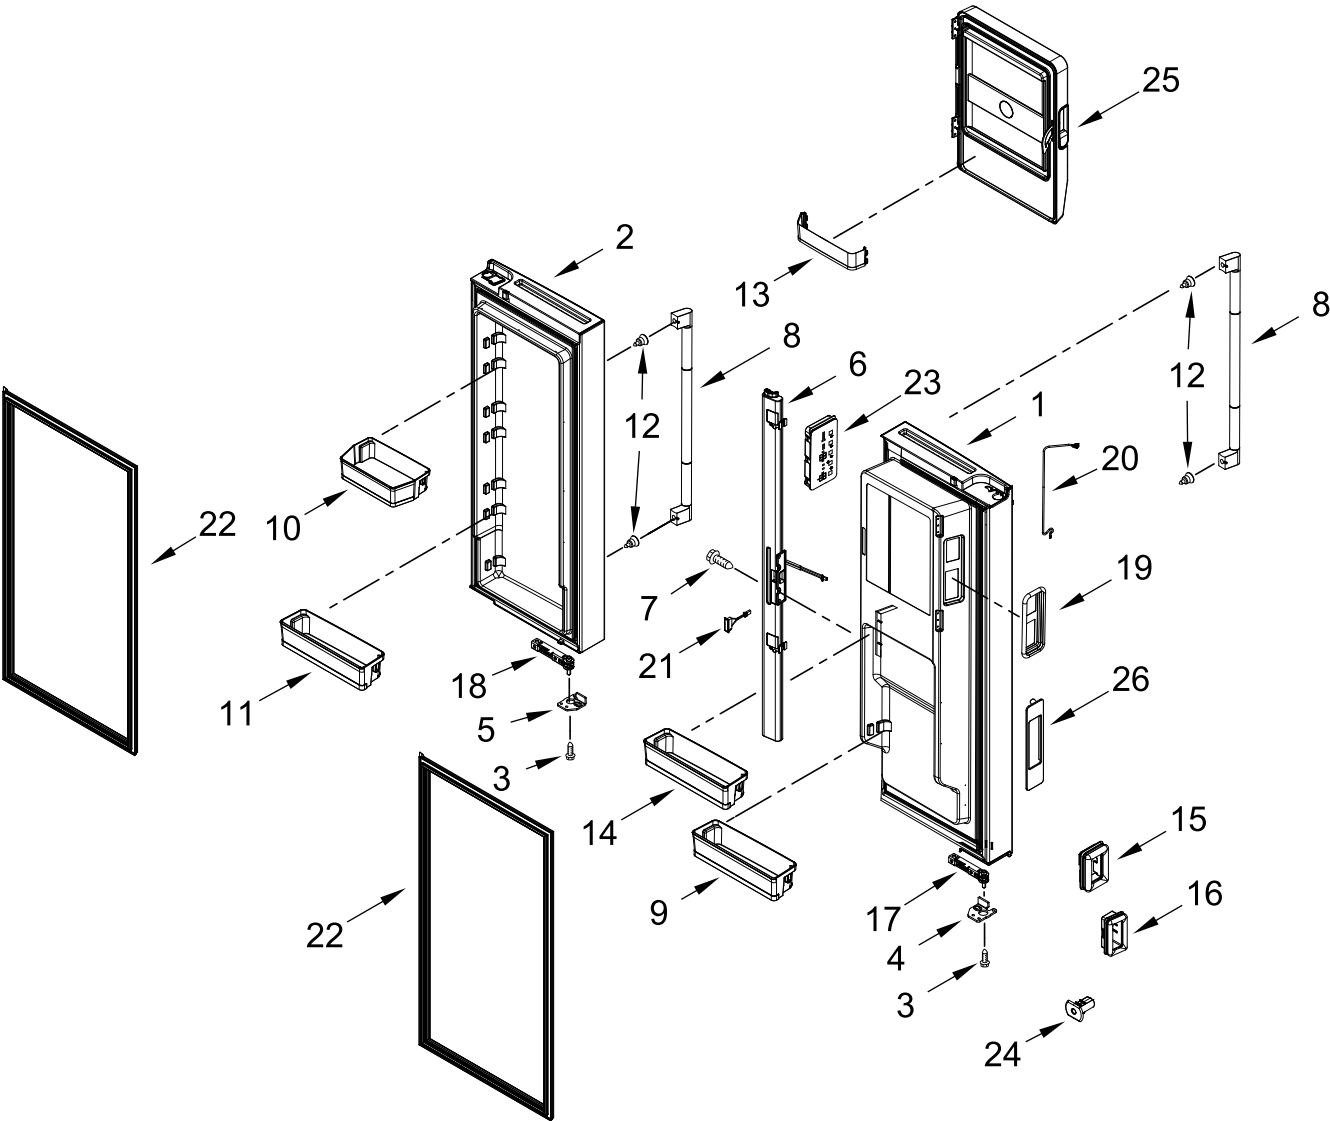

REFRIGERATOR DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11846177	Left Door Assembly (Stainless, Includes Door Gasket)	10	W11657262	Gallon Bin (Right Hand)	19	W11611713	Supply Gasket
2	W11841525	Right Door Assembly (Stainless, Includes Door Gasket)	11	W11657264	Bottom Bin (Right Hand)	20	W11768994	Dispenser Water Tube
3	8281136	Screw	12	W11328753	Screw	21	W11553901	Reed Switch
4	W11562609	Door Stopper (Black, Left Hand)	13	W11657272	Ice Door Trivet	22	W11586646	Refrigerator Door Gasket (Grey)
5	W11562612	Door Stopper (Black, Right Hand)	14	W11657269	Dispenser Bin (Left Hand)	23	W11582129	Temperature Control UI
6	W11623119	Mullion Assembly	15	W11740632	Door Supply Duct Assembly	24	W11719970	Retainer Plug
7	12990204	Screw	16	W11740633	Return Duct Assembly	25	W11567180	Ice Door Assembly
8	W11238822	Door Handle (Stainless)	17	W11550700	Door Closer (Left Hand)	26	W11685003	Door Duct Retainer
9	W11657266	Bottom Bin (Left Hand)	18	W11550699	Door Closer (Right Hand)			


FREEZER DOOR PARTS

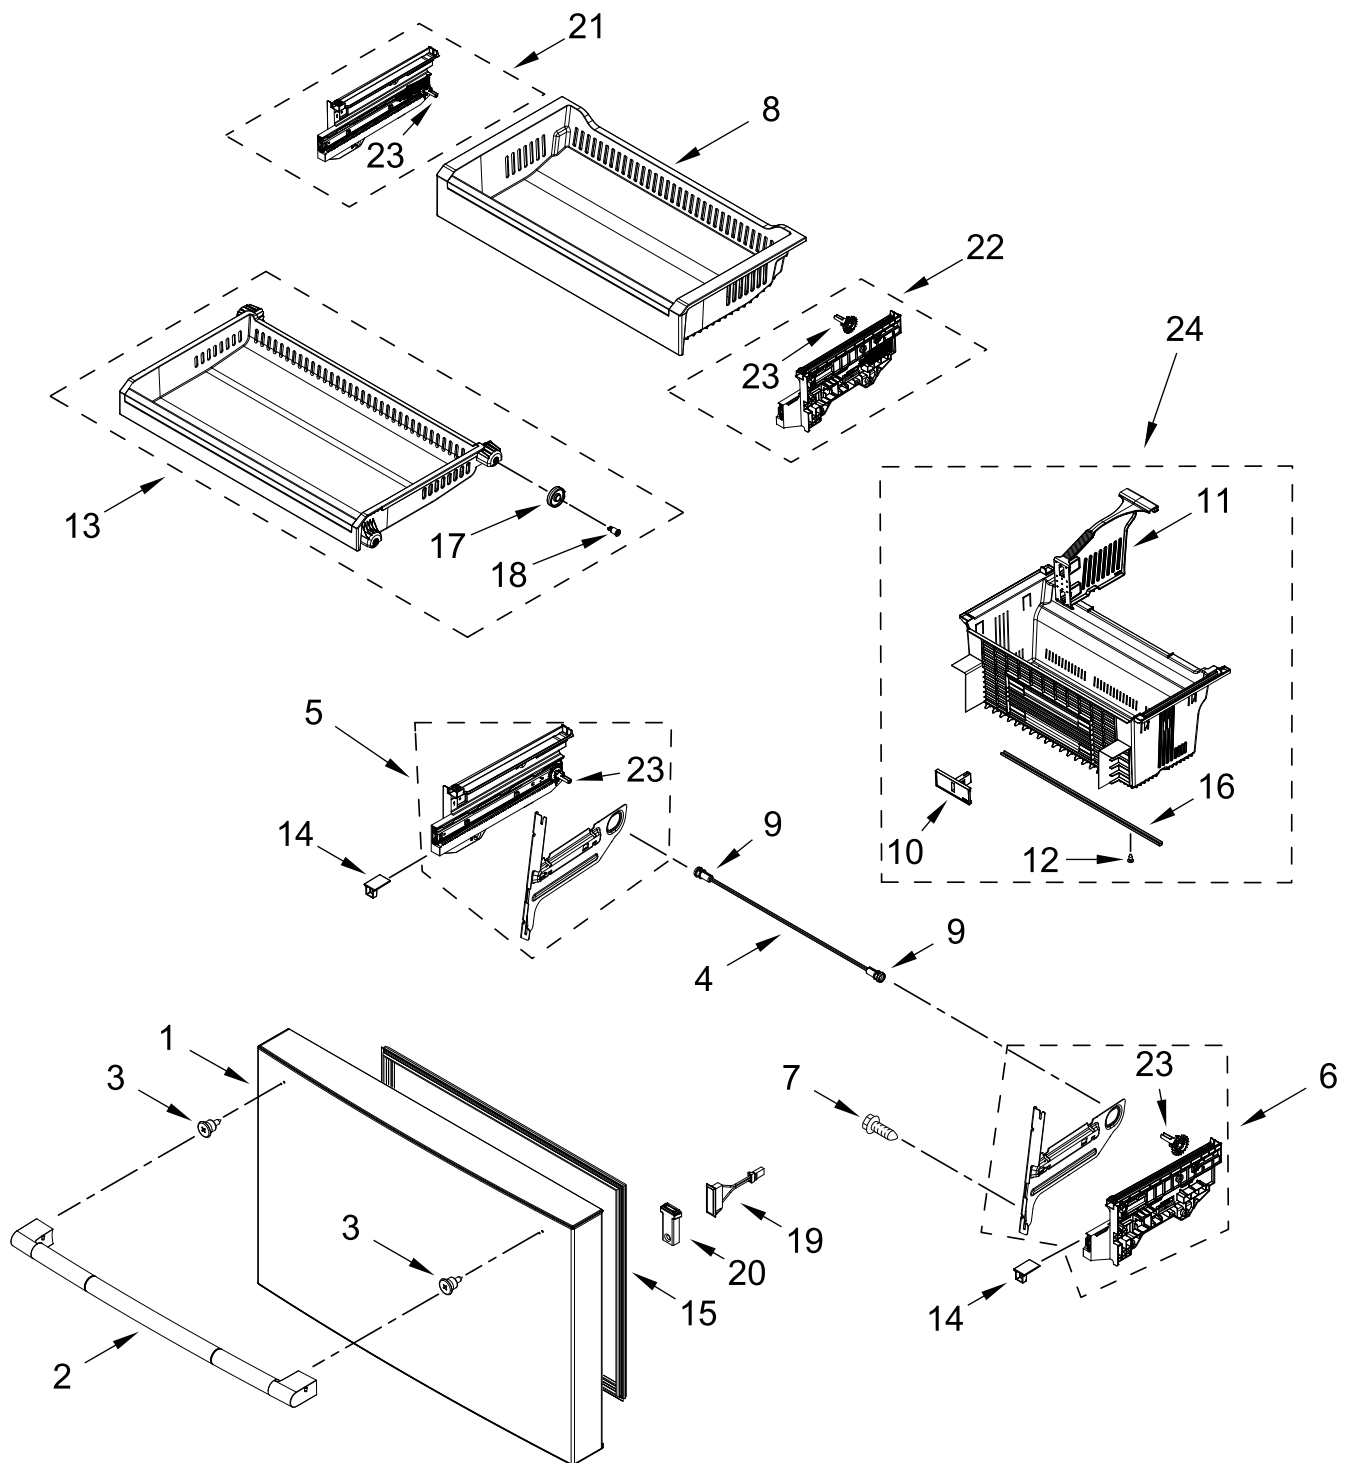

FREEZER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11797003	Freezer Door Assembly (Stainless, Includes Door Gasket)	8	W11578716	Top Basket Assembly (Grey)	17	W10838061	Pan Roller
2	W11238823	Door Handle (Stainless)	9	W10277361	Gear Collar	18	W10839805	Roller Axle
3	W11328753	Screw	10	W11632631	Slider Basket	19	W11553901	Reed Switch
4	W11611561	Shaft Rack Assembly (Bottom)	11	W11727687	Bottom Basket Divider	20	W11658594	Reed Switch Holder
5	W11578713	FC Adapter Assembly (Grey, Left Side)	12	W11113841	Screw	21	W11632439	FC Adapter Assembly (Left Hand)
6	W11579071	FC Adapter Assembly (Grey, Right Side)	13	W11579303	Middle Basket Assembly (Grey)	22	W11632447	FC Adapter Assembly (Right Hand)
7	12990518	Screw	14	W11632622	Adapter Safety Clip	23	W10277360	Gear, Spur
			15	W11586644	Freezer Door Gasket (Grey)	24	W11632629	Bottom Basket Assembly
			16	W11604038	Pan Support			


UNIT PARTS

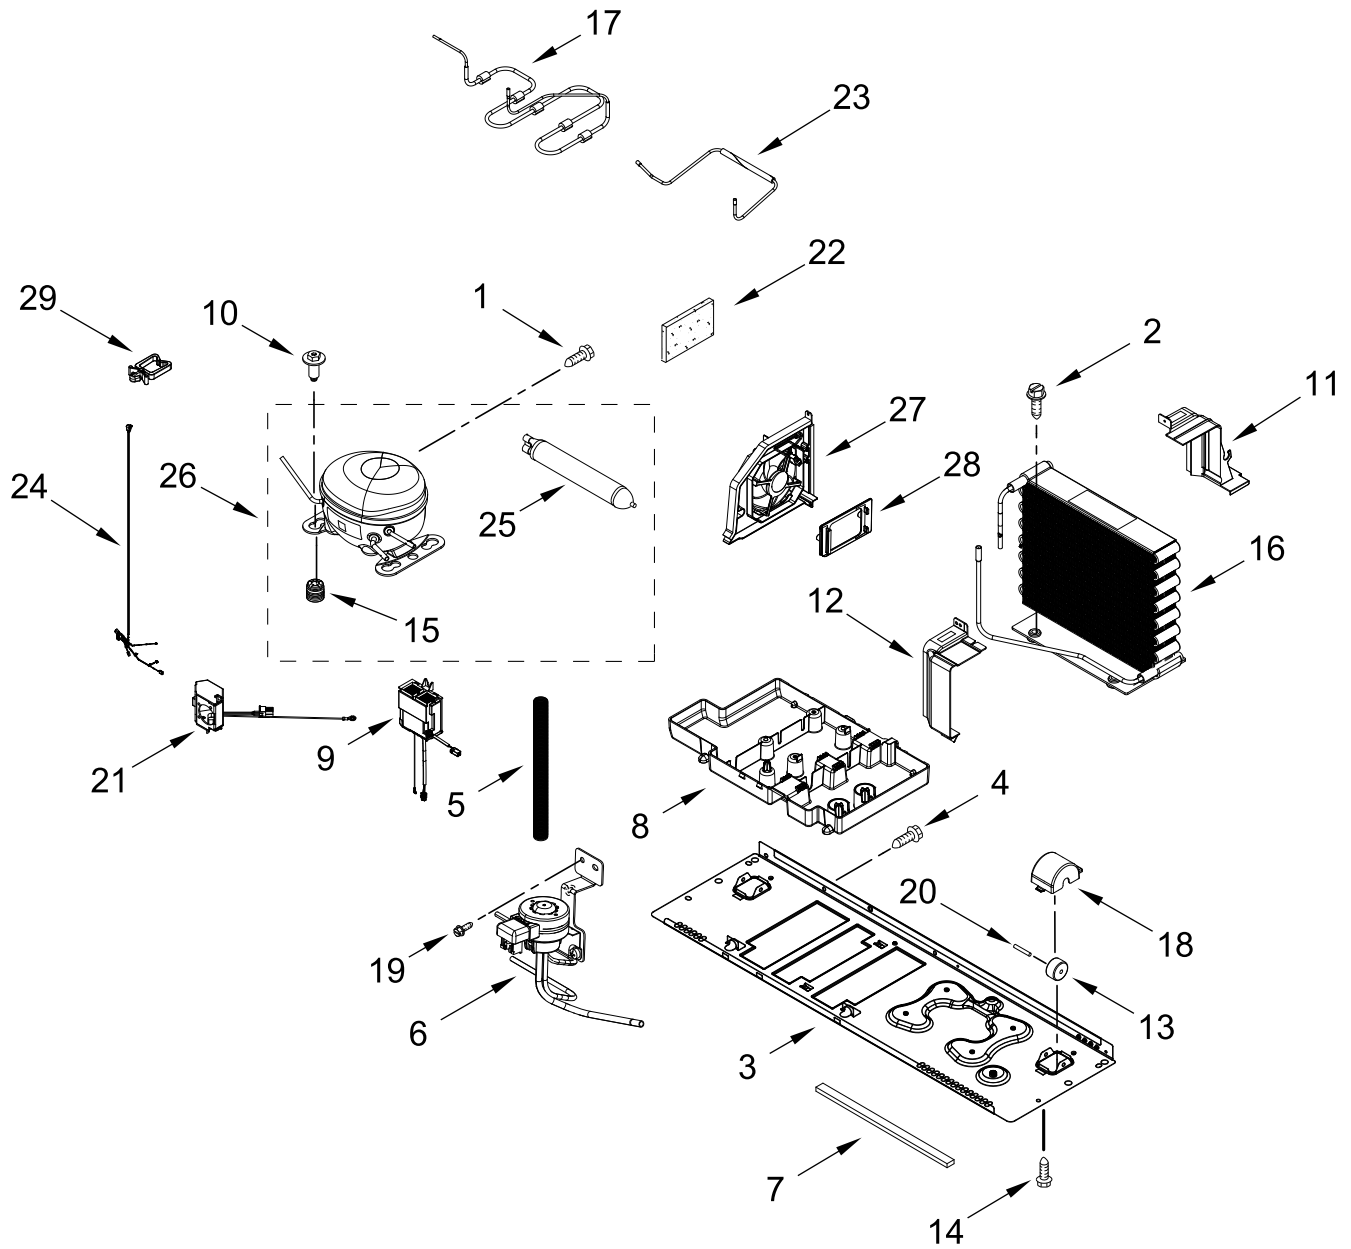

UNIT PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10141625	Screw	13	W10774846	Roller	24	W11781531	Unit Wire Assembly (Includes Power Cord)
2	W10820084	Screw	14	W10142287	Screw	25	W10805035	Drier (Service Drier Without Dye)
3	W11543386	Compressor Baseplate	15	W10806346	Grommet, Compressor	26	W11754926	Compressor
4	12990511	Screw	16	W11668494	Condenser Assembly	27	W11613932	Condenser Fan Assembly
5	W11559668	Drain Tube Extension	17	W11610529	Precooler Assembly	28	W11684787	Retainer Bracket
6	W11558772	3-Way Valve Assembly	18	W11613273	Roller Cover	29	2223913	Clip
7	W11642492	Baseplate Gasket	19	W10141645	Screw			REFRIGERANT CHARGE
8	W11678106	Water Tray	20	W10285005	Axle, Roller			65 grams (R600a)
9	W11786369	Inverter Box Assembly	21	W11682571	Inverter Connector Cover			
10	W11417341	Screw	22	2215468	Sound Insulation			
11	W11611636	Rear Shroud	23	W11614556	Suction Tube Assembly			
12	W11613272	Front Shroud						


SHELF PARTS

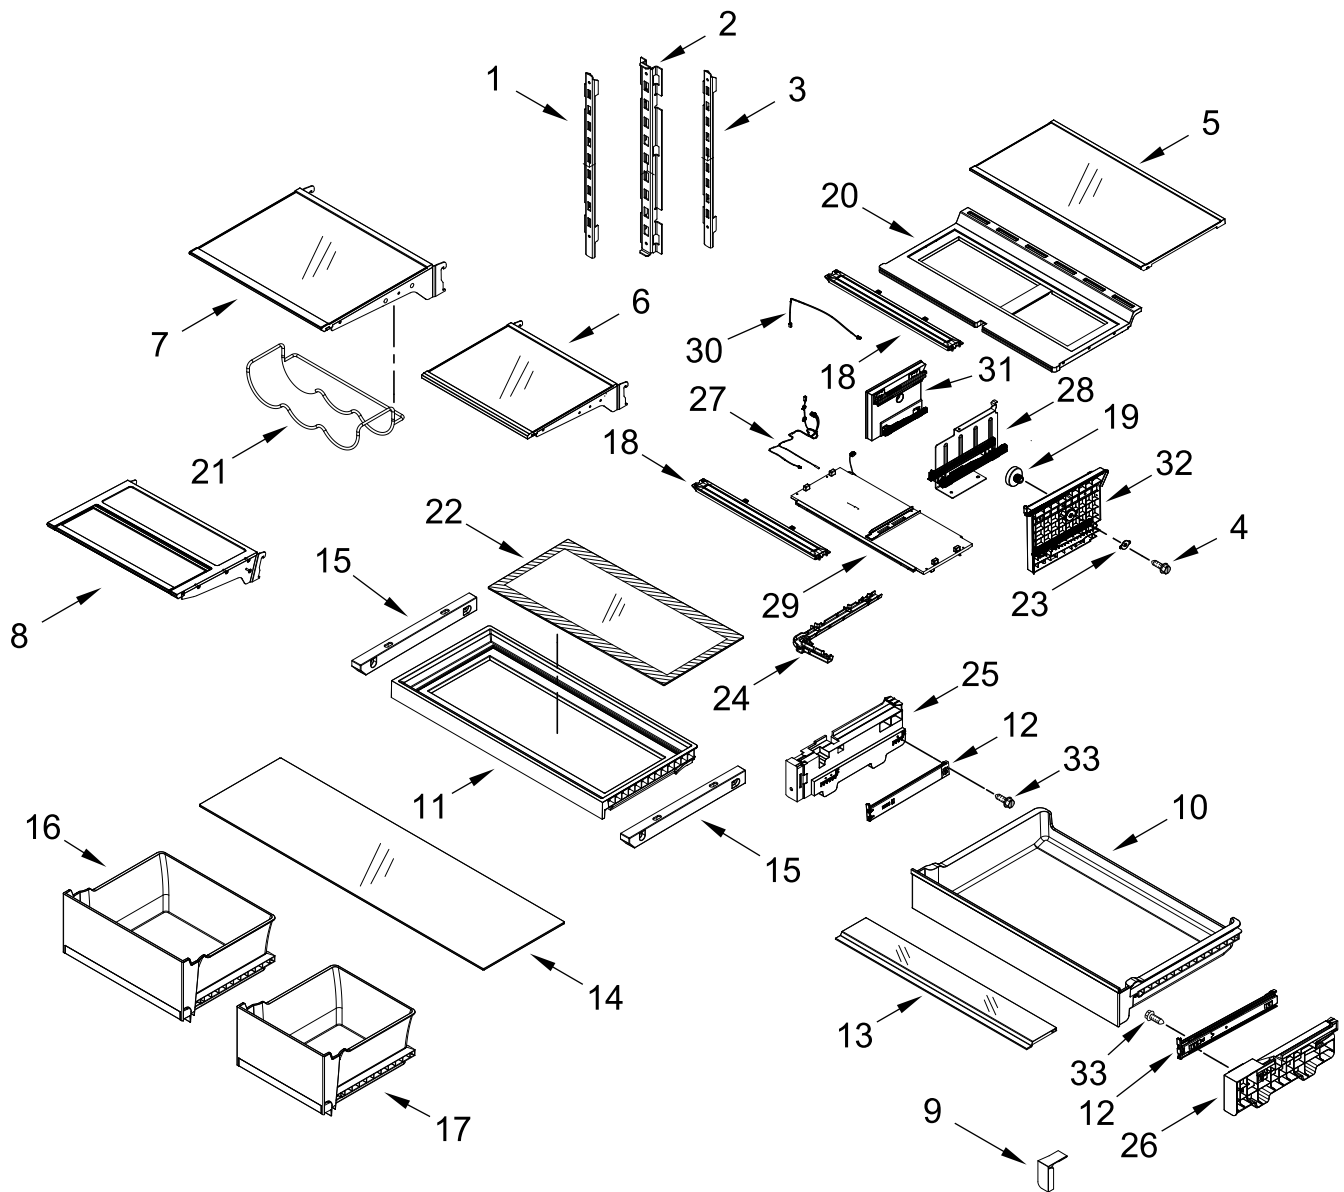

SHELF PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11580674	Shelf Ladder (Left Side)	13	W11699446	Pantry Crisper Pan Lid	26	W11579716	Pantry Adapter (Grey, Right Hand)
2	W11580676	Shelf Ladder (Center)	14	W11664614	Glass Crisper Cover	27	W11559750	Thermistor Wire Assembly (Pantry)
3	W11599145	Shelf Ladder (Right Side)	15	W11639975	Shelf Adapter (Left Hand)	28	W11635668	Crisper Center Support (Grey)
4	W10834284	Screw (Grey)		W11639976	Shelf Adapter (Right Hand)	29	W11718154	Crisper Cover (Grey, Includes Thermistor Harness)
5	W11635988	Full Width Shelf	16	W11635676	Crisper Pan (Left Hand)	30	W11652427	Crisper LED Jumper Wire
6	W11635897	Stationary Shelf	17	W11635692	Crisper Pan (Right Hand)	31	W11635670	Crisper Adapter (Left Hand)
7	W11677827	Undershelf Wine Assembly	18	W11651976	LED, Crisper Strip	32	W11635672	Crisper Adapter (Right Hand)
8	W11579007	Tuck Shelf Assembly (Grey)	19	W11635707	Side Support Knob	33	12990302	Screw
9	W11666150	Pantry Adapter Cover (Left Hand)	20	W11718150	Pantry Crisper Cover			
	W11666167	Pantry Adapter Cover (Grey, Right Hand)	21	W11691589	Wine Rack			
10	W11579770	Pantry Crisper Pan	22	W11678909	Platter Glass			
11	W11635698	Platter Frame	23	W10840918	Side Support Flange			
12	W11565942	Pantry Glide (Left Hand)	24	W11656716	Crisper Light Cover (Grey)			
	W11540928	Pantry Glide (Right Hand)	25	W11579713	Pantry Adapter (Grey, Left Hand)			


DISPENSER FRONT PARTS

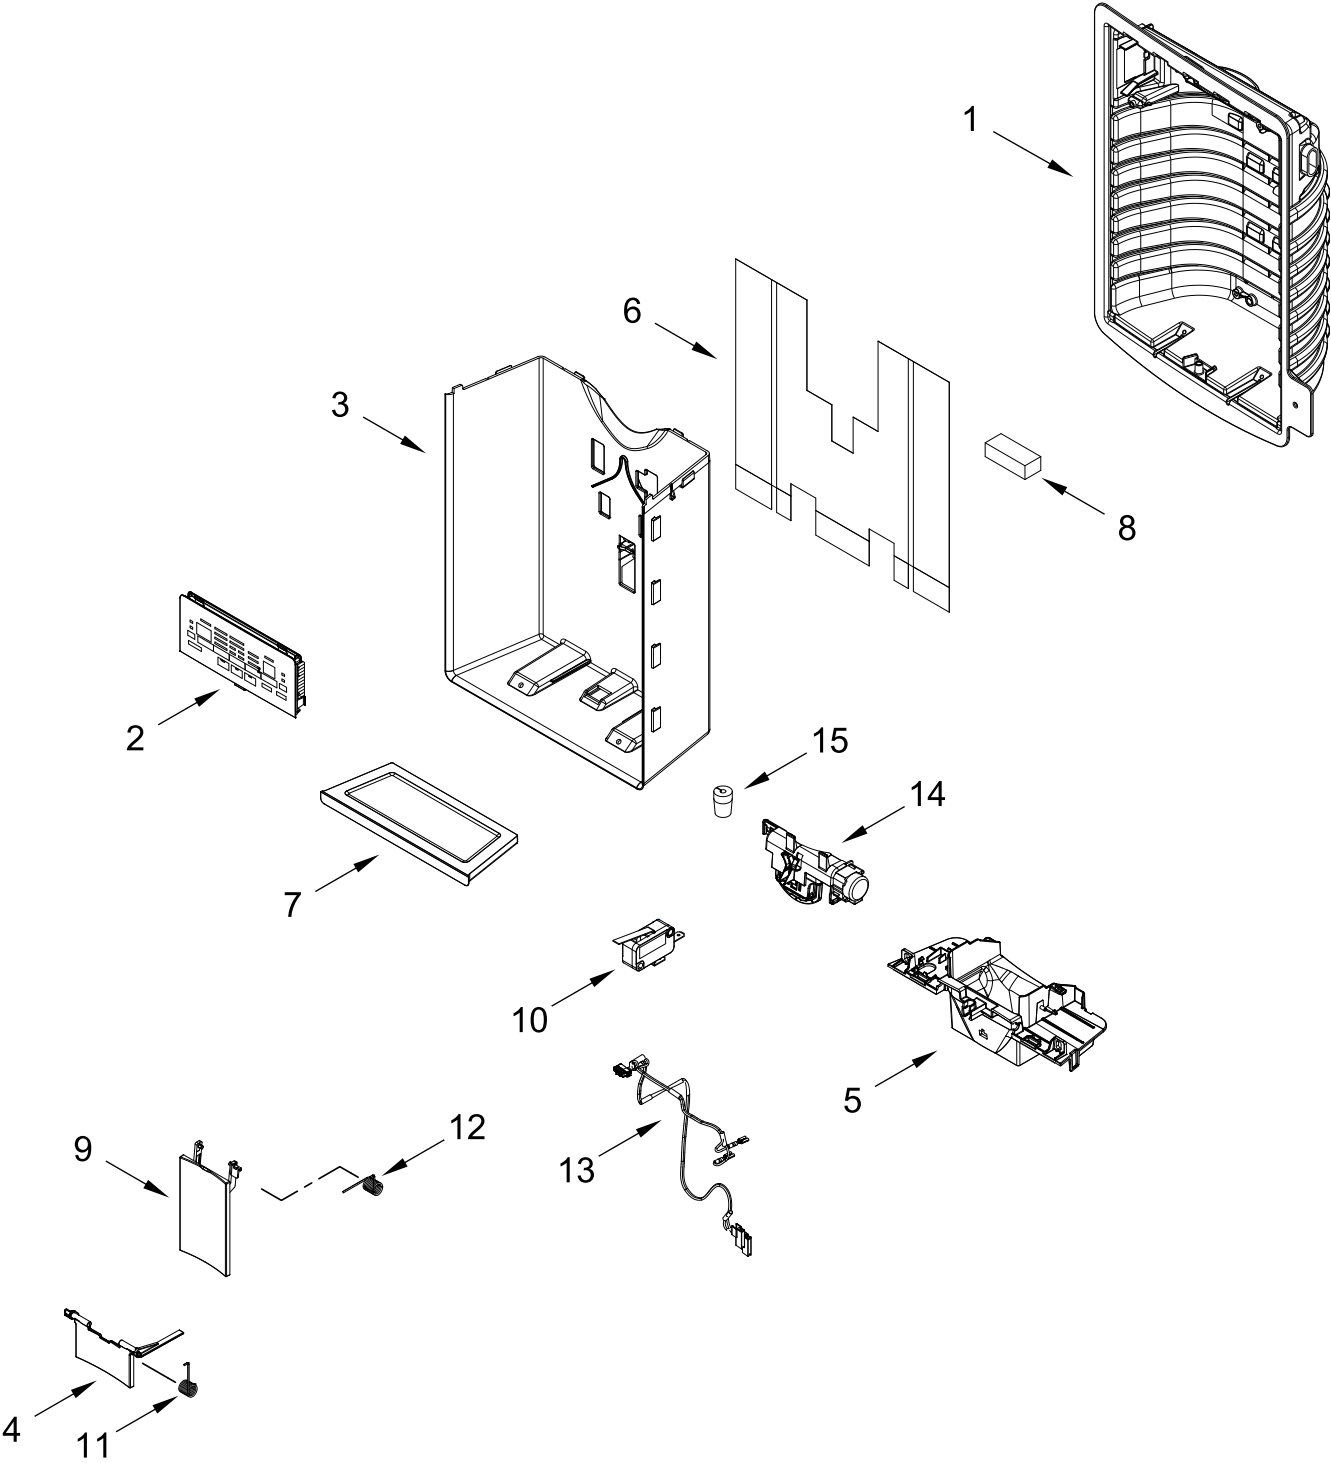

DISPENSER FRONT PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Housing, Dispenser (Not Serviced)	7	W11599250	Drip Tray (Stainless)	13	W11577046	Paddle Wire Assembly
2	W11559128	User Interface Control	8	W11745627	Foam Gasket	14	W11578036	Bracket Assembly
3	W11576742	False Wall (Silver)	9	W11595615	Ice Dispenser Pad	15	W11728424	Dispenser Tube Seal
4	W11595618	Dispenser Water Pad	10	W11577793	Microswitch, Limit			
5	W11579850	Dispenser Separator	11	W10672578	Torsion Spring			
6	W11592235	Dispenser Well Foil	12	W10663682	Torsion Spring (Dispenser Pad)			

ICEMAKER AND ICE CONTAINER PARTS

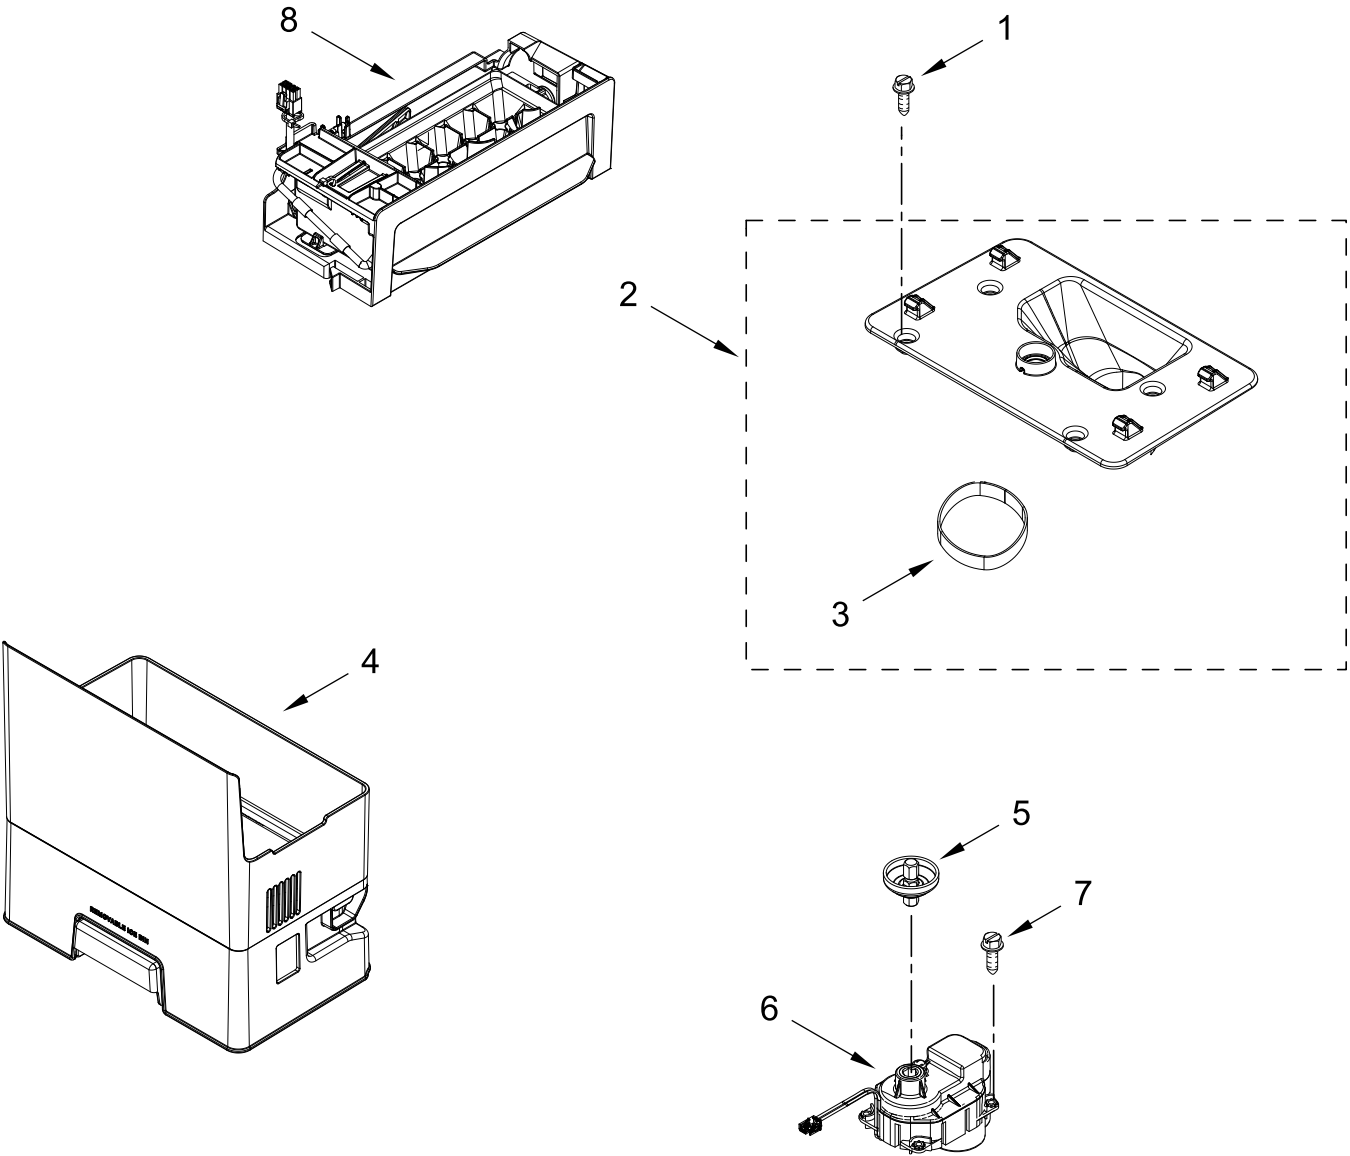

ICEMAKER AND ICE CONTAINER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10141645	Screw	3	W10291905	Chute Gasket	6	W11722714	Dispenser Motor
2	W11603209	Ice Chute Assembly	4	W11620276	Ice Bin Assembly	7	8281163	Screw (Stainless)
			5	W11363574	Motor Shaft	8	W11621160	Icemaker Assembly

OPTIONAL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10134625	Paint, Touch-up (Apollo Grey, 1/2 oz.)
	W10917540	Paint, Touch-up (Midnight Grey, 1/2 oz.)
		MISCELLANEOUS
	212643	Sealer, Gum (4 Ft)
	876370	Insulation (Set of 2, 3 x 24 x 48 in)
	505587	Sealer, Mastic (1 Qt)
	503695	Cork, Sealer
	542638	Grease, Silicone (1/2 oz)
	833938	Terminal Connector Kit
	8003RP	Water Inlet Kit
	W10300794	Handle Installation Kit
	W10826105	Produce Preserver