

## HOW TO REVERSE REFRIGERATOR DOOR


### Note:

When working directly on door, lay the interior side of the door down flat, nonabrasive surface. If using a floor or table, prepare working surface with rugs or towels to avoid damage to door finish.

### DOORS WITH TRIM AND PANELS

1. Perform all steps listed in **How to Remove the Door and Hinges**.
2. Perform removal steps listed in **How to Remove and Install Handles**.


3. Transfer cabinet plugs and screws to opposite side of cabinet.



4. Remove plugs with flat blade of screwdriver wrapped in masking tape.

5. Remove center mullion screws with 3/16" hex head driver.

6. Locate door stop (B) and door cap (A) on bottom edge of fresh food door. Remove with a Phillips screwdriver.

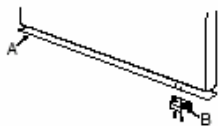


- Retain all items for later replacement.

### WARNING:



To avoid possible injury and damage to property, tape decorative panels (some models) securely into place before removing side door trim and handles.

7. Remove side door trim (A) and handle side trim (B) from door by tapping bottom edges upward with a soft rubber mallet.

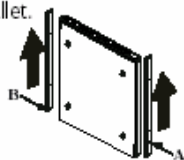


- Trim will slide up approximately 1/4" and release from door.

8. Rotate door panel 180° and tape in place.
9. Remove top door extension with 1/4" hex head driver. Flip door extension (A) so notched corner turns in toward interior of door (B).

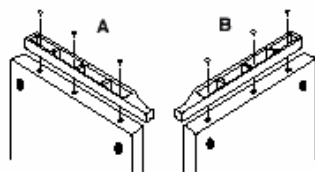

10. Retrieve alternate side door trim shipped with refrigerator. Install trim by aligning notches of trim with metal mounting tabs on side of door.

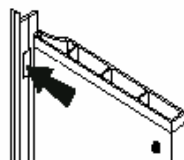

- Slide trim down until piece locks into place.

- Tap top of trim with rubber mallet to insure snug fit.

- Repeat same procedure to install handle side trim removed in step 7.

11. Replace bottom door cap (A) removed in step 6. Install door stop (B) on opposite side of door.



12. Remove tape from panels.

13. Proceed to next column to reinstall handle.

## HOW TO INSTALL AND REMOVE HANDLES

In some cases, handles may need to be removed to transport unit through tight spaces, reverse doors, or install panels.

Some models may come with handles shipped separate from the refrigerator door.

### INSTALLING HANDLES


1. Retrieve handle from shipping material (some models).

2. Locate handle mounting posts on face of door.



3. Position handle over mounting posts.

4. Tighten set screws (A) with a 3/32" Allen wrench.

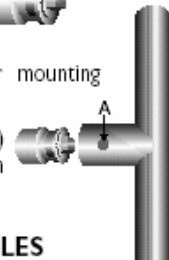

### REMOVING HANDLES

1. Locate set screws in handle and loosen set screws with a 3/32" Allen wrench.

2. Lift handle from handle mounting posts to remove.

### Note:


In cases of door reversal, panel installation, or panel removal, the mounting posts must be removed. Use a 1/4" hex head driver to remove the post from the door.



## INSTALLATION INSTRUCTIONS, CONT.

### HOW TO REPLACE THE DOOR AND HINGES


1. Install center hinge with Phillips screws.
2. Install stabilizing brackets with  $\frac{3}{8}$ " hex head screws.
3. Replace center hinge pin.
4. Place hinge side of refrigerator door on center hinge pin.



#### Note:

If fresh food door is being reversed, install alternate top hinge from literature assembly.

5. While holding refrigerator door upright, tighten down top hinge with  $\frac{3}{8}$ " hex head driver.
6. Install top door trim of fresh food door with a Phillips screwdriver.



### HOW TO INSTALL AND REMOVE PANELS (SOME MODELS)

#### WARNING:

To avoid personal injury or property damage, fresh food panel should not weigh more than 30 lbs (14 kgs) and freezer panel should not weigh more than 15 lbs (7 kgs).

#### TO INSTALL PANELS:


1. Perform the handle removal instructions in **How to Install and Remove the Handles**, including instructions to remove mounting posts from door face.
2. Remove top door trim.
3. Remove handle side door trim.
4. Slide panel in the handle side of door, by using grooves provided by bottom door cap and side door trim.
5. Replace mounting posts, handles, and trim.

#### TO REMOVE PANELS:

1. Perform the handle removal instructions in **How to Install and Remove the Handles**, including instructions to remove mounting posts from door face.
2. Remove top door trim.
3. Remove handle side door trim.
4. Slide panel out the handle side of door.

### WHAT IF I AM INSTALLING RAISED PANELS?

Please see recommended dimensions for paneling. All panel holes are  $\frac{1}{4}$ " diameter.

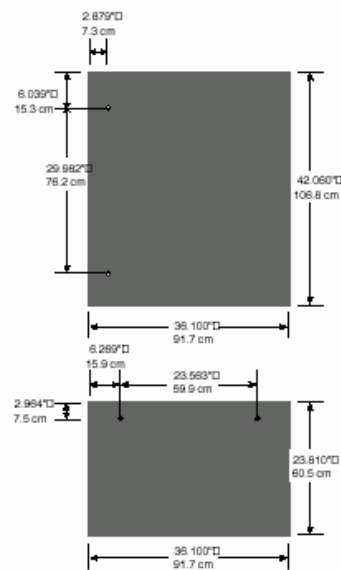

### HOW DO I MOUNT HANDLES ON RAISED PANELS?

The refrigerator is shipped with the handle mounting posts attached to the door with  $\frac{1}{4}$ " hex head screw that is approximately  $1\frac{1}{2}$ " long. This length is necessary to safely secure the mounting post to the door.

If handles are being mounted to a raised surface, the factory supplied hex head screws will have to be replaced with a longer version. To determine how long the replacement screw must be, add the thickness of the raised panel to the  $1\frac{1}{2}$ " measurement. See example below.

