


**KitchenAid®**

**ELECTRIC RANGE**

**MODELS:**

KFIS936SBE00 (Black Ore)


# COOKTOP AND CONTROL PANEL PARTS

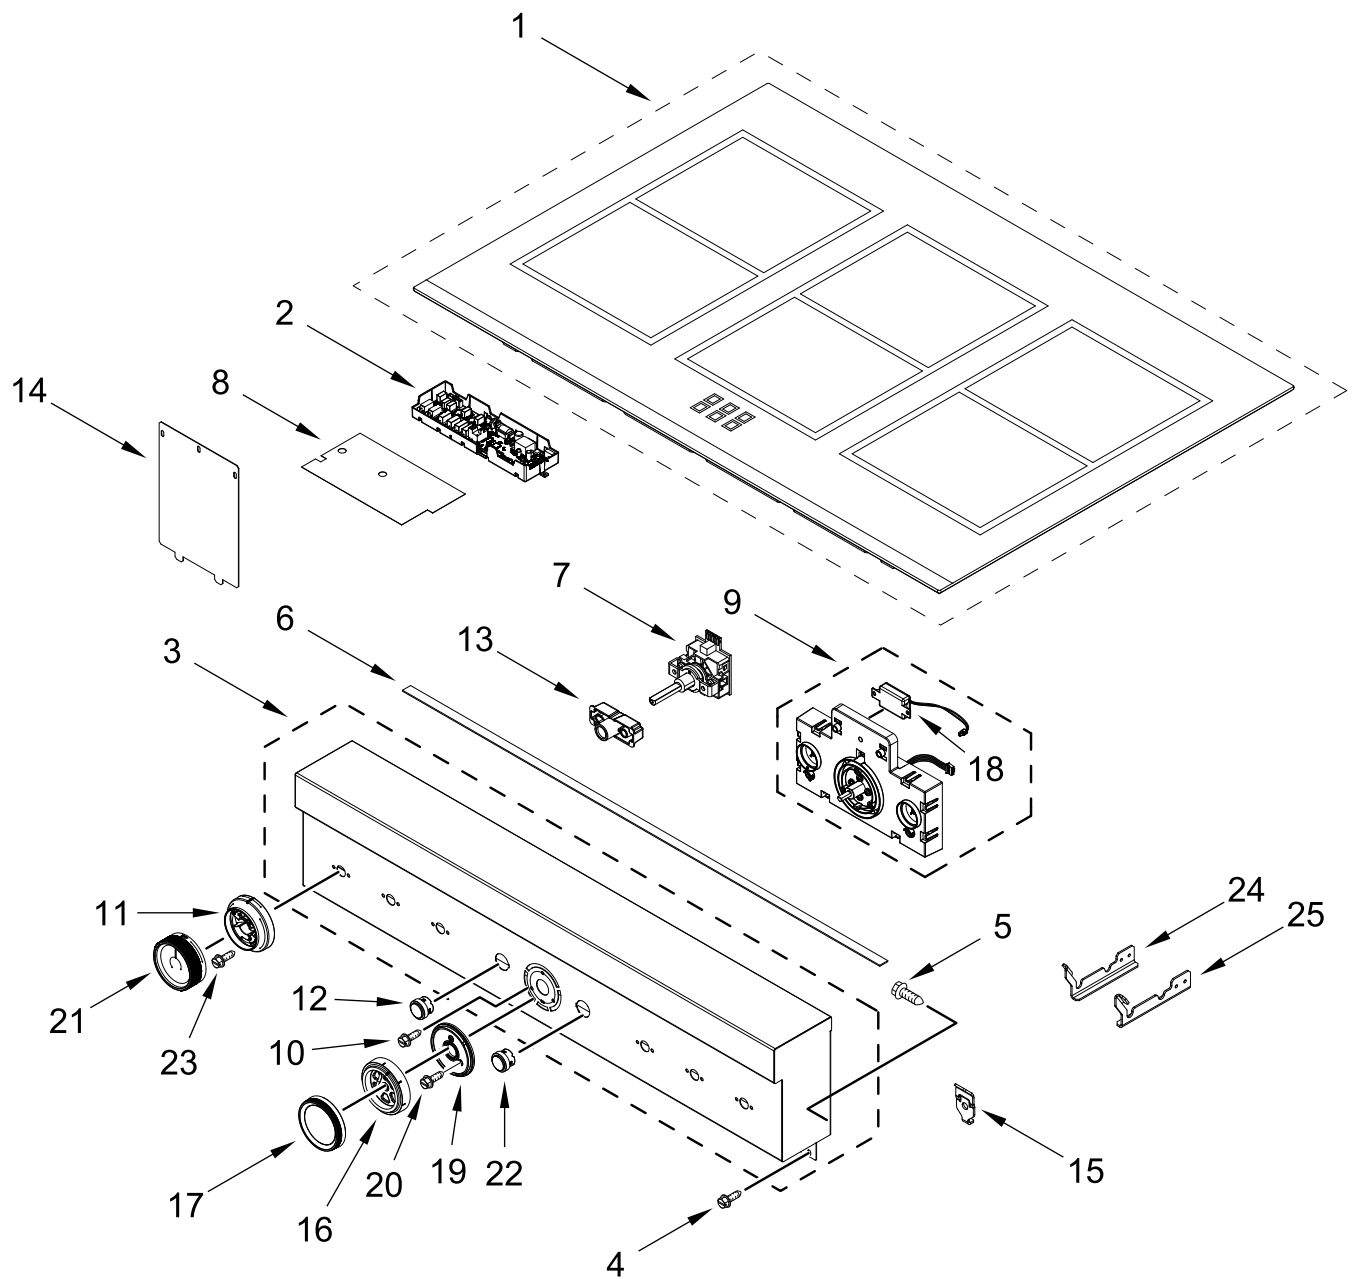

# COOKTOP AND CONTROL PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11750844	Glass Cooktop Assembly	14	W10115843	Cover, Ignition	25	W10130759	Bracket, Moving Console (Right)
2	W11767302	Manager, Powermax Appliance	15	W11036559	Spring Clip, Range			FOLLOWING PARTS NOT ILLUSTRATED
3	W11768548	Console Panel (Black Ore)	16	W11731059	Knob, Oven Mode (Black Ore)	W11745817		Harness, Main (36 IN)
4	3196537	Screw	17	W11740404	Knob, Oven Temperature (Black Ore)	W11698528		Harness, Console
5	3400099	Screw	18	W10568405	Speaker Assembly	W10780278		Harness, Door Lock
6	W11697601	Gasket, Console	19	W11738553	Bezel Assembly, Oven (Black Ore)	W11766035		Harness, Communication
7	W11704441	Switch, Infinite	20	W11755190	Screw	W11705029		Harness, User Interface Display
8	W11281269	Barrier, Appliance Manager	21	W11731289	Knob, Induction (Black Ore)	313438		Clip, Harness
9	W11777685	User Interface	22	W11769831	Button Assembly, Oven Start (Black Ore)	W11733662		Line Filter
10	W10162096	Screw	23	W11736176	Screw	W11212216		Cord, Power
11	W11748800	Bezel, Induction (Black Ore)	24	W10130760	Bracket, Moving Console (Left)	W10253333		Bracket, Anti-Tip
12	W11769833	Button Assembly, Oven Light (Black Ore)				7101P485-60		Screw, Anti-Tip Kit
13	W11697214	Sleeve, Bezel						


# INDUCTION MODULE PARTS

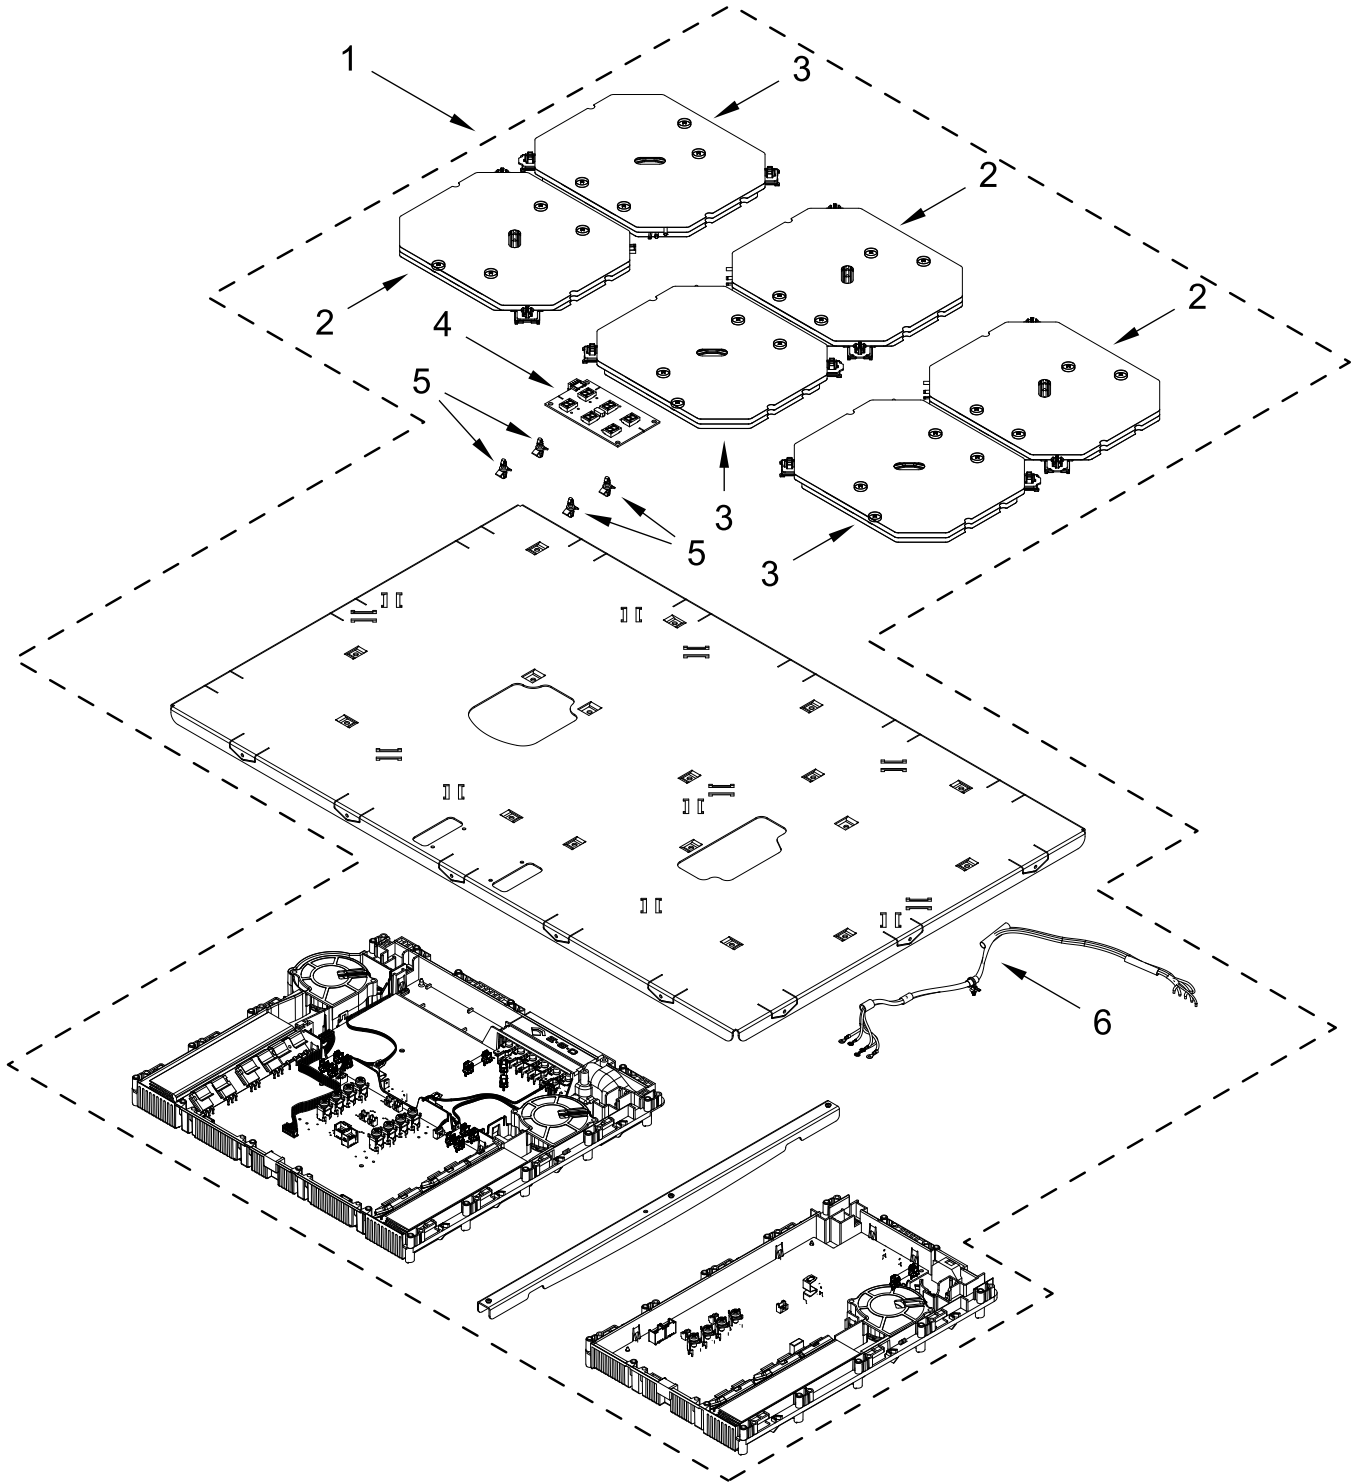

# INDUCTION MODULE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11694138	URSO Module Assembly	3	W11710574	Element, Induction (Variant 1)	5	W11748007	Locking Pin, User Interface
2	W11710573	Element, Induction (Variant 2)	4	W11717528	User Interface Service Kit	6	W11704826	Harness, Induction Module to Main Harness


# CHASSIS PARTS

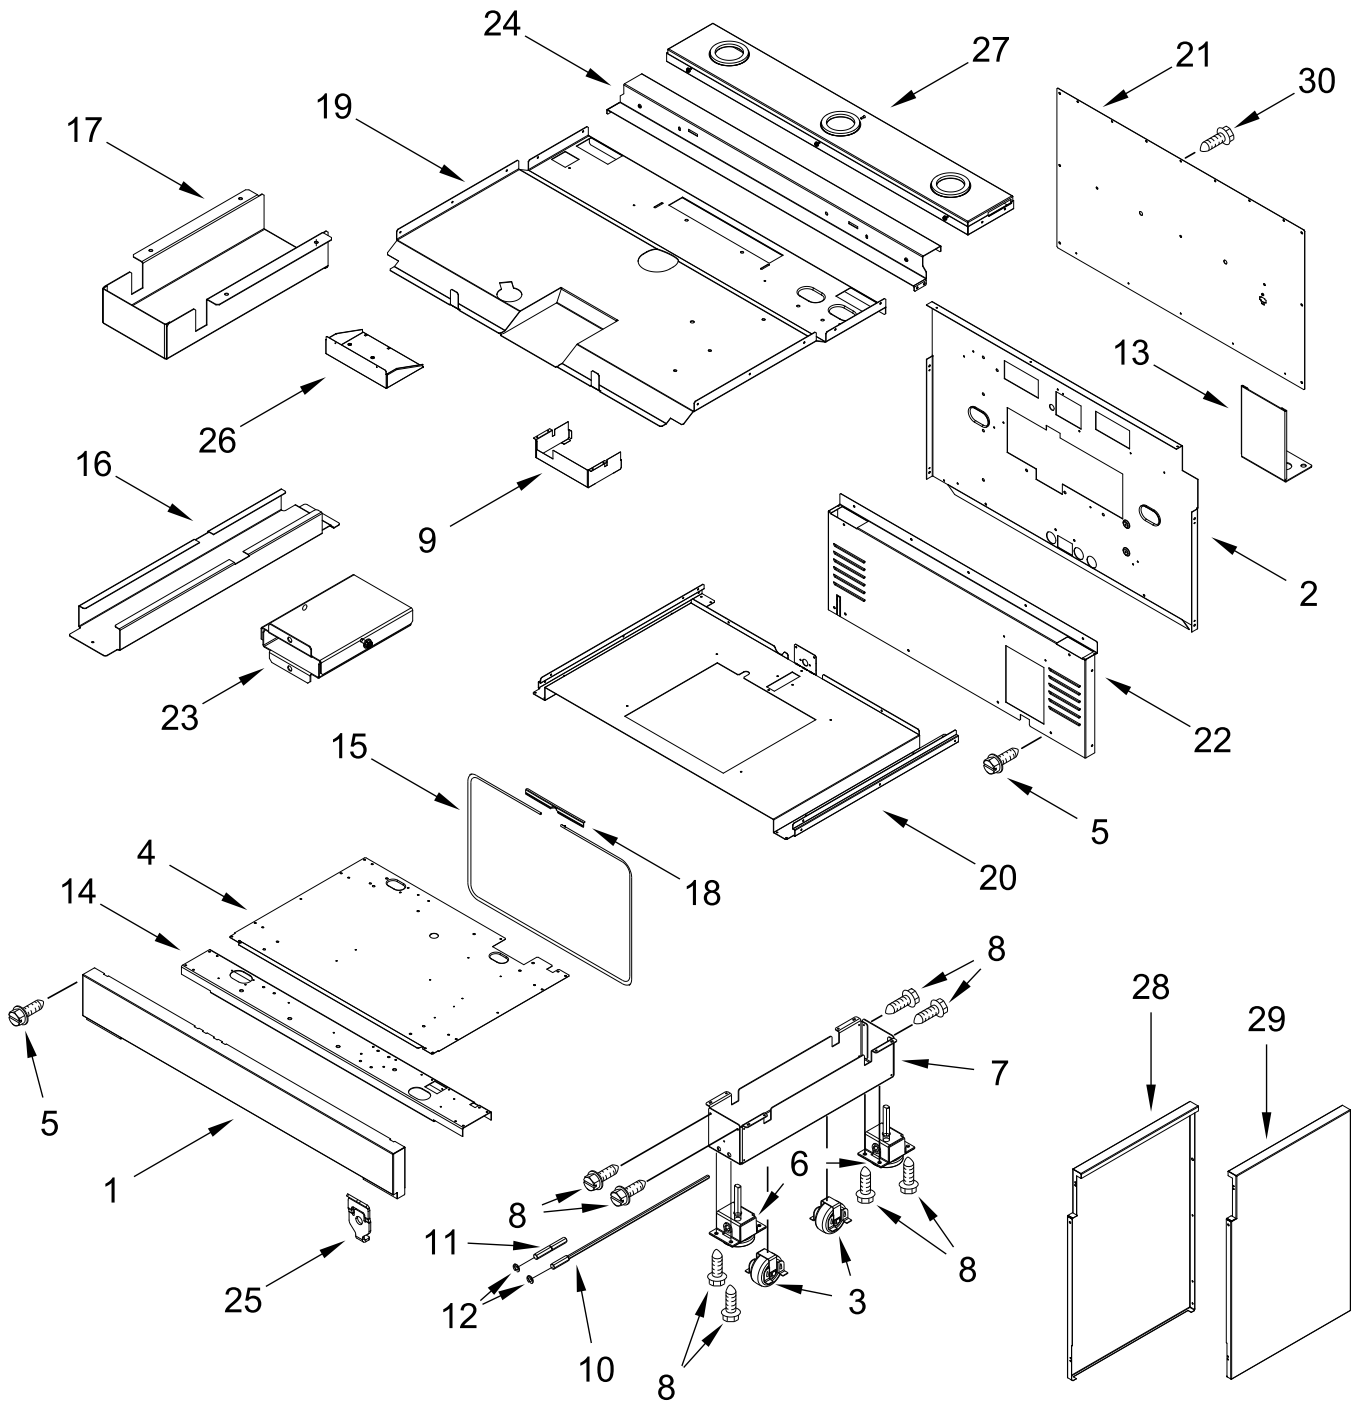

# CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11726299	Kickplate (Black Ore)	12	489504	E-Ring	22	W11034133	Panel, Back Bottom
2	W11758515	Back, Chassis	13	W11758326	Bracket, Rear Chassis	23	W11695808	Duct, Extension
3	W10138054	Roller Assembly	14	W11087493	Support, Channel	24	W11695005	Bracket, Front
4	W11095572	Duct, Bottom (36 in)	15	W11115330	Gasket, Oven (36 in)	25	W11036559	Spring Clip, Range
5	7101P426-60	Screw	16	W11695987	Duct-Chassis, Rear	26	W11106341	Drawer, Appliance Manager
6	9760860	Leveler	17	W11084360	Channel, Wire	27	W11694890	Duct, Top
7	W10908710	Base, Leveling Leg	18	W11362015	Retainer, Gasket (9 In)	28	W11707979	Panel, Cabinet Side (Left)
8	4449743	Screw		W10157511	Retainer, Gasket (12 In)	29	W11707981	Panel, Cabinet Side (Right)
9	W11369237	Cabinet, Appliance Manager	19	W11324985	Top, Chassis	30	7101P338-60	Screw
10	W10115869	Shaft, Long	20	W11040801	Chassis, Bottom			
11	W10115793	Shaft, Short	21	W11683557	Panel, Top Back			


# OVEN PARTS

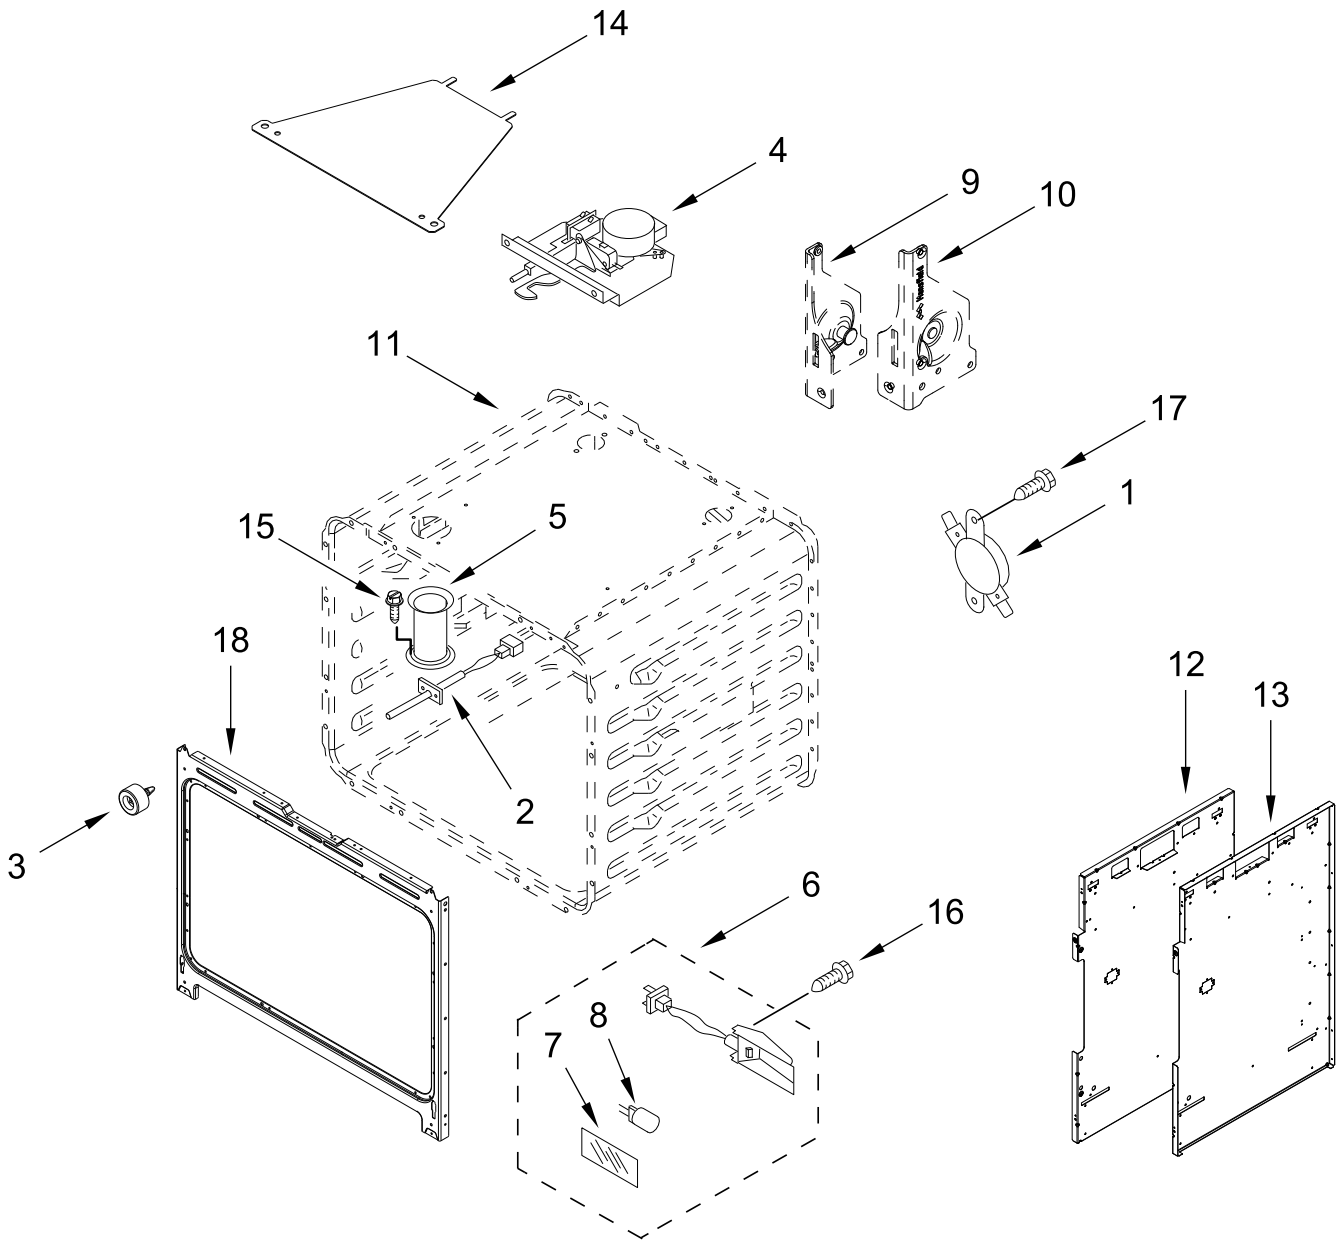

# OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4449751	Thermostat (TOD)	10		Receiver, Hinge (Not Serviced)	17	7101P426-60	Screw
2	W10622170	Probe, Sensor				18	W11192749	Frame, Front
3	W10105790	Bumper (Includes Screw)	11		Liner, Oven (Not Serviced)			FOLLOWING PARTS NOT ILLUSTRATED
4	W10830016	Latch, Motorized	12	W11683297	Retainer, Left Side Chassis		W10282811	Insulation, Wrap
5	W11290663	Tube, Vent					W10282813	Insulation, Back, 36 In
6	W11223932	Oven Light Assembly	13	W11683296	Retainer, Right Side Chassis		3400968	Nut
7	W10169756	Lens, Light						
8	W10169757	Bulb, Light	14	W10160858	Cover, Latch			
9		Receiver, Hinge (Not Serviced)	15	3196176	Screw			
			16	4449748	Screw			


# VENTING PARTS

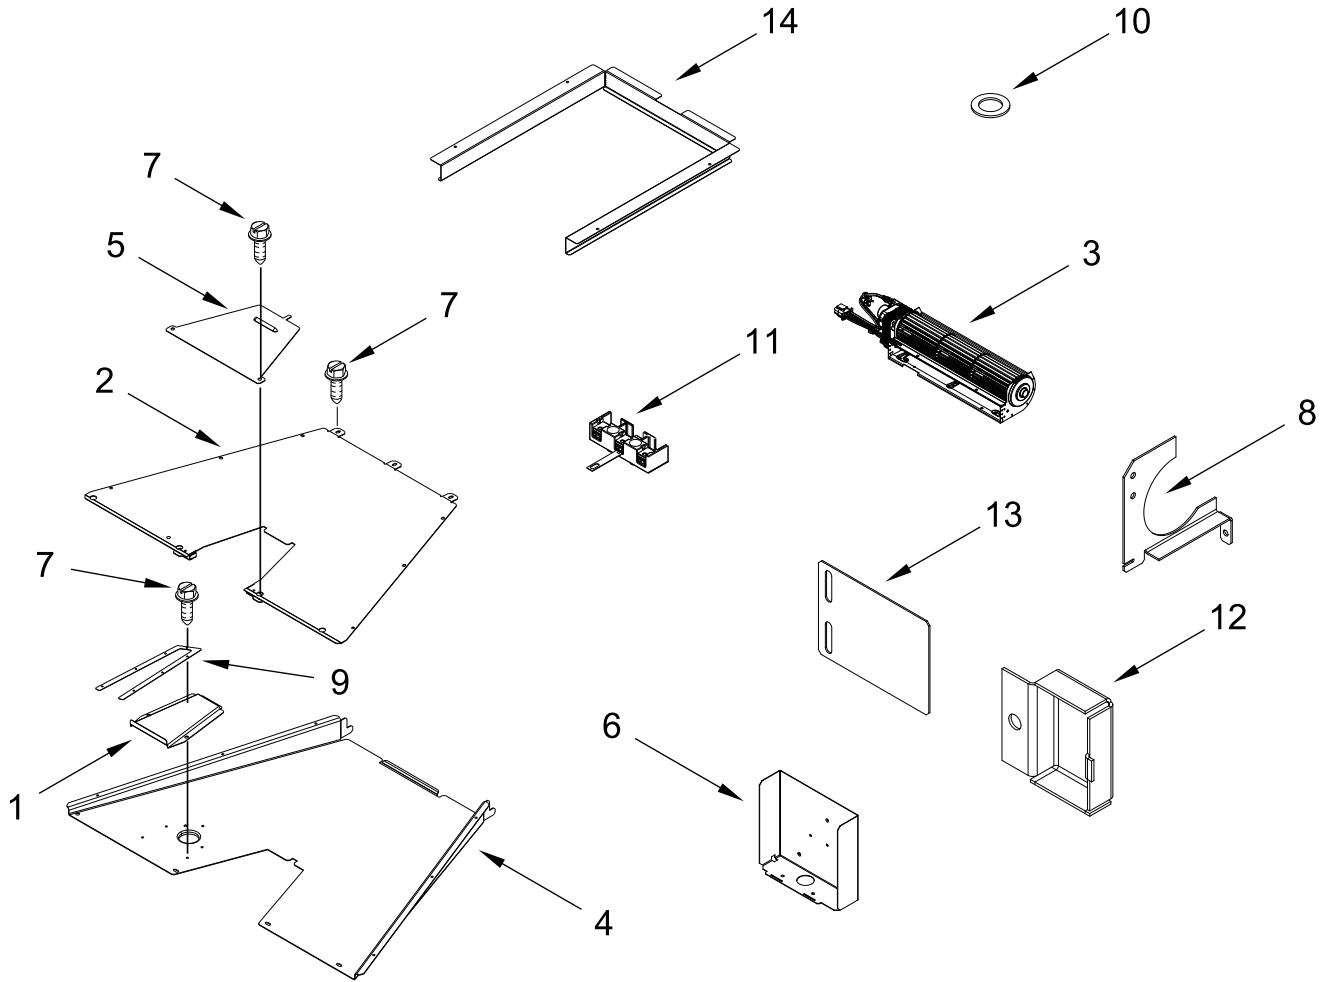

# VENTING PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10818234	Slope, Exhaust Vent (30 In)	5	W11109518	Plate, Cooling Latch	10	W10270396	Seal, Chimney
2	W11105223	Vent, Cooling Top (30 In)	6	W11284049	Box, Terminal	11	9761958	Block, Terminal
3	W11200129	Blower	7	7101P426-60	Screw	12	8285593	Cover, Connector
4	W11105222	Vent, Cooling Bottom (30 In)	8	W11047754	Bracket, Blower Mount	13	W11738747	Cover, Channel
			9	W10270397	Seal, Vent Slope (30 In)	14	W10145363	Duct, Primary Air (30 in)


# OVEN DOOR PARTS

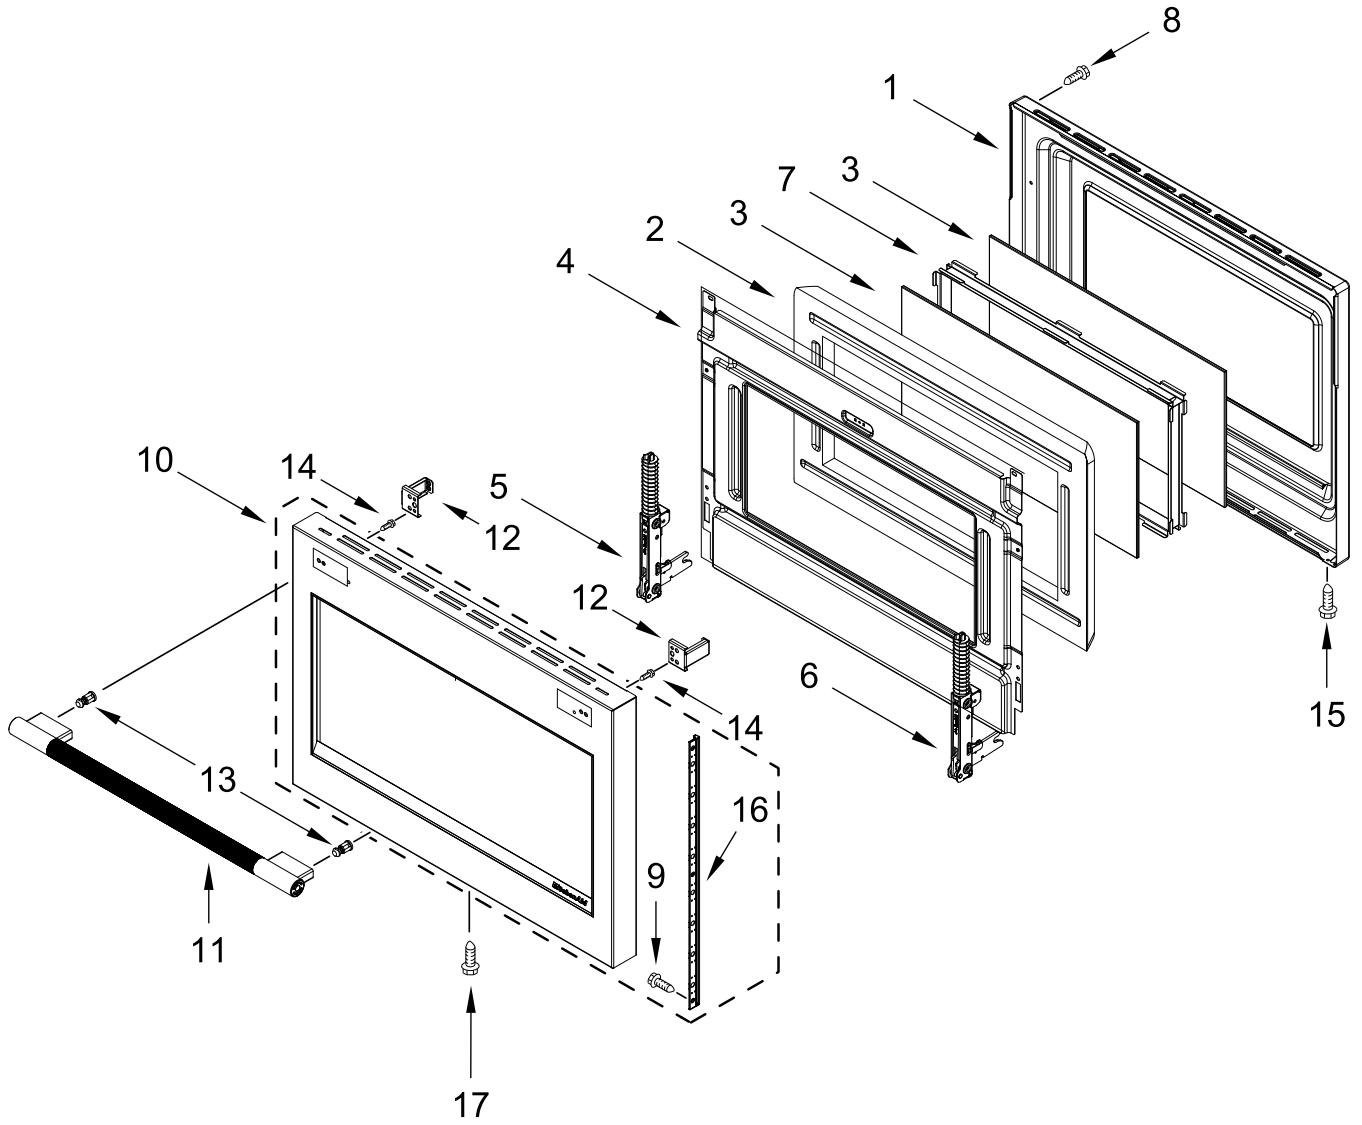

# OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036772	Liner, Door	7	W11194814	Frame, Glass	12	W11197830	Bracket, Handle
2	W10884823	Insulation, Door	8	W10898280	Screw	13	W11687274	Stud
3	W11036791	Glass, Inner	9	W10162096	Screw	14	3196184	Screw
4	W11194820	Retainer, Glass	10	W11753569	Outer Door Assembly (Black Ore)	15	W10607120	Screw
5	W11807687	Hinge, Door (Dual)	11	W11732562	Handle Assembly (Black Ore)	16	W11714784	Trim, Door Side
6	W11807689	Hinge, Door (Dampened)				17	7101P426-60	Screw

# INTERNAL OVEN PARTS

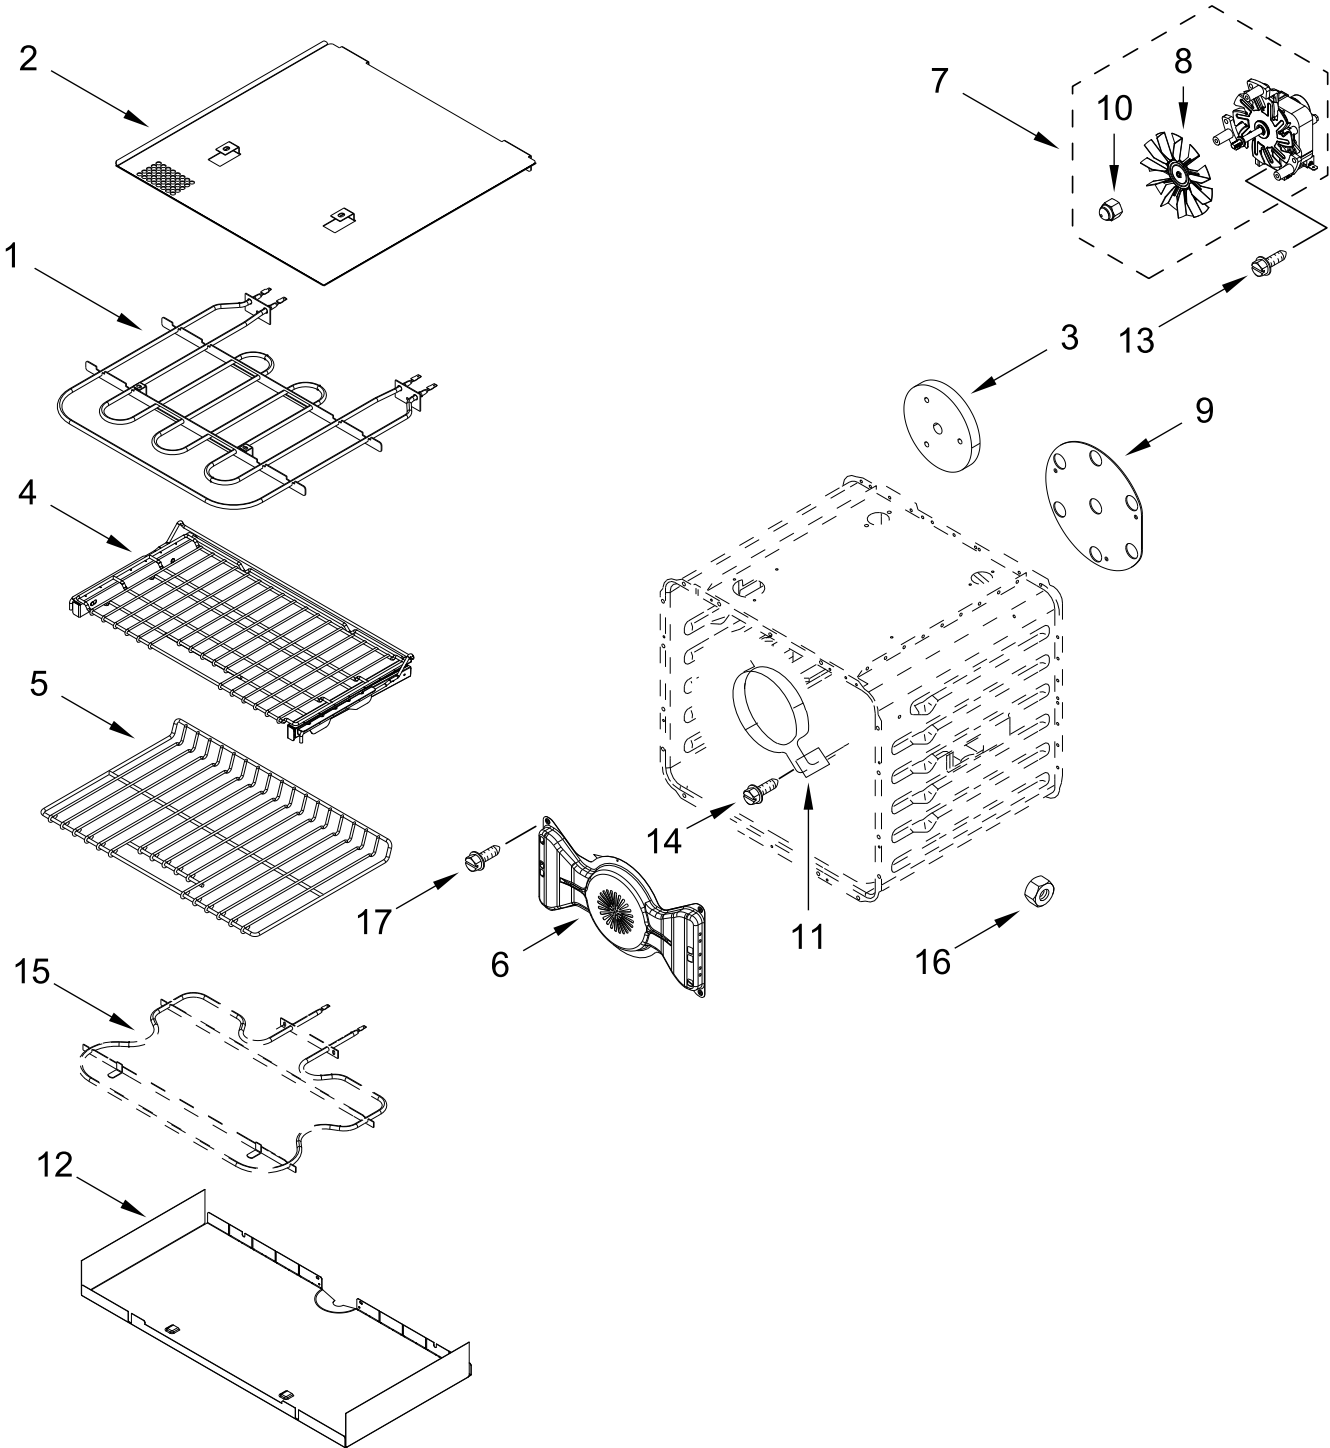

# INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10115994	Element, Broil	8	W10631503	Blade, Fan	15		Element, Hidden Bake (Not Serviced)
2	W10160856	Shield, Element Broil	9	W10261523	Plate, Fan			
3	W10282821	Insulation, Convection Cover	10	W10631504	Nut, Acorn (Left Hand Thread)	16	9755546	Nut, Hidden
4	W11496903	Rack, Sliding Oven	11	9762242	Element, Convection Steam	17	W10739592	Screw
5	W10822069	Rack, Oven	12	W11106922	Tray, Hidden Bake			
6	W11212180	Baffle, Convection	13	W10720084	Screw			
7	W10722667	Fan, Convection	14	4449154	Screw			

# OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
W10123240		Rack, Broiler Pan and Roasting
W11774739		Handle and Knob Accessory Kit (Black Ore)
W11774741		Handle and Knob Accessory Kit (Bronze)
W11774742		Handle and Knob Accessory Kit (Brass)
W11766885		Paint, Touch-up (Black Ore, 1/2 oz)