

PRODUCT MODEL NUMBERS

JS42NXFXD

JS48NXFXD

Electrical: A 115 Volt, 60 Hz., AC only 15- or 20-amp fused, grounded electrical supply is required. It is recommended that a separate circuit serving only your refrigerator be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.

A grounded 3 prong electrical outlet should be placed within 4" (10.2 cm) of the right side cabinets or end panel.

Water Supply: A cold water supply with water pressure between 30 and 120 psi (207 and 827 kPa) is required to operate the water dispenser and ice maker. If you have questions about your water pressure, call a licensed, qualified plumber.

If a reverse osmosis water filtration system is connected to your cold water supply, the water pressure to the reverse osmosis system needs to be a minimum of 40 to 60 psi (276 to 414 kPa).

The water shutoff should be located in the base cabinet on either side of the refrigerator or some other easily accessible area. (The right-hand side is recommended.) If the water shutoff valve is not in the cabinets, the plumbing for the water line can come through the floor.


Location: Do not install the refrigerator near an oven, radiator, or other heat source, or in a location where the temperature will fall below 55°F (13°C). Floor must support the refrigerator weight, more than 600 lbs (272 kg), door panels and contents of the refrigerator.

OPENING DIMENSIONS

A solid soffit or wall cabinet must be installed 84" (213.4 cm) above the floor. If the solid soffit is higher than 84" (213.4 cm) or one is not available, then the refrigerator must be braced.

For a fully integrated installation, a minimum of 6" (15.24 cm) of open space above the refrigerator is required. Anti-tip boards are required.

If the anti-tip boards are needed, they must be attached to the rear wall studs so that there is 84" (213.4 cm) from the bottom of the anti-tip board to the floor. See "Install Anti-Tip Boards" in the Installation Guide for more information.

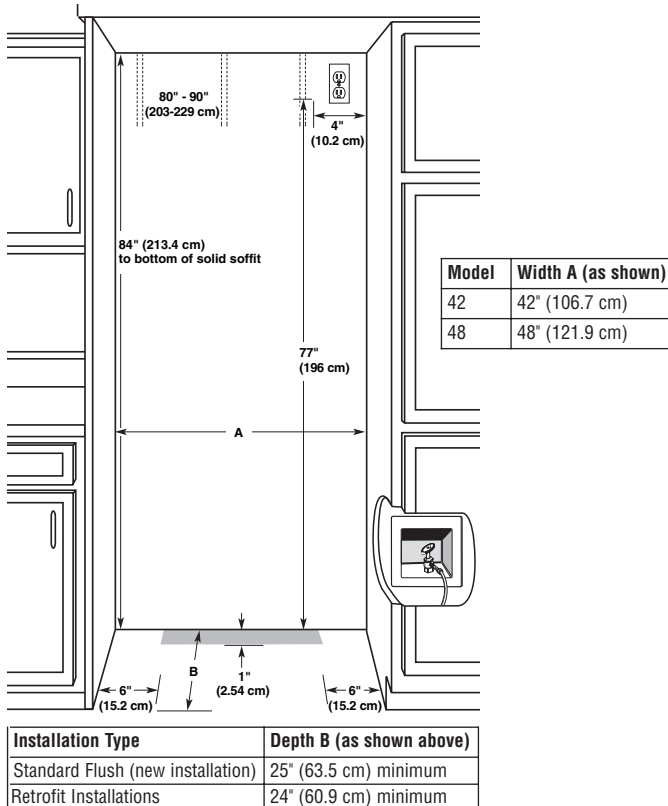


IMPORTANT:

- Flooring under refrigerator must be at same level as the room. Face of cabinetry must be plumb.
- The width of the opening (Width A) must be as specified for your model, for at least 2" (5.08 cm) back from the face of the cabinet. If your opening does not meet this requirement, you will need to make modifications.

PRODUCT DIMENSIONS


- The power cord is 84" (213 cm) long.
- The water supply line is located at the front of the refrigerator.
- Width dimensions were measured from hinge to hinge.
- The depth from the front face of the doors to the back of the refrigerator cabinet is 24" (60.96 cm) without panels.
- The required thickness for all custom overlay panels is ¾" (1.91 cm).

TOP VIEW

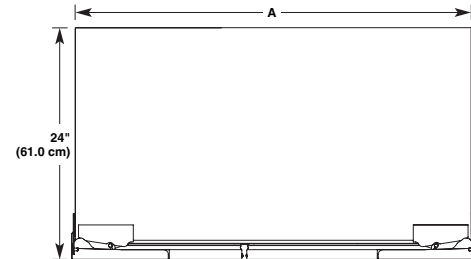

Model	Width A
42	41¾" (106 cm)
48	47¾" (121.3 cm)

FRONT VIEW

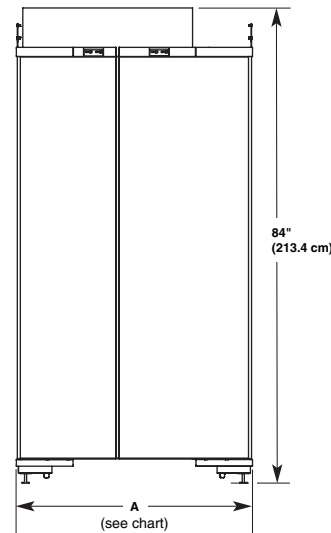


Model	Width A (hinge edge to hinge edge)
42	41¾" (106 cm)
48	47¾" (121.3 cm)

DOOR SWING DIMENSIONS

The location must permit both doors to open to a minimum of 90°. Allow 4½" (11.4 cm) minimum space between the side of the refrigerator and a corner wall.

NOTE: More clearance may be required if you are using overlay panels, custom handles, or extended handles.

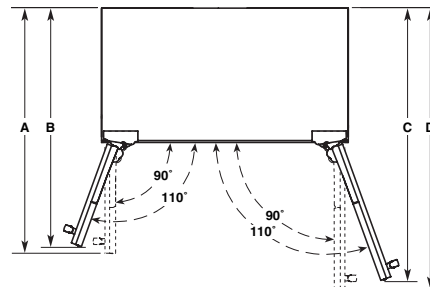

Model	A	B	C	D
42	40¾" (103.5 cm)	39¾" (101 cm)	45¾" (115.3 cm)	46¾" (118.8 cm)
48	43¾" (109.9 cm)	42" (106.7 cm)	48¾" (123.5 cm)	50¾" (127.6 cm)